

封底空白页

QUICK START GUIDE

Read this manual carefully and save it for future reference.

Lisez attentivement ce manuel et conservez-le pour référence future.

Lea este manual con atención y guárdelo para futuras consultas.



IN THE BOX


Ground Wire
Screw × 1 (Bag A)


Floodlight Screw
× 1 (Bag B)


Bracket Screws #8
× 2 (Bag C)


Bracket Screws #10
× 2 (Bag D)

 
 

Bracket Screws #6
× 2 (Bag E)


Rubber Stopper × 1


Wire Nuts × 2


Mounting Bracket × 1


Hook × 1

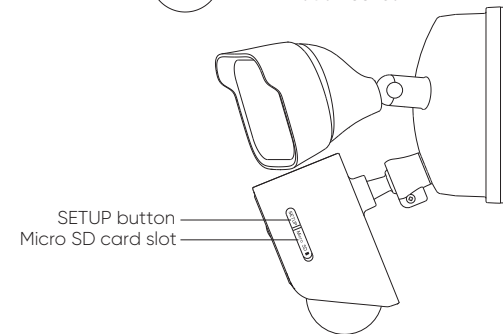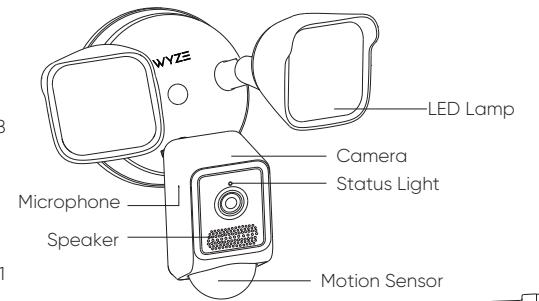

Assembled floodlight v2 Camera x 1

SETUP

- 1 Download the Wyze app and sign in or create an account.
- 2 Select **Add Device > Cameras > Wyze Cam Floodlight v2** and follow the instructions in the app.



- 3 Check your local laws for installation. If you are outside of North America, installation and wiring must be performed by a licensed electrician. Make sure you follow all code standards when doing wire installation.

 
4 WARNING: Risk of electrical shock!

1. Make sure you have a junction box for your floodlight installation. If you need one installed, please contact a licensed electrician.
2. Verify that the power supply is a 120 V AC 60 Hz power source.
3. Disconnect power using the fuse or circuit breaker before continuing.


Note: Do not use a dimmer switch or timer for this product.



You can mount the floodlight vertically on the wall or overhang under eaves.

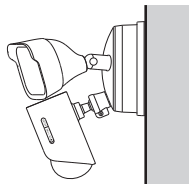

WALL MOUNT
(refer to pages 2-5)

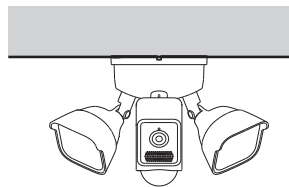 


EAVE MOUNT
(refer to pages 5-7)


WALL MOUNT

Recommended Installation Location

 
Tip: When Wyze Cam Floodlight v2 is mounted 10 feet above the ground, it will detect motion up to 30 feet away.

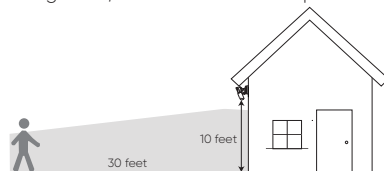

 
- 1 Take your Wyze Cam Floodlight v2 out of the box, and rotate the camera 180° so that the Wyze logo is at the top and the motion sensor is pointed down.

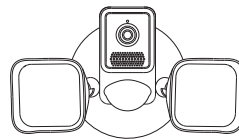


1 Starting position

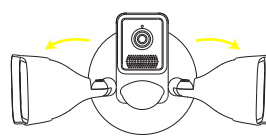 

2 Tilt lights down

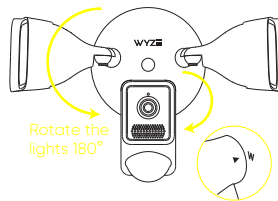 


3 Rotate the lights and camera 180°

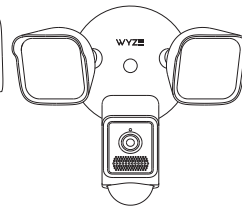 

4 Tilt lights up

While positioning the camera for wall installation, find the "W" and arrows on the joint arm behind the camera. Make sure the arrows are in alignment. **Do not** rotate the camera completely around as this may twist or break the connection line.

 
- 2 Remove your existing floodlight and any brackets that may be attached if you are replacing a previous product.
- 3 Place the mounting bracket on the junction box. Align the 2 screw holes and tighten the bracket using matching bracket screws (Bag C).

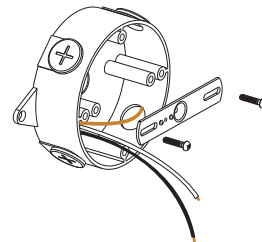


Junction Box

Note: If you don't have a junction box, please find a licensed electrician to install one and follow local building codes.

 - 4 Use the ground wire screw (Bag A) to attach the ground wire to the middle of the mounting bracket.


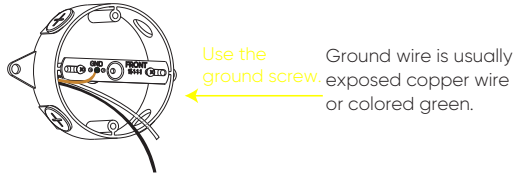


 - 5 Hang the floodlight on the mounting bracket using the provided hook as shown in the picture.

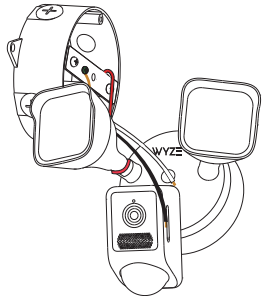


- 6 Connect the hot wire (usually black) from your floodlight to the hot wire from your junction box. Then connect the 2 neutral wires (usually white). Cap the wires using wire nuts and twist them 5-10 times. Gently tug on the wire nut to make sure it's securely attached.

  IMPORTANT: If you are not sure which wire is which, please consult an electrician for safety.

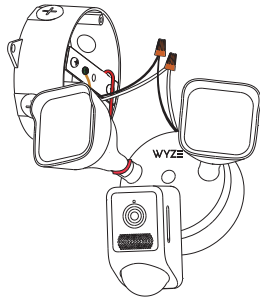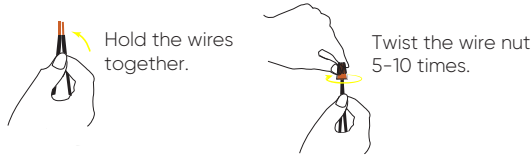


- 7 Push the wires back into the junction box. **Make sure the wires are not pinched between Wyze Cam Floodlight v2 and the mounting bracket.**

 
- 8 Screw your Wyze Cam Floodlight to the mounting bracket using the floodlight screw (Bag B).

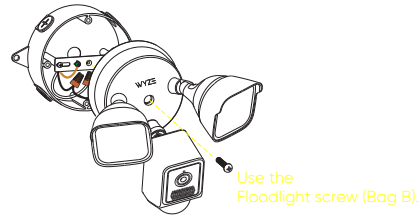

 - 9 Place the rubber stopper over the floodlight screw to protect the screw.

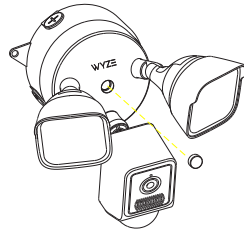

 
- 10 Now adjust the angle of the motion sensor so it is parallel to the ground.

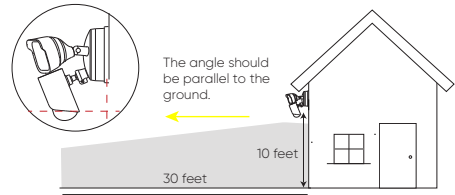


EAVE MOUNT

Recommended Installation Location

 
Tip: When Wyze Cam Floodlight v2 is mounted 10 feet above the ground, it will detect motion up to 30 feet away.

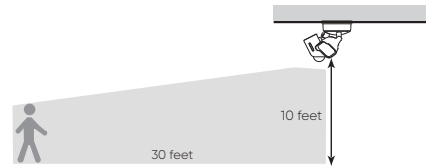

 - 1** Take your Wyze Cam Floodlight v2 out of the box. Raise the LED lamps to the highest position first and then rotate it 180° to lower the LED lamp.

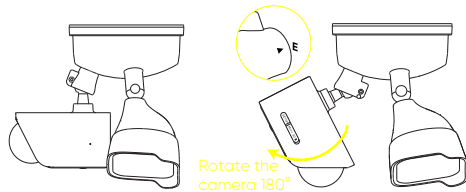


1 Starting position

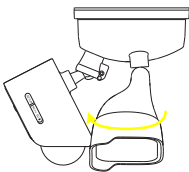 

3 Rotate lights up

 
2 Rotate the camera 180°

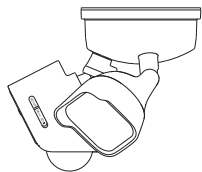

4 Tilt lights up


While positioning the camera for an eave installation, find the 'E' and arrows on the joint arm behind the camera. Make sure the arrows are in alignment. **Do not** rotate the camera completely around as this may twist or break the connection line.

 - 2** Tilt the camera slightly up so the camera is looking out and the motion sensor is facing out and downward when mounted overhang.

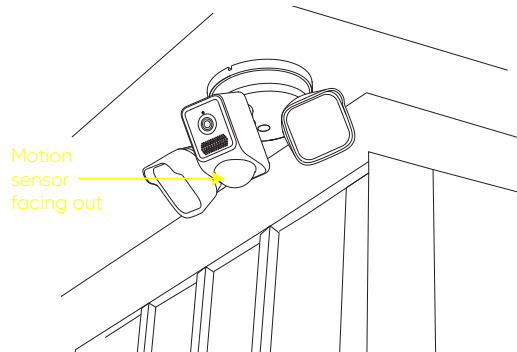

- 3** Remove your existing floodlight and any brackets that may be attached if you are replacing an older floodlight.
- 4** Place the mounting bracket on the junction box. Align the 2 screw holes and tighten the bracket using matching bracket screws (Bag C).

 
Note: If you don't have a junction box, please find a licensed electrician to install one and follow local building codes.

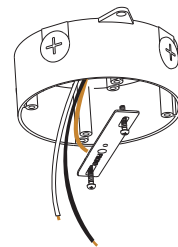


Caution: Do not force the wires on the mounting bracket

Junction Box

 - 5** Use the ground wire screw to attach the ground wire to the middle of the mounting bracket (Bag A).

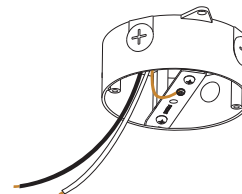


 - 6** Hang the floodlight on the mounting bracket using the provided hook as shown in the picture.

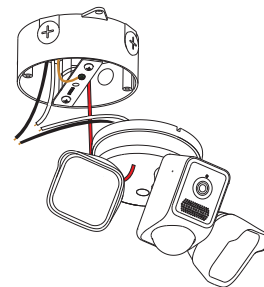


- 7** Connect the hot wire (usually black) from your floodlight to the hot wire from your junction box. Then connect the 2 neutral wires (usually white). Cap the wires using wire nuts and twist them 5-10 times. Gently tug on the wire nut to make sure it's securely attached.

 IMPORTANT: If you are not sure which wire is which, please consult an electrician for safety.

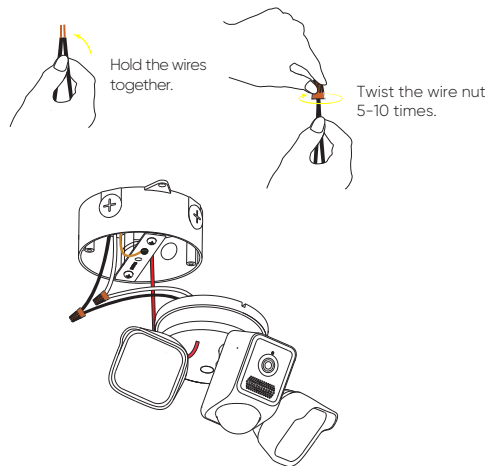

Note: The screw and rubber plug installation steps are the same as 8 and 9 for wall installation.

 The next steps are the same for both eave and wall mounting.

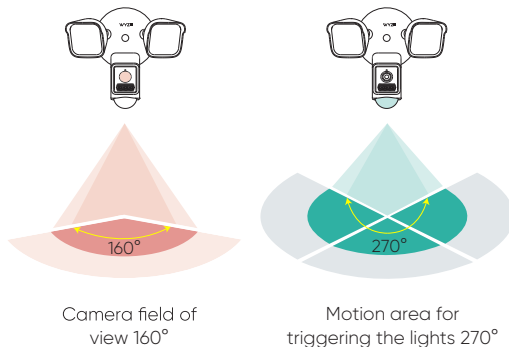

Note: We recommend leaving the ladder in place until after you're done pairing the camera(s) and adjusting the floodlight position.

- 8** Rotate and tilt the floodlight so it points where you want it.
- 9** Restore power to the junction box using the circuit breaker or fuse box. The camera status light should flash red.




- 10** Follow the instructions in the Wyze app to finish setup.

Note: We recommend leaving the ladder in place until after you're done pairing the camera(s) and adjusting the floodlight position.

 
Rotate and tilt the floodlight so it points where you want it.

Restore power to the junction box using the circuit breaker or fuse box. The floodlight will turn on for 15 seconds and the camera status light should flash red.

WYZE CAM FLOODLIGHT STATUS LIGHT GUIDE

-  **Solid red light**
The device is powered on and initializing
-  **Flashing red light**
The device is ready to connect
-  **Flashing red & blue lights**
Connection is in progress

- 11** If you need to reinstall the device after removing it in Apps or reset the device, please press the SETUP button on the side of the camera for 3 seconds or until a voice prompt happens.

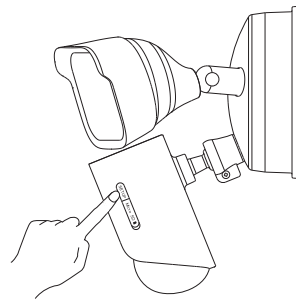

-  **Flashing blue light**
The device is connected and finishing setup
-  **Solid blue light**
The device is working properly

WARRANTY

Your Wyze product is covered by a one-year limited warranty. You can view the limited warranty terms at <https://wyze.com/return-warranty-policy> or request a copy by contacting Wyze at +1(206)339-9646.

SPECIFICATIONS

Model: WYZECFL2 WYZECFL2BL

Connectivity: 2.4GHz Wi-Fi

Weather Resistance: IP65

Input: Hardwired 120V~50/60Hz 0.61A



Apple logo and App Store are trademarks of Apple Inc., registered in the U.S. and other countries and regions. Google Assistant, Google Home, Google Play, and the Google Play logo are trademarks of Google LLC.

Wyze and Wyze Cam Floodlight v2 are trademarks of Wyze Labs, Inc.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF RADIATION EXPOSURE STATEMENT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

SUPPLIER'S DECLARATION OF CONFORMITY

Brand Name: WZYE

Model Number: WYZECFL2

Suppliers Name: Wyze Labs, Inc.

Suppliers Address (USA): 5808 Lake Washington Blvd NE Ste 300 Kirkland WA 98033

Suppliers Phone Number or Internet Contact Information: 1-844-999-3226

ISED RSS WARNING

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

AVERTISSEMENT DE L'ISED CONCERNANT LES NORMES RSS

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RADIATION EXPOSURE STATEMENT

This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

DÉCLARATION D'EXPOSITION AUX RADIATIONS DE LA L'ISED

Pour se conformer aux exigences de conformité CNR 102 RF exposition, une distance de séparation d'au moins 20cm doit être maintenue entre l'antenne de cet appareil et toutes les personnes.

NEED HELP?

Contact our Support Team:

<https://wyze.com/support>

Join the Community:

<https://wyze.com/community>



Scan the QR code
to learn more