

DC POWER CEILING FAN REMOTE CONTROL MANUAL

LEARNING PROCESS

NOTE: The Hand Held Remote Control System is equipped with a learning frequency function which has code combinations to prevent potential interference from other remote units.

Step: 1 Open the remote battery cover and install DC1.5V*2pcs battery.

Step: 2 Within 30 seconds of turning the Receivers DC power ON. press the transmitter **“ON/OFF and Timer” button together about 3 seconds**, once the receiver has detected the frequency, the receiver will make sound, **Bi Bi, twice**. This will indicate the receiver has learned the frequency that was previously selected on the transmitter.



Note: After the DC power is on, do not press any other button on the transmitter before setting learning. Doing so will cause the procedure to fail.

After completing the steps above, you should be able to operate the ceiling fan and light. If the fan is not responding to the transmitter, please turn the power off to the receiver. And repeat step 1 and 2.

Remove the battery if not used for long periods of time to prevent damage to the hand held remote.



FUNCTIONS OF TRANSMITTER

1.  : To turn the fan on or turn the fan off . The beginning of fan will be on lowest speed (speed 1), when turning the fan on.
2. ① Press this button to increasing fan speed and LED indicator would be on the position “1”
3. ② Press this button to decreasing fan speed and LED indicator would be on the position “2”
4. ③ Press this button to decreasing fan speed and LED indicator would be on the position “3”
5. ④ Press this button to decreasing fan speed and LED indicator would be on the position “4”
6. ⑤ Press this button to decreasing fan speed and LED indicator would be on the position “5”
7. ⑥ Press this button to decreasing fan speed and LED indicator would be on the position “6”
8.  : “Timer”, press the button for set fan timer change. The change model is 1hrs->2hrs->4hrs ->8hrs -> 1hrs ->2hrs->4hrs ->8hrs ->... Press this button one time to change the next timer hours and LED indicator would be on what you set.
9. SW1 : Switch to the “S” will be foreward running , if turn to the “W” ,the fan will be reversed.
10. When pressing remote button, the first LED indicator would be on. If you press remote button and LED indicator would not be on, you should change new DC1.5V*2pcs battery.
11. When pressing remote button, the receiver would make sound one time for indicating of getting signal from remote well.



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.