

HYUNDAI [TX-55C]

Tri Mode Digital CDMA/Amps Handheld Portable Telephone

In today's fast paced world, it has become a necessity to have access to real time information. Your communications tools must provide you with this access from anywhere at anytime. With that in mind, Hyundai developed the TX-55C, a tri mode handset with [web browsing and voice activated dialing] features.

Operating on the 800 MHz Amps/CDMA and 1900 MHz PCS frequencies, the TX-55C allows for seamless nationwide coverage as well as offering state-of-the-art, user-friendly features. Voice activated dialing and 2-way speakerphone are great for enhancing hands-free use of this phone. T9™ Text Input, vibrating alert and a 7-line LCD display make the TX-55C easier to use.

Several optional accessories are available for the TX-55C, including: [hands-free devices (installed, earphone microphone, cigarette lighter charger), charging devices (vehicle, travel, desktop, AC), data interface cables, belt clips, and of course user-changeable faceplates.

Your new TX-55C provides you with something only an Hyundai phone can: the proven reliability that has made us a leading wireless handset provider. Please take a few moments to read the following pages of the owner's manual. It will help you make the most efficient use of this valuable communications tool.

Preface

TABLE OF CONTENTS

CHAPTER 1 BEFORE USING YOUR PHONE	5
Package Contents	6
Handset Description	7
Function Keys	8
Display Indicators	9
Using the Battery	11
Installing the Battery	11
Removing the Battery	11
Charging the Battery	12
Power Connection	12
Charging the Battery Only	12
Battery Charging Time	13
Battery Talk and Standby Times	13
Battery Information	14
 CHAPTER 2 BASIC OPERATION	 15
Using the Phone	16
Turning the Phone On	16
Turning the Phone Off	16
Using the Menu	17
Menu Summary	18
Basic Functions	22
Making a Call	23
Pause Feature	23
Speaker Phone	24
Answering Calls	24
Caller ID	24
Call Waiting	25
Answering Machine Display	25
Adjusting the Volume	26
Lock	26
Vibrate	27
Manner Mode	27
Functions During a Call	28
Messaging	28
Mute	28
Scratchpad	29

TABLE OF CONTENTS

Send My Phone #	29
My Profile	29
Voice Privacy	30
Location	30
CHAPTER 3 MEMORY & SETTINGS	31
Storing Phone Numbers	32
Text Input Methods	33
Entering Characters	33
Alpha Mode	33
T9™ Predictive Text Mode [T9ABC]	34
Numeric Mode [123]	36
Symbol Mode [SYM]	36
Speed Dialing	37
One-Touch/Two-Touch Dialing	37
Phone Book	38
By Name	38
By Number	38
By Group	39
Editing Your Phone Book	39
Edit Group	40
Edit SMS Group	42
Speed Dial	44
My Profile	45
Recent Calls	46
Dialed	46
Received	47
Missed	48
Call Timers	49
Messaging	50
Voice	50
Send New	51
Inbox	54
Outbox	56
Filed	58
My Object	59

TABLE OF CONTENTS

Erase All	60
Settings	61
Get It Now	64
Mobile Web	67
Settings	68
Sounds	68
Display	74
Security	79
System	86
Location	88
Others	89
UP Proxy IP	93
Tools	94
Schedule	94
Calculator	96
World Clock	97
Stopwatch	98
Data Svc.	99
Connection	99
Data Speed	100
TTY Mode	101
Voice Svc.	102
Voice Memo	102
Call Answer	103
Voice Command	104
Voice Dial	108
Voice Alert	110
Voice Setting	111
Emergency Calling	114
E911 Calling	114

TABLE OF CONTENTS

CHAPTER 4 INTERNET BROWSER.....115
Start Internet Browser.....116
Wireless Internet.....116
Browser Menu.....117
Back.....117
Home.....117
Exit.....117
Mark Site.....117
Bookmarks.....117
Inbox.....117
Reload.....118
Settings.....118
About.....120

CHAPTER 5 SAFETY INFORMATION121
Safety Information for Wireless Handheld Phones..122
Safety Information for FCC RF Exposure.....129
SAR Information.....130
FDA Consumer Update132

CHAPTER 6 WARRANTY.....141
Protect Your Warranty.....142
12 Month Limited Warranty143

Chapter 1

BEFORE USING YOUR PHONE

Please read and fully understand this manual before using your phone.

This chapter addresses your phone, its keys and display icons, and covers the charging and proper use of the battery.

Once you have read this chapter, you can move on to the basic and advanced features of your phone.

- Package Contents
- Handset Description
- Function Keys
- Display Indicators
- Using the Battery
- Charging the Battery
- Battery Information

PACKAGE CONTENTS

Thank you for purchasing the TX-55C wireless handset. The phone's giftbox contains all of the items listed below.



Handset



 
User Manual



Hand strap



Standard Battery

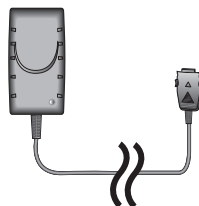 


Desktop Charger

NOTE: Immediately Report any product defects to the place of purchase.

HANDSET DESCRIPTION

This phone is a tri mode (800 Amps/800CDMA) CDMA digital phone with data and web browsing capabilities. The TX-55C weighs 3.2 oz. and the dimensions are 3.3" x 1.6" x 9".

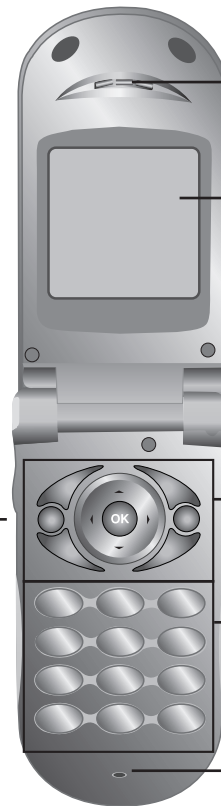

Earpiece

LCD Display

Antenna

For best call quality, fully extend the antenna during the call.

Function Keys

Keypad

Microphone

Volume Button

Adjusts the earpiece and ringer volume.

FUNCTION KEYS



END KEY: Press to turn the handset on or off. Terminates a call or exits the current menu.




SEND KEY: Press to make or receive a call.



NAVIGATION KEY: Press to scroll through the menu.



SOFT KEYS: Press to perform the functions displayed above them on the LCD Display. (e.g. When REDIAL is displayed on the bottom left of the display, press  to redial the last phone number dialed.



WEB KEY: Press to access the web.



CLEAR KEY: Press to clear characters or enable the speaker phone mode.



LOCK KEY: Press and hold it to enter the Lock mode.



ETIQUETTE MODE KEY: Press and hold it to enter the Etiquette mode. This mode disables the keypad tone and enables the vibrator

DISPLAY INDICATORS



Signal Strength

Indicates current signal strength. The more lines, the stronger the signal.






Roaming

Indicates the phone is outside of its home area.



Service Indicator

When a call is in progress,  is displayed. When  is displayed, the phone is in idle mode. When  is displayed, the phone is not receiving a signal from the system.



Message

Indicates a text or voice mail message is waiting.



Digital Mode

Indicates the phone is operating in digital mode.



Battery

Indicates charge level status. The more black lines the greater the charge.



Mute

Phone is mute during a call.

DISPLAY INDICATORS



Phone receive an "UPAlert".



Phone receive an "UPAlert" and have a text message which it isn't checked.



Silent

Mutes key beep during a call.



Emergency call

Blinks when an emergency call is in progress.



Answering machine memo

New voice memos.



Answering machine

Phone in answering machine mode.



Etiquette

Phone is in etiquette mode.



Schedule

Event or an alarm is set.



Ring Mode

Ringtone is set to ring mode.



GPS Icon

Location Off

 


Location On

USING THE BATTERY

 
INSTALLING THE BATTERY

1. Insert the bottom of battery into groove at bottom of the handset.
2. Press in the top of the battery until it clicks.

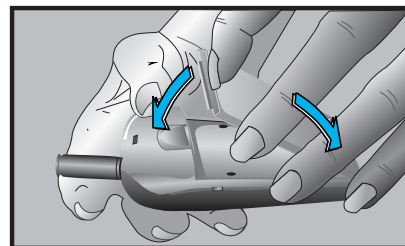

REMOVING THE BATTERY

1. Push the tab with one hand and lift the top of the battery to separate.

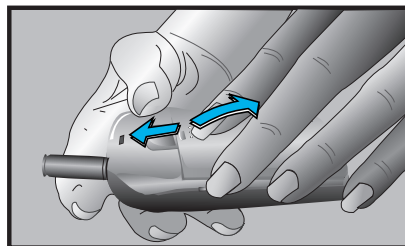 


NOTE: If the battery is not correctly placed in the battery compartment, the handset will not turn on and/or the battery may detach during use.

CHARGING THE BATTERY

POWER CONNECTION

 
Connect the charger to a standard 110V AC outlet. The battery can be charged alone, or when attached to the phone.

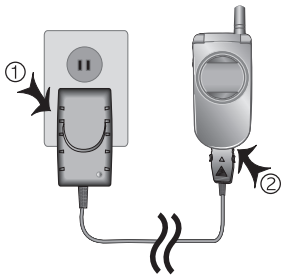

CHARGING THE BATTERY ONLY

To charge the battery only, insert the battery pack into the charging slot on the charger. The LED will indicate charging status.

- Red indicates charging is in progress.
- Green indicates charging is complete.

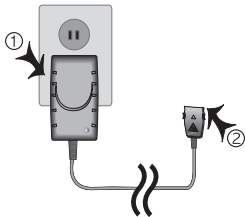

NOTE: 1. The battery is not charged at the time of purchase.
2. Fully charge the battery before use.

CHARGING THE BATTERY

- NOTE:**
1. It is more efficient to charge the battery with the handset off.
 2. The battery must be connected to the phone in order to charge it.
 3. If the LED flickers while charging, the battery contacts may need cleaning.
 4. Once fully charged, the LED may change from red to green. This does not indicate a problem with the battery.
 5. Battery operating time gradually decreases over time.
 6. If the battery fails to perform normally, you may need to replace the battery.

BATTERY CHARGING TIME

Battery Type	BTR- (mAh)	BTE- (mAh)
Charging Time	minutes	minutes

NOTE: Charging time applies only when your phone is turned off. Charging time may vary if your phone is turned on.

BATTERY TALK & STANDBY TIMES

Status \ Type	PCS	CDMA	AMPS
Talk (min)	157	150	103
Standby (hrs)	113	103	25

NOTE: These times are for a new battery. Talk and standby time may decrease over time.

BATTERY INFORMATION

Use only manufacturer approved batteries.

Never use a damaged or worn out battery.

Use the battery only for its intended purpose.

Never expose the battery terminals to any other metal object. This can short circuit the battery.

Avoid exposure to temperature extremes. A phone with a hot or cold battery may temporarily not work (or charge), even if the battery is fully charged. Always allow it to cool down or warm up first and keep the battery between 41°F and 95°F (5°C and 35°C).

When not in use, store the battery uncharged in a cool, dark, dry place.

The battery is a self-contained unit. Do not attempt to open its case.

Battery operating time gradually decreases. You may need to buy a new battery.

Never dispose of a battery in a fire!

Dispose of used batteries in accordance with local regulations.

Recycle!

Chapter 2

BASIC OPERATION

This chapter addresses the phone's basic functions including menus, volume levels, and call functions.

- Using the Phone
- Using the Menu
- Menu Summary
- Basic Functions
- Functions During a Call

USING THE PHONE


TURNING THE PHONE ON

1. Press .

● If “PASSWORD” appears, the phone is locked. To unlock, enter your 4-digit password.

NOTE: The default password is the last 4 digits of your phone number.






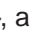

TURNING THE PHONE OFF

1. Press and hold  until “Power Off” appears.

NOTE: 1. Immediately if “LOW BATTERY WARNING POWER OFF” appears and the power goes off, there is a possibility of damaging your phone’s memory. Change or charge the battery .
2. If the battery is removed while the phone is on, information about the last call may be erased.

USING THE MENU

USING THE MENU

1. To enter the main menu from the standby screen, press .
2. Use the navigation key to view menu selections.
3. To go back to previous screen, press .
4. To exit the menu, press .
5. To go into a submenu, press the corresponding number or select the desired item using the navigation key.
6. , , , and  can be used for scrolling through the menu.

MENU SUMMARY

1 : PHONE BOOK

- 1 : Find
 - 1 : By Name
 - 2 : By Number
 - 3 : By Group
- 2 : Add New Entry
- 3 : Edit Existing Entry
- 4 : Edit Group
 - 1 : Add New Group
 - 2 : Change Group Name
 - 3 : Clear Group
- 5 : Edit SMS Group
 - 1 : Add New Group
 - 2 : Change Group Name
 - 3 : Edit Existing Group
 - 4 : Clear Group
- 6 : Speed Dial
- 7 : My Profile

2 : RECENT CALLS

- 1 : Dialed
- 2 : Received
- 3 : Missed
- 4 : Call Times
 - 1 : Last Call
 - 2 : All Calls
 - 3 : Home Calls
 - 4 : Roam Calls
 - 5 : Cumulative Calls

3 : MESSAGING

- 1 : Vioce
- 2 : Send New
- 3 : Inbox
- 4 : Outbox
- 5 : Filed
- 6 : My Object
 - 1 : Sound
 - 2 : Picture
 - 3 : Animation
- 7 : Erase All
 - 1 : Inbox
 - 2 : Outbox
 - 3 : Filed
 - 4 : My Object

MENU SUMMARY

- 8 : Settings
 - 1 : Save sent Msg
 - 2 : Default CB#
 - 3 : Alert
 - 4 : Auto Erase
 - 5 : Entry Mode
 - 6 : Block or Unblock
 - 7 : Read ACK
 - 8 : Signature
 - 9 : Direct View

4 : GET IT NOW

5 : MOBILE WEB

6 : SETTINGS

- 1 : Sounds
 - 1 : Ringer Type
 - 2 : Ringer Mode
 - 3 : Volume
 - 4 : Alert
 - 5 : Roam Ringer
 - 6 : Tone Length
- 2 : Display
 - 1 : Animation Setting
 - 2 : Main Display Setting
 - 3 : LCD Setting
 - 4 : Graphic Setting
 - 5 : Sub LCD Setting
- 3 : Security
 - 1 : Restrict
 - 2 : Special #'s
 - 3 : Clear Phonebook
 - 4 : Reset Phone
 - 5 : Change Password

MENU SUMMARY

- 4 : System
 - 1 : Set Mode
 - 2 : Force Analog
 - 3 : NAM Setting
 - 4 : PRL ID
 - 5 : Location
 - 6 : Others
 - 1 : Answer Mode
 - 2 : Active Flip
 - 3 : Auto Retry
 - 4 : Auto Answer
 - 5 : Voice Privacy
 - 6 : Language
 - 7 : Web Idle Time
 - 8 : S/W Version
 - 7 : UP Proxy IP
 - 1 : UP Link 1
 - 2 : UP Link 2
 - 3 : UP Link 3
- 7 : TOOLS
- 1 : Schedule
 - 2 : Calculator
 - 3 : World Clock
 - 4 : Stopwatch
- 8 : DATA SVC.
- 1 : Connection
 - 2 : Data Speed
 - 3 : TTY Mode
- 9 : VOICE SVC.
- 1 : Voice Memo
 - 2 : Call Answer
-
- 3 : Voice Command
 - 1 : Yes/No
 - 2 : Wake-Up
 - 3 : Top Level
 - 4 : Digital Dial


MENU SUMMARY

- 4 : Voice Dial
 - 1 : List
 - 2 : Add
 - 3 : Clear All
- 5 : Voice Alert
 - 1 : On/Off
 - 2 : Record
 - 3 : Play
 - 4 : Clear
- 6 : Voice Setting
 - 1 : Untrain All
 - 2 : Prompt Mode
 - 3 : Digit Mode
 - 4 : HFK Mode
 - 5 : Set Active

BASIC FUNCTIONS




MAKING A CALL

1. Enter the phone number.

2. To place a call, press .

● **Retry by pressing** .

3. To end a call, press .

- To erase the last entered number, press .
- To erase all numbers and start again, press and hold .
- “CALL FAILED” will display if the call did not connect.
- If the line is busy, press .
- Selecting AUTO RETRY will automatically redial the number for the time you have selected. (Refer to page XX)

BASIC FUNCTIONS

PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail and calling cards). Insert a pause after a phone number, then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.

1. Enter the phone number, then press .

2. Select desired pause. A “P” will appear after the number to represent the pause.

STANDBY MENU

STO	FIND	PSE
-----	------	-----

PAUSE INPUT:

- 1 : PREFIX
- 2 : HARD PAUSE
- 3 : TIME HYPHEN

DURING CALL MENU


- 1 : MESSAGING
- 2 : MUTE
- 3 : SCRATCHPAD
- 4 : SEND MY PHONE #
- 5 : MY PROFILE
- 6 : VOICE PRIVACY
- 7 : LOCATION

3. To dial, press . To store, press  .

HARD PAUSE: If you enter the pause character (P), the number entered after the pause character will be sent after the number dialed.



BASIC FUNCTIONS

SPEAKER PHONE

1. To activate speaker phone in idle, answering and calling modes, press and hold .
2. After a call the phone returns to normal (speaker phone off).

The phone resets to Speaker Phone Off when it turns off and back on.

ANSWERING CALLS

1. To answer a call, press any key except .
2. To end the call, press .

NOTE: Calls can be automatically answered by activating the AUTO ANSWER function. (Refer to page XX)

CALLER ID



Identifies caller by displaying that person's phone number. If the caller's name and number are stored in your phone book, the name and number from the memory location are displayed.

NOTE: The Caller ID numbers are saved in the call log. Caller ID is a system dependent feature. Please contact your service provider for details.

BASIC FUNCTIONS

CALL WAITING

If you have call waiting this function notifies you of an incoming call when you are on another call by sounding a beep tone.

1. When you hear the beep, press  to answer the call.
2. To switch back to the first caller, press  again.

NOTE: Call Waiting is a system dependent feature. Please contact your service provider for details.

ANSWERING MACHINE DISPLAY

Notifies you of unchecked recorded memos in the answering machine.

1. Displays the number of stored memos that are recorded in the answering machine.

To play the recorded voice memos, press .

BASIC FUNCTIONS

ADJUSTING THE VOLUME

You can adjust the volume in two ways: by using the volume control keys on the side of the handset, or by using the menu.


Pressing volume control keys:

- During a call adjusts earpiece volume.
- In Standby Status adjusts ringer volume.
- When the phone rings adjusts ringer volume.

See page 54 for more detailed instructions.

LOCK

Locks phone and prevents unauthorized use. Phone can only be used after inputting the password.




1. To lock the phone, press and hold .
2. To unlock the phone, input the password.

NOTE: *The default password is the last 4 digits of your phone number.*


BASIC FUNCTIONS

VIBRATE

Disables the ringer and vibrates when an incoming call is received. To enable this function:

1. Press  .
2. Select SOUND, then press .
3. Select VIBRATE.

MANNER MODE

Silences all phone sounds while attending a meeting, a movie, or any other time you do not want your phone to be heard. All phone sounds include the ringer, key beeps and notifications. Your phone will vibrate to notify you of an incoming call. To enable this function, press and hold .

FUNCTIONS DURING A CALL

MESSAGING

1. Press   "MESSAGING".

MUTE

Mutes the microphone while you are on a call so the other party cannot hear you if you speak.




1. Press   "MUTE".

NOTE: To turn mute off, press , then  "Mute" again.

FUNCTIONS DURING A CALL



SCRATCHPAD

Stores a new phone number during a call without the calling party hearing the keypad tones.

1. While on a call, press   "SCRATCH PAD"
2. Enter a phone number, press  and, then, save the phone number in the phonebook.


SEND MY PHONE

Enables your phone number to be automatically transmitted to a pager. (Dependent on pager service.)

After calling a pager, when you are asked to enter your number, press   "SEND MY PHONE #".

MY PROFILE



Enables to review and edit your profile, entered through the phone book entry. Please refer to page 49 for more details.

1. Press   "MY PROFILE".

FUNCTIONS DURING A CALL

VOICE PRIVACY

Enhances voice privacy during a call.

1. Press   "VOICE PRIVACY".
2. Select "STANDARD" or "ENHANCED" with the navigation key.

LOCATION

Enables the bell mobility network to locate your current location through Global Positioning System (GPS). Refer to page 77 for more details.

1. Press   "LOCATION".

Chapter 3


MEMORY & SETTINGS

This chapter addresses numerous functions including saving phone numbers to the internal phonebook, entering text and accessing call logs.

- Storing Phone Numbers
- Text Input Methods
- Speed Dialing
- Phone book
- Recent Calls
- Messaging
- Get It Now
- Mobile Web
- Settings
- Tools
- Data Svc.
- Voice Svc.


STORING PHONE NUMBERS

The TX-55C memory stores up to (NUMBER) frequently dialed numbers.

- 1. Enter the phone number, including area code and press .

- **The next available empty memory location number appears. If there are no empty locations, "MEMORY IS FULL!" is displayed with a warning sound.**
- **If you wish to save the phone number into a specific memory location, enter that number when the location number is highlighted.**

NOTE: If "XX LOCATION IS USED" appears on the display after entering a memory location number, another phone number is already stored in that location.

- 2. Enter the person's name and press .

- 3. To mark the phone number as Secret, select Yes.

- **Marking a phone number as Secret means that the number can only be accessed by entering the security code. See page 87 for more details.**

TEXT INPUT METHODS

ENTERING CHARACTERS

For convenient entry of memory location names and text messages, your phone offers several text input methods:


Alpha mode : Enters words by repeatedly tapping the corresponding key until the desired character is displayed.

T9™ mode : Tap each corresponding key only once and the phone predicts the word you are entering.




Numeric mode : Only enters numbers.

Symbol mode : Enters symbols like @, #, %.

Alpha Mode [ABC]


To choose Alpha mode, press  then choose [ABC]. The chart below outlines the key presses needed to display each letter or number in this mode.




Key Pad	1 Repetition	2 Repetitions	3 Repetitions	4 Repetitions	5 Repetitions
1	1				...
2ABC	A	B	C	2	...
3DEF	D	E	F	3	...
4GHI	G	H	I	4	...
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

- Automatically moves the cursor to the next space two seconds after character input.
- To erase one letter, press .
- To erase the entire entry, press and hold .
- To switch between lowercase to uppercase letters, press .

TEXT INPUT METHODS

T9™ Predictive Text Mode [T9ABC]

To choose T9 mode, press  then choose [T9ABC]. This mode predicts the words you are entering using a built-in dictionary. With T9 predictive text input, you press each key only once for each letter. The chart below outlines how to use T9™ text input.

KEY	FUNCTION
 Mode	Press to change text input mode: [T9Abc][Abc][123][Sym] Select [T9Abc] for predictive text input.
[0] Next	Press to view the next matching word if the underlined word is not the word you intended.
[#] Space	Press once to accept a word and add a space.
 Clear	Press once to delete the character to the left of the cursor.
 Left, Right	To move cursor.



TEXT INPUT METHODS

1. Press each key once for each letter of the word you are writing.

● To write **John** with the English dictionary selected:


- 1. Press 5 once - (for J)
- 2. Press 6 once - (for o)
- 3. Press 4 once - (for h)
- 4. Press 6 once - (for n)

NOTE: The display shows for each key pressed.

- 2. Press  until the correct word is displayed.
- 3. To select the correct word and press .



TEXT INPUT METHODS




Numeric Mode [123]

Numeric mode allows you to add a number to your entry/message. To select numeric mode, press  then select [123].

Symbol Mode [SYM]

To select symbol mode allows you to add various symbols to your entry. Whether you are adding an email address to your phone book or sending an expressive message, symbols make these entries easier.

To choose symbol mode, press  then choose [SYM]. The symbols will appear on the display. The corresponding key number for that symbol will appear as well. You can press the key to select the symbol or use the navigation key to highlight the symbol, then press .

To move to the next screen of symbols press   .

SPEED DIALING

ONE-TOUCH/TWO-TOUCH DIALING

Ideal for frequently dialed numbers, This feature allows phone book entries to be dialed via the keypad with only one or two key presses. This feature is good for frequently used phone numbers.

ONE-TOUCH DIALING:

1-9 : Press the corresponding memory number and hold for more than 1 second.

TWO-TOUCH DIALING:









00, 10-20 : Press the first digit and second digits of the memory number short and long respectively.

- If no phone number is stored in the location entered, "Empty Location" will appear on the screen.
- If a phone number is stored in secret, the number is not displayed when making the call.

NOTE: *One-touch dialing must be turned on in the handset. See page 46.*


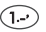



PHONE BOOK

BY NAME

1. Press    .
2. Enter a name or its character string then press  to sort the phone book and display names in an alphabetical order regardless of letter case.
(Please refer to page 33 about the usage of Alpha Editor)
3. All matched entries appear. Delete or view an entry by pressing  or  respectively.
4. To call the selected number, press .









BY NUMBER

Recall saved phone numbers by searching for the location number. Search results include the name and phone number saved to that location.

1. Press    .
2. Enter the memory location number.
3. To dial the number, press .

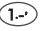PHONE BOOK






BY GROUP

1. Press    .
2. Select one of the options(Family, Friends, Work, Etc, All) with the navigation key.
3. To retrieve the phone book by the group, press .
4. All the entries under the group will appear.
You can either delete or view an entry by pressing  or  respectively when it is selected.
5. To call the selected number, press .

EDITING YOUR PHONE BOOK






After locating a phone number it can be edited or erased.

ADD NEW ENTRY

1. To add a new entry to the phonebook, press   .
2. Use the navigation key to move to a phonebook field entry and enter the required information.
3. To save it press  to return to the previous page, press .

PHONE BOOK






EDIT EXISTING ENTRY

1. To edit an existing entry, press    .
The 4 entry groups appear – Personal, Business, Etc., All.
2. Use the navigation key to select one of the groups.
3. Select an entry under the group. To view or edit the entry press  To delete the entry, press  .

EDIT GROUP







Adds, changes and deletes a group.

ADD NEW GROUP







1. To add a new group, press     .
A maximum of 7 groups is allowed.
2. Input a new group name.
3. To save press  .

PHONE BOOK

CHANGE GROUP NAME

1. To change a group name, press     .
2. Use the navigation key to select an existing group name.
3. Input a new name.
4. To save it, press  .
5. To confirm it, press  .

CLEAR GROUP






1. To delete an existing group, press     .
2. Use the navigation key to select the group to be deleted.
3. To delete it, press  .
4. To reconfirm, press  .

PHONE BOOK







EDIT SMS GROUP

Adds, changes and deletes a group.

ADD NEW GROUP







1. To add a new group, press     .
A maximum of 7 groups is allowed.
2. Input a new group name.
3. To save press  .

CHANGE GROUP NAME


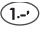




1. To change a group name, press     .
2. The 3existing group appear - Family, Friend, Work.
3. Use the navigation key to select an existing group name.
4. Input a new name.
5. To save it, press  .
6. To confirm it, press  .

PHONE BOOK

EDIT EXISTING GROUP

1. To editing menu, press     .
2. The 3existing group appear - Family, Friend, Work.
3. Use the navigation key to select an existing group.
4. To edit a group.
5. To save it, press  .
6. To confirm it, press  .









CLEAR GROUP

1. To clear a group name, press     .
2. The 3existing group appear - Family, Friend, Work.
3. Use the navigation key to select an clearing group name.
4. Clear a group name.
5. To save it, press  .
6. To confirm it, press  .

PHONE BOOK

SPEED DIAL






Links a phone number of phone book entry to a location number and enables you to make a call simply by pressing its location number in the idle mode.

1. Press    .
2. To link a phone number to the location, select the location then press  . If a phone number already exists in the location, press  then the navigation key to delete it.
3. Select the group where the phone number is saved, then press  .
4. Select the entry, then press  .
5. Select the phone number, then press  .

PHONE BOOK

MY PROFILE






Saves and edits your personal information.

1. To review and edit your personal information (Name, My phone number, Birthday, Blood Type, Address, Home, E-Mail, Work Phone #, Memo, Set Secret), press    .
2. To edit a selected item, press  .
3. To confirm and save, press  .

RECENT CALLS






The TX-55C keeps a log of the 10 most recently missed, answered (incoming) and dialed (outgoing) calls. Log information includes the phone number and the date and time of the call.

DIALED

1. To view the 10 most recently dialed numbers, press    .
The most recent call will be listed first.
2. Use the navigation key to scroll through the list of dialed calls, then select the desired number. To view call details, press  .
 - Detail information includes the phone number, its log number, time and date of the call.
3. To dial the number, press  .




RECENT CALLS

RECEIVED

1. To view the 10 most recently answered calls, press    .
The most recent call will be listed first..
2. Use the navigation key to scroll through the list of answered calls, then select the desired number. To view call details, press  .
 - Detail information includes the phone number, its log number, time and date of the call.
3. To dial the number, press  .

RECENT CALLS

MISSED

1. To view the 10 most recently missed calls, press  **2** **ABC** **3** **DEF** .
The most recent call will be listed first.
2. Use the navigation key to scroll through the list of missed calls, then select the desired number. To view call details, press  .
 - Detail information includes the phone number, its log number, time and date of the call.
3. To dial the number, press  .

RECENT CALLS

CALL TIMERS

LAST CALL

To displays the total amount of time of your last call.

1. Press  **2** **ABC** **4** **GHI** **1** **JKL** .


ALL CALLS

To displays the total amount of time of all your calls.

1. Press  **2** **ABC** **4** **GHI** **2** **ABC** .

HOME CALLS

To display the total amount of time for calls placed within your home area:

1. Press  **2** **ABC** **4** **GHI** **3** **DEF** .

ROAM CALLS

To display the total amount of time for calls placed outside your home area:

1. Press  **2** **ABC** **4** **GHI** **4** **GHI** .

CUMULATIVE CALLS

To display talk time of cumulative calls:

1. Press  **2** **ABC** **4** **GHI** **5** **JKL** .




MESSAGING

VOICE

Your Hyundai wireless handset features Two-Way Short Message Service (SMS). This feature sends and receives text messages through your phone. Voice mail notification is also supported.

MESSAGE INDICATORS

The following symbols indicate the status of message received by your phone. These symbols appear for voice mail and text messages.

-  : Urgent New Msg
-  : Urgent Read Msg
-  : New Msg (unread)
-  : Duplicate New Msg
-  : Old Msg (read)
-  : Lock (read)

RECEIVED MESSAGE NOTIFICATION

When your phone receives a message, the screen displays the number of new text messages and voice mail messages.






1. To display the received message, press the key under .

MESSAGING






CHECKING RECEIVED VOICE MAIL MESSAGE

1. Press , then press   for Voice Mail.
2. The number of voice mail messages currently received in your mailbox appears. To access your voice mailbox, press .

CHECKING RECEIVED TEXT MESSAGE

1. Press , then press   "Inbox".
2. Highlight the message you want to view and press . The text message is displayed.
3. To view the inbox message menu. You can reply, erase, save, or forward the message, press .

SEND NEW

1. Press , then press   "SEND NEW".
2. Input the phone number, then press .
3. Input text message, then press  to display the outbox message menu.

SEND

1. To send the text message, press  or  "SEND".

NOTE: *If the message failed to reach the other party, the display will read "Delivery Failed. Retry in 3 seconds?". Press YES to have the phone automatically send the message again.*

MESSAGING

EDIT RECIPIENT

1. To change the recipient, press **2^{rec}** “EDIT RECIPIENT”.
2. Input the phone number, then press **OK**.
3. Input new text message (if necessary), then press **OK**.

EDIT MESSAGE

1. To change the text message, press **3^{def}** “EDIT MESSAGE”.
2. Input text message, then press **OK**.

PRIORITY

1. To send an urgent message, press **4^{on}** “PRIORITY”.
2. Select the priority (NORMAL/URGENT) by using the navigation key, then press **OK**.

CALL BACK

1. To change the call back number, press **5^{rc}** “CALL BACK”.
2. Input call back number, then press **OK**.

MESSAGING

SAVE

1. To save the text message, press **6sm** “SAVE”.

DEFERRED DELIV.

1. To send the message on specific Time & Date, press **7^{hps}** “SEFERRED DELIV.”.
2. Select the parameter (IMMEDIATE/TIME & DATE) by using the navigation key, then press **OK**.

REQUEST READ ACK

1. To confirm the message was read, press **8^{rw}** “REQUEST READ ACK”.
2. Select the parameter (YES/NO) by using the navigation key, then press **OK**.

INSERT SIGNATURE

1. To insert signature, press **9^{xyz}** “INSERT SIGNATURE”.
2. Select the parameter (YES/NO) by using the navigation key, then press **OK**.

SAVE ENTERED TEXT

1. To make the text message to be saved to canned message, press **0^{up G}** “SAVED ENTERED TEXT”.

MESSAGING

INBOX

To enter the INBOX menu, follow the procedures for CHECKING RECEIVED TEXT MESSAGES on page 101.

REPLY

1. To reply to the text message, press **1** "REPLY".
2. Enter your message, then press **OK**.

ERASE

1. To erase the text message, press **2** "ERASE".
2. To erase the message from your Inbox, press **OK**.

FORWARD

1. To forward the text message, press **3** "FORWARD".
2. Input the phone number of the person you are sending the message, then press **OK**.
3. Input any text message to go along with the forwarded message, then press **OK**.

SAVE

1. To save the text message in your phone, press **4** "SAVE".
2. Press **OK**.

MESSAGING

SAVE ADDRESS

1. To save the Callback number from the text message, press **5** "SAVE ADDRESS".
2. To save the call back number into a memory location, follow the procedures for STORING PHONE NUMBERS on page 32.

LOCK & UNLOCK

1. To lock or unlock the text message, press **6** "LOCK/UNLOCK".
2. Select LOCK to lock the message or UNLOCK to unlock the message, then press **OK**.

BLOCK SENDER

1. To block incoming text message, press **7**.

SAVE QUICK TEXT






1. To save text message with save quick text, press **8**.

REPLY WITH COPY

1. To reply to the text message with copy, press **9**.
2. Type your reply and press **OK**.

MESSAGING




OUTBOX

1. To enter the OUTBOX menu, press  then   "OUTBOX".
2. Select the stored message then press  .
The text message will be displayed.
3. To enter the OUTBOX menu. You can resend, erase, forward, save, or display the sent message status, press  .




RESEND

1. To send to the message, press  "RESEND".

SEND TO



1. To send to the message, press  "SEND TO".
2. Input the phone number, then press  .
3. Input text message, then press  to display the send new message menu.

ERASE



1. To erase the message, press  "ERASE".
2. Select "Yes" or "No" with  or  .

MESSAGING



SAVE ADDRESS

1. To save the Callback number, press  phone numbers in text, the destination address from the text message, press  "SAVE ADDRESS".
2. To save the Callback number into a memory location, follow the procedures for STORING PHONE NUMBERS on page 32.

SAVE

1. To save the message, press  "SAVE".
2. Press  .

LOCK & UNLOCK

1. To lock or unlock the text message, press  "LOCK/UNLOCK".
2. Select LOCK to lock the message or UNLOCK to unlock the message, then press  .





STATE


1. To display the state of the sent message, press  .

MESSAGING

FILED

Manages saved messages from the Inbox/Outbox.

1. Press  and   .
Select a text message with the navigation key.
Press  .

2. The text message appears.
Press  .


3. If the text message is saved from “Inbox” menu, this screen will be displayed.

If the text message is saved from “Outbox ” menu, this screen will be displayed.

4. Select one by pressing  .

MESSAGING

My Object

1. Press  and   .
Select a text message with the navigation key.
Press  .

SOUND

1. Press     .

PICTURE

1. Press     .

ANIMATION

1. Press     .

MESSAGING

ERASE ALL

1. Press  and **3 DEF** **7 PUR**.

2.1. To erase the inbox messages, press **1-'**.

NOTE: Select **"Entire inbox"** or **"Old inbox"**.

2.2. To erase the outbox messages, press **2 INC**.


2.3. To erase the filed messages, press **3 DEF**.

2.4. To erase the my object (SOUND/PICTURE/ANIMATION), press **4 ON**.

3. Select "Yes" or "No" with  or .


MESSAGING

SETTINGS

1. To enter the SETTINGS menu, press  then **3 DEF** **8 TOL** "SETTINGS".


SAVE SENT MESSAGE

1. Press **1-'** "SAVE SENT MSG".

2. Select (NO/YES/PROMPT) using the navigation key, then press .

DEFAULT CALL BACK

1. Press **2 INC** "DEFAULT CB#".

2. Input the call back number, then press .

ALERT

1. Press **3 DEF** "ALERT".

2. Select the alert type (RINGER/VIBRATE/SILENT/RINGER & REMIND/VIBRATE & REMIND) using the navigation key, then press .

MESSAGING

AUTO ERASE

1. Press **4 CH** "AUTO ERASE".

AUTO ERASE INBOX

1. Press **1 →**.
2. Select (OLD INBOX/DISABLE) using the navigation key, then press **OK**.

AUTO ERASE OUTBOX

1. Press **2 MIC**.
2. Select (OLD OUTBOX/DISABLE) using the navigation key, then press **OK**.

ENTRY MODE

1. Press **5 RL** "ENTRY MODE".
2. Select (ALPHA MODE/T9 MODE) using the navigation key, then press **OK**.

BLOCK OR UNBLOCK

1. Press **6 RND** "BLOCK OR UNBLOCK".
2. Select (BLOCK/UNBLOCK/VIEW LIST OF BLOCKED ADDRESS) using the navigation key, then press **OK**.

MESSAGING

READ ACK

1. Press **7 RND** "READ ACK".
2. Select (YES/NO) using the navigation key, then press **OK**.

SIGNATURE

1. Press **8 RW** "SIGNATURE".
2. Select (EDIT SIGNATURE/INSERT SIGNATURE) using the navigation key, then press **OK**.






DIRECT VIEW

1. Press **9 RND** "DIRECT VIEW".
2. Select (YES/NO) using the navigation key, then press **OK**.











GET IT NOW

Your phone provides a unique feature -Get It Now- that enables you to download melody ringers, wallpapers, games and more from your network to your phone. Please contact your service provider for the availability of these services.

START GET IT NOW

1. To launch "Get It Now" from the standby mode, press  .
2. When two or more icons appear on the screen, select an application with .
3. To start the application, press .
4. To end the application, press .
The phone will return to the standby mode.

DOWNLOADING APPLICATIONS

1. Press  .
2. Select "Get It Now" with  then press .
3. Select "Start" with  then press .
4. The phone will access your service provider's server. Follow the prompt to download applications.
 - To select an option, press  then press .
 - When a prompt appears, press  to proceed or  to cancel.

GET IT NOW

DOWNLOADING MELODIES/WALLPAPERS

Before downloading melody ringers and wallpapers, you need to download the dedicated downloader. Please contact your service provider for details.










APPLYING MELODIES/WALLPAPERS

Downloaded melody ringers apply to several functions including the incoming call alert, new text message alert, alarm clock and scheduler alarm.
See Ringer Type on page 87.

Downloaded wallpapers apply to the standby mode.
See Wallpaper on page 85.










CHECKING DATA FOLDER MEMORY

Downloaded melody ringers, wallpapers and applications are saved to the data folder in your phone.

1. Press  .
2. Select "Get It Now" with  then press .
3. Select "Options" with  then press .
4. Select "Information" with  then press .
The memory status will be displayed.
5. To exit, press .

GET IT NOW

ERASING AN APPLICATION

1. Press  .
2. Select “Get It Now” with  then press .
3. Select “Options” with  then press .
4. Select the application to be erased with  then press .
5. Select “Remove” then press .

MOBILE WEB

SETTINGS







SOUNDS

You are to set Ringer type, Ringer mode, Volume, Alert, Roam Ringer and Tone length.








RINGER TYPE

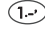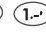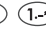Selects a ringer type to alert you of an incoming call.

RINGER LIST

1. Press      .
2. Select a ringer type from the 40 melodies and 10 ringer types.
3. To confirm, press  .

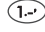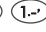




MY DOWNLOAD

1. Press      .
2. Select “Setting” or “Sound List” then press  to save it..
 - Setting : To select “1 Step~5 Steps” with the Navigation key.
 - Sound List : Press  to select “Midi file 1~Midi file 5”.

SETTINGS

RINGER MODE

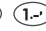Alerts you to incoming calls in the following modes:

1. Press     .
2. Select one of the following options with the navigation key.
 - Ringer
 - Vibrator
 - Ringer after Vibrate – The ringer sounds after vibration.
 - Silent – Mutes the ringer
3. To confirm, press  .

SETTINGS

VOLUME


Controls the volume of the following items. The volume can be adjusted to 5 levels.

RINGER

Controls the Ringer volume.

1. Press     .

2. Adjust the ringer volume with the navigation key.


3. To save, press .

KEY

Controls the keypad tone.

1. Press     .

2. Adjust the keypad tone with the navigation key.


3. To save, press .

VOICE CALL

Controls the earpiece volume

1. Press     .

2. Adjust the earpiece volume with the navigation key.

3. To save, press .

SETTINGS


ALERT

Sounds an alert to any change occurring on the phone.

MINUTE ALERT

Sounds an alert every minute of a phone call.


1. Press     .

2. Select “OFF” or “ON” with the navigation key, then press  to save it.

ROAM ALERT

Sounds an alert when leaving a service area and entering a roaming service area.


1. Press     .

2. Select “OFF” or “ON” with the navigation key, then press  to save it.

CONNECT ALERT

Notifies you that a call has been successfully placed.

1. Press     .

2. Select “OFF” or “ON” with the navigation key, then press  to save it.

SETTINGS

FADE ALERT

Sounds an alert when entering an area where calls cannot be made due to weak signal strength. The alert sounds in standby mode.

1. Press .
2. Select “OFF” or “ON” with the navigation key, then press to save it.

LOW SIGNAL ALERT

Sounds an alert when you encounter low signal strength during a call.

1. Press .
2. Select “OFF” or “ON” with the navigation key, then press to save it.

SETTINGS

ROAM RINGER

Reminds you that you are in a roaming service area, by sounding a different ringer from what you set as voice call in Ringer type.

1. Press .
2. Select “Distinctive” or “Normal” with the navigation key, then press to save it.

- **Distinctive** : Sounds a different ringer type.
- **Normal** : Sounds the same ringer type as used in Home area.

tone length

Adjusts the tone length.

1. Press .
2. Select “Normal” or “Long” with the navigation key, then press to save it.

SETTINGS







DISPLAY

Customizes and personalizes the display.







ANIMATION SETTING

Selects your favorite LCD display in the following modes

IDLE DISPLAY




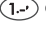


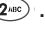1. Press      .
2. Select one from the Animation List to use in the idle mode by moving the navigation key up, down, left and right.
3. To save, press  .

POWER ON

1. Press      .
2. Select one from the Animation List to display when you turn on the handset by moving the navigation key up, down, left, and right.
3. To save, press  .

SETTINGS

POWER OFF







1. Press      .
2. Select one from the Animation List to display when you turn off the handset by moving the navigation key up, down, left, and right.
3. To save, press  .

MAIN DISPLAY SETTING

Selects your favorite LCD display in the following modes

GREETING INPUT

To edit the greeting press the navigation key.

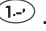1. Press      .
2. Press the navigation key to edit the greeting.
3. Input your personal greeting, using the Alpha Editor.
4. To save, press  .

SETTINGS

IDLE CLOCK

To select an LCD clock display:

1. Press     .

2. Select one of the following options:

- Digital Clock
- Analog Clock
- Greeting Clcok
- Animation + Clock

3. To save, press .

LCD SETTING

Controls backlight and LCD contrast for better view and more efficient use.


BACKLIGHTING

Backlights the display and keypad for easy viewing in dark places.

1. Press     .

2. Select one of the following options: 5 sec, 10 sec, 20 sec, Off.

- **Off: Turns the backlight off**
- **5 sec, 10 sec, 20 sec: Backlight remains on for 5, 10, or 20 seconds after the touch of the keypad.**

3. To save, press .


SETTINGS

CONTRAST

The LCD display contrast can be adjusted to 5 levels.

1. Press     .

2. Adjust the LCD contrast for better view.

3. To save, press .

GRAPHIC SETTING

SCREEN SAVER

1. Press     .

• TIME SETTING

Select one of the following options:


Off/5Secs/10Secs/20Secs/30Secs.

• SCREEN SAVER

Select parameters (DOWNLOAD IMAGE/EMS IMAGE) by using the navigation key, then press .

WALL PAPER

1. Press     .

2. Select parameters (DOWNLOAD IMAGE/EMS IMAGE) by using the navigation key, then press .

SETTINGS

SUB LCD SETTING

Controls backlight and Sub LCD contrast for better view and more efficient use.

SUB LCD CLOCK

To select an Sub LCD clock display:

1. Press **6** **2** **5** **1** .
2. Select one of the following options: Analog Clock, Digital Clock.
3. To save, press .

SUB LCD CONTRAST

The Sub LCD display contrast can be controlled in 5 levels.

1. Press **6** **2** **5** **2** .
2. Adjust the Sub LCD contrast for better view.
3. To save, press .

SETTINGS

SECURITY

Prevents others from using the phone without permission and allows access to security features only after inputting a password.

RESTRICT

Enables you to restrict certain features with the password. You are to unlock it to use the features.

AUTOMATIC LOCK

Prevents others from using your phone without permission. When locked, the menu cannot be accessed without password.

1. Press **6** **3** then enters "PASSWORD."
2. Press **1** **1** then select "Off", "Lock Now" or "Lock On Power Up".

- **Off : Do not lock the phone.**
- **Lock Now : Lock the phone now.**
- **Lock On Power Up : Lock the phone whenever it is turned on.**

3. To save, press .

SETTINGS

DIALED

Blocks all outgoing calls except emergency calls from being placed, but allows incoming calls to be answered.

1. Press then enters "PASSWORD."
2. Press then select "Allow" or "Restrict" with the navigation key.

- **Restrict : Restrict an outgoing call.**
- **Allow : Allow an outgoing call.**

3. To save, press .

RECEIVED CALL HISTORY

1. Press then enters "PASSWORD."
2. Press then select "Allow" or "Restrict" with the navigation key.

- **Restrict : Restrict access to incoming call history.**
- **Allow : Allow access to incoming call history.**

3. To save, press .

SETTINGS

DIALED CALL HISTORY

1. Press then enters "PASSWORD."
2. Press then select "Allow" or "Restrict" with the navigation key.

- **Restrict : Restrict access to the outgoing call history.**
- **Allow : Allow access to the outgoing call history.**

3. To save, press .

MENU

Blocks access to the menu to prevent any changes.

1. Press then enters "PASSWORD."
2. Press then select "Allow" or "Restrict" with the navigation key.

- **Restrict : Restrict access to the menu.**
- **Allow : Allow access to the menu.**

3. To save, press .

SETTINGS

PHONE BOOK

Blocks access to, and protects data in your phone book.

1. Press then enters "PASSWORD."

2. Press then select "Allow" or "Restrict" with the navigation key.

- **Restrict : Restrict access to the phone book.**
- **Allow : Allow access to the phone book.**

3. To save, press .

DATA CALL

Restricts data calls from being placed.

1. Press then enters "PASSWORD."

2. Press then select "Allow" or "Restrict" with the navigation key.

- **Restrict : Restrict a data call.**
- **Allow : Allow a data call.**

3. To save, press .

SETTINGS

900#S

Restricts calling 900 dial service numbers.

1. Press then enters "PASSWORD."

2. Press then select "Allow" or "Restrict" with the navigation key.

- **Restrict : Restrict a 900-dial service.**
- **Allow : Allow a 900-dial service.**

3. To save, press .

NOTE: "This phone is restricted" appears on the display when you attempt to make a restricted call.

LONG DISTANCE

Restricts calling long distance numbers – the phone is limited to calling numbers within the area.

1. Press then enters "PASSWORD."

2. Press then select "Allow" or "Restrict" with the navigation key.

- **Restrict : Restrict a long distance call.**
- **Allow : Allow a long distance call.**







3. To save, press .

NOTE: A phone number over 7 digits is restricted.

SETTINGS





SPECIAL #'s

Stores 3 phone numbers to allas to be dialed even in rock mode.


1. Press    then enters "PASSWORD."
2. Press  then select one from three blanks with the navigation key
3. Press  and input a phone number
4. Press  again to save it.

CLEAR PHONE BOOK

Clears all phone book entries.

1. Press    then enters "PASSWORD."
2. Press  .






NOTE: *The default password is the last 4 digits of your phone number.*

3. Select "Yes" or "No" with the navigation key.
Press  .

SETTINGS

RESET PHONE





Resets phone to default settings.

1. Press    then enters "PASSWORD."
2. Press  .
3. Select "Yes" or "No" with the navigation key.
Press  .



● **When you select "Yes," "Wait a moment" appears and the phone will return to Idle mode.**

CHANGE PASSWORD

Clears all phone book entries.

1. Press    then enters "PASSWORD."
2. Press  .

NOTE: *The default password is the last 4 digits of your phone number.*

3. Enter a new password, then press  .
4. Enter the new password again, then press  .






SETTINGS

SYSTEM

Scans the channels to stay connected to any available system.

SET MODE






Selects the Preferred System.

1. Press     .
2. Select one of the following options(Automatic B/
Automatic B/Home only) with the navigation key,
then press  .

- **Automatic B** : Scan the radio channels based on the B-band Cellular CDMA preferred (CDMA preferred, then Amps).
- **Automatic A** : Scan the radio channels based on the A-band Cellular CDMA preferred (CDMA preferred, then Amps).
- **Home only** : Only within your home area or home affiliated area.

FORCE ANALOG

Force Analog system.

1. Press     .
2. Select parameters (YES/NO) by using navigation key, then press  .

SETTINGS







NAM SETTING

Enables Auto NAM (Number Assignment Modules) or manually changes a NAM.

1. Press     .





AUTO NAM

To automatically switch phone to the proper NAM when you have multiple NAM registrations:

1. Press      .
2. Select "Yes" or "No", then press  to save it.

CHANGE NAM

To changes the NAM used by the phone when you have multiple registrations:

1. Press      .
2. Select a NAM(NAM1,NAM2) with the navigation key, then press  to save it.

 
PRL ID

To display the phone's PRL (Preferred Roaming List):

1. Press     .

ERI (Enhanced Roaming Indicator)

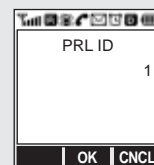


Cellular systems are identified by a number called the System Identification Number or SID. Your phone is equipped with a Preferred Roaming List (PRL) which can be programmed by your Carrier to take advantage of the families of cellular systems (SIDs) that your Carrier owns or has special billing arrangements with in various cities.



SETTINGS

LOCATION

Decides whether or not you allow the network system to detect your position.

1. Press   .
2. Press any key when you see a message.
3. Select “Location On” or “911 Only” with the navigation key.




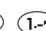
- **911 Only** : Your location will be hidden from network & application except 911.
- **Location On** : Your location is now available to the network.





SETTINGS

OTHERS

ANSWER MODE

Selects an Answer mode.






1. Press    .
2. Select “Any Key” or “Send Key” with the navigation key.

- **Any Key** – Press any key to answer an incoming call except , , and .
- **Send Key** – Press only  to answer a call.

3. To save, press .

ACTIVE FLIP

Selects an Active Flip Answer mode as follows.







1. Press    .
2. Select “On” or “Off” with the navigation key
3. To save, press .

SETTINGS





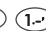

AUTO RETRY

Automatically retries a call up to 5 times after a set time interval.

RETRY TIME

1. Press     .
2. Select a time interval option (Off,3,5,7,10 seconds) with the navigation key.
3. To save, press .




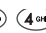
REPEAT

1. Press     .
2. Select one of the options (1 time,3 times,5 times) with the navigation key.
3. To save, press .

SETTINGS

AUTO ANSWER

Automatically answers a call after a preset number of rings. An ideal setting for the hands-free car kit.

1. Press    .
2. Select one from the following items with the navigation key.





● **Off/5/10/18 seconds.**

NOTE: *This function will not be activated when you select Vibrate, Silent, or Ringer after vib as a ringer mode.*


3. To save, press .

VOICE PRIVACY

Enhances voice privacy and avoids tapping during a call.

1. Press    .
2. Select “Standard” or “Enhanced”, if available.






● **“Enhanced” - Make it more difficult to wire tap.**

3. To save, press .

SETTINGS





LANGUAGE

Selects the language in which letters are displayed on screen.


1. Press    .
2. Select “English” or “Spanish”.
3. To save, press .

WEB IDLE TIME

Disconnects your phone from a network when there is no key input for a certain time period.

1. Press    .
2. Use the navigation key to set the web idle timer or press digit keys one by one to enter the time.




● **Not exceed three digits.**

3. To save, press .

SETTINGS

S/W VERSION

Displays the version of your phone.

1. Press    .
2. The version of the software and hardware appears.

UP PROXY IP

To access your service provider's website the phone can have up to 3 sets of the server IP (Internet Protocol) addresses and Port numbers. These may already be preset or be separately programmed by your service provider. Please note that any change to these settings may disable the Web access capability.

1. Press   .

TOOLS

SCHEDULE

Reminds you of a previously scheduled event or anniversary with an alarm.

EVENT

NEW EVENT

To insert new event.

1. To display a calendar, press .

2. Move the navigation key to choose a date in the calendar, then press .

- **Day to Day movement :** Move the joystick key left and right.
- **Week to Week movement :** Move the joystick key down and up.

3.1. To set a time for an event, press .

- **Choose one of the following in the first line (On time, 10 Min before, 30 Min before, 1 Hour before, No alarm)**
- **To change the date and time in the second line by moving to year, month, day, time input with the navigation key.**

3.2. To set a melody for the event, press .
Choose one of the best melodies with the navigation key.

4. Press to save it or to return to the calendar.

5. "Save complete" appears. When you return to the calendar the day will be highlighted.

VIEW EVENT ENTRY

1. To view event entry, press .

TOOLS

ALARM

1. To display three alarm entries, press .

2. Select one of the entries with the navigation key.

3. To edit the existing alarm or set a new alarm, press .

To delete the existing one, press .

4.1. To set a time, press .

- **You are to choose an alarm frequency. (Once, Daily, Weekly, Monthly, Yearly) with the navigation key movement.**
To save, press .

4.2. To set a melody, press .

Select one, then press .

4.3. To set a snooze, press .




Select one, then press .

NOTE: It doesn't snooze if an alarm is stopped within a minute, but it will snooze in a minute an alarm goes off.

TOOLS

CALCULATOR

Allows you to use the TX-55C as a calculator to perform basic mathematic functions (addition, subtraction, multiplication, division).

1. Press   then  for CALCULATOR.
2. Use the keypad to enter the numbers to be calculated.
3. Follow the instructions below to calculate $(8*6)/4-2.5$

- Input 8


Move the navigation key left


Input 6 and press the navigation key

Move it right

Input 4 and press the navigation key

Move it down

Input 2 and press the  to input(.)

Press 5, then .





4. To reset, press .

NOTE: 1. Up to 7 integer digits and up to 2 decimals can be displayed. If the calculated result has more than 7 digits, the result is displayed in 7 digit logarithm.
2. There is no (-)sign. To express a negative number, use '0-value'.

TOOLS

WORLD CLOCK

Displays the time in a pre-programmed specific city.

1. Press   then  for WORLD CLOCK.
2. Select a city with the navigation key, then press .
3. The world map appears with the city, its date and time. Select another city using the navigation key.





TOOLS

STOPWATCH




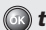




Allows you to use your phone as a stopwatch.
The stopwatch displays time in hours, minutes, seconds, and 1/100 of a second.

1. Press   then  for STOPWATCH.

2. To measure a time period.

- To start the stopwatch, press .
- To pause it, press .
- Press  to resume it or  to return to the previous page.

3. To measure more than one timed event:

- **To start, press .**
- **To stop a time period and continue measuring another one, press .**
- **To stop the second and continue measuring a third one, press .**
- **And keep repeating the above to measure up to 6 time periods.**
- **Press  to stop it and  to view the results.**
- **Press  or  to return to the stopwatch.**
- **To reset it, press .**

DATA SVC.


CONNECTION

Select a connection mode based on the handset usage.

1. Press   .

2. Select one of the following connection modes with the navigation key.

- **Voice Call : To receive a voice call.**
- **Data Only : To receive data when connected to PC.**
- **Fax Only : To function as a fax when connected to PC.**

3. To save, press .

NOTE: This function is available only when the phone is connected to data cable.

DATA SVC.


DATA SPEED

Select a connection speed based on the handset usage.

1. Press   .

2. Select one of the following connection modes with the navigation key.

- 19200 BPS
- 115200 BPS
- 230400 BPS

3. To save, press .

NOTE: This function is available only when the phone is connected to data cable.

DATA SVC.





TTY MODE

Your phone is able to operate with a TTY (Teletypewriter) device in both analog and digital modes. This feature is system dependent and may not be available in all areas.

CONNECTING TO TTY DEVICE

1. Turn the TTY device off.
2. Connect the TTY device to the phone at the earphone-microphone jack.

ACTIVATING/DEACTIVATING TTY MODE

1. Press   .
2. Select "ON" or "OFF" then press .
"TTY" will appear on the display when activated.





MAKING AND ANSWERING A CALL

You can make or answer calls in the same manner as ordinary calls.

NOTE: A TTY (also known as TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. Connect the TTY device to the Headset Jack of PCS Phone. Then type the message you want to send on the TTY's keyboard.

VOICE SVC.

VOICE MEMO

- 1. To start VS menu, press  .
- 2. To enter the voice memo menu, press .
- 3. When you press  to record a voice memo, instructions will appear and you will hear “Please record it at the tone”.

To view and play voice memos press .
To erase all the voice memos press .

- 4. To stop recording a memo, press .





NOTE: Press  to pause, then press  to resume.

- 5. After recording a voice memo you can REVIEW, RE-RECORD or SAVE.

VOICE SVC.

CALL ANSWER

Sets and operates the answering machine.

- 1. Press  .
- 2. Press .
- 3. Select one of the following options with the navigation key, then press .

ON/OFF : Turns the Auto Answering machine on/off.
INBOX : Play or erase a recorded memo.
GREETING : Records, Plays and Erases your personalized greeting. You have the maximum 30 seconds to record a greeting.

ICONS IN THE STORED MEMO LIST
☒ : Unchecked recorded memo in Answering machine.
☐ : A recorded memo in Answering machine that you have already checked.






NOTE:
RECORDING LIMITATION :
You have a limit of 10 voice memos including those in Answering Machine. Each voice memo has the time limit of 60 seconds.



VOICE SVC.

VOICE COMMAND

Trains the VR with the following categories of control words:

YES/NO

- 1. Press   .
- 2. Press   .
- 3. Select one of the following options with the navigation key, then press  .

LIST WORDS : Displays the list of control words in the Yes/No set. Select a control word from the list then press  . Either train, untrain or view its status. To train a word, press  and follow the voice prompts.






TRAIN ALL : Train Yes/No set to recognize your voice.


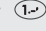
UNTRAIN ALL : Untrain Yes/No set not to recognize trained control words.

VOICE SVC.

WAKE UP

Use the Wake-Up to train or untrain the VR with the control word, wake up.

- 1. Press   .
- 2. Press   .
- 3. Select one of the following options with the navigation key, then press  .

LIST WORDS : Displays the list of control words in the wake up set. Select a control word from the list then press  . Either train, untrain or view its status. To train a word, press  and follow the voice prompts.






TRAIN ALL : Train Wake-up set to recognize your voice.



UNTRAIN ALL : Untrain Wake-up set not to recognize trained control words.

VOICE SVC.

TOP LEVEL

Use the Top Level to train or untrain the VR with your control words. (Dial, Redial, Voice memo, Phone book, Cancel).

- 1. Press   .
- 2. Press   .
- 3. Select one of the following options with the navigation key, then press  .

LIST WORDS : Displays the list of control words in the top level set. Select a control word from the list then press  . Either train, untrain or view its status. To train a word, press  and follow the voice prompts.






TRAIN ALL : Train Top level set to recognize your voice.



UNTRAIN ALL : Untrain Top level set not to recognize trained control words.

VOICE SVC.

DIGIT DIAL

Use the Digit dial to train or untrain the VR with the control words (1 to 9, Zero, Oh, Verify, Clear, Call).

- 1. Press   .
- 2. Press   .
- 3. Select one of the following options with the navigation key, then press  .

LIST WORDS 1,2 : Displays the list of control words in the digit dial set. Select a control word from the list then press  . Either train, untrain or view its status. To train a word, press  and follow the voice prompts.

TRAIN ALL : Train Digit dial set to recognize your voice.

UNTRAIN ALL : Untrain Digit dial set not to recognize trained control words.

VOICE SVC.

VOICE DIAL

Lists, adds and erases voice tags for phone book entry

LIST

1. Press .
2. To list phonebook entries with attached voice tags, press .
3. Select one with the joystick key, then press .

EDIT : Retrain / Voice Setting / Clear
PLAY : Play voice tag.

4. Press to play a voice tag or to edit an existing voice tag.
5. Select one of the following options, then press .

1) Retrain: "Retrain Voice Name?" appears. Press , then say a name.
2) Voice Setting: "Change?" appears. Press , select a phone number, then press again.
3) Clear: "Removing Voice Names Proceed?" appears. Press .

VOICE SVC.

ADD

1. Press .
2. To add a voice tag to phone book entry, press .
3. Select one group with the navigation key, then press .
4. Select a phone number with the navigation key, then press .
5. To add a voice tag to the number, say the name.

CLEAR ALL

1. Press .
2. To erase all voice tags in the list, press .
3. "Removing all voice tags proceed?" appears.
4. Press and you will see a message.

OK : Proceed to erase all the voice tags.
CNCL : Return to the previous page.






5. To clear all voice tags, press .

VOICE SVC.





VOICE ALERT

Sets the voice alert service.

ON/OFF

- 1. Press  .
- 2. Press  .
- 3. Select "On" or "Off" with the navigation key, then press .






RECORD

- 1. Press  .
- 2. Press  .
- 3. Record voice alert.

PLAY

- 1. Press  .
- 2. Press  .
- 3. Confirm voice alert.

CLEAR






- 1. Press  .
- 2. Press  .
- 3. Select "Yes" or "No" with the navigation key, then press .

VOICE SVC.

VOICE SETTING






Customizes the voice service menu.

UNTRAIN ALL

- 1. Press  .
- 2. Press  .
- 3. Select "Yes" or "No" with the navigation key, then press .

PROMPT MODE

Use the prompt mode to select either beginner or expert mode. The expert mode consists of shorter texts and just beeps as opposed to the beginner mode that gives full instructions.

- 1. Press  .
- 2. Press  .
- 3. Select Beginner/Expert with the navigation key.
Press .

<Beginner mode>
1st prompt : "Main menu" followed by a short beep.
2nd prompt : "Speak a name to call, or say dial, redial, voice memo, phone book, or cancel", followed by a short beep.






<Expert mode>
1st prompt : A sequence of high and low tones.
2nd prompt : "Main menu".

NOTE:
The VR times out and the phone returns to the standby mode after the 1st and 2nd prompts are heard, and nothing is said.

VOICE SVC.

DIGIT MODE

Use the digit mode to select one of the following options ; ECHO, BEEP, ECHO+BEEP.

1. Press  .
2. Press  .
3. Select one option with the navigation key, then press .






ECHO: Digit echoes back when entered.

BEEP: Digit beeps when entered.

ECHO + BEEP: Digit echoes and beeps when entered.

HFK MODE






HFK stands for Hands-Free car kit. With this function, you can activate and utilize the VR feature when the phone is in hands free car kit.

1. Press  .
2. Press  .
3. Select “Off” or “On” with the navigation key, then press .

NOTE: Once you say “Wake Up” and the phone recognizes your voice, you will hear a beep. The second time you say “Wake Up”, your phone turns to VR mode.

VOICE SVC.


SET ACTIVE

1. Press  .
2. Press  .
3. Select “Send Key” or “Active Flip” with the navigation key, then press .

EMERGENCY CALLING

E911 CALLING

Allows you to place emergency calls, even when the phone is locked. Emergency calls are placed on any available system.

1. Enter 911 and press .
2. The call will connect.

● *When a call ends, the phone returns to the Emergency Mode for 5 minutes.*

Chapter 4

INTERNET BROWSER

This chapter addresses using your handset to access the Wireless Internet.

- Start Internet Browser
- Browser Menu









START INTERNET BROWSER

WIRELESS INTERNET

Your TX-55C wireless handheld telephone allows you browse various Internet websites directly from your phone. This provides access to up-to-date information such as news, sports, weather and stock quotes when you subscribe to Internet service with your service provider. Please contact your service provider for a list of available websites and service details.



1. To access wireless Internet network, press .

● **You can access the Internet from your phone when it is in digital mode, as indicated by the @ symbol on your phone's display.**

2. The Internet browser will launch.
3. To access the Internet, press . Your service provider's home page appears.
4. Scroll the page using  .
5. To select the options at the bottom of the display, press  or .
6. To return to the previous page, press  .
7. To exit the Internet, press .

BROWSER MENU


BROWSER MENU

1. To enter the browser menu, press  (Select ).

BACK

1. To return previous page, press .

HOME

1. To go home, press .

EXIT

1. To exit browser, press .

MARK SITE

Adds a web page to bookmark list.

1. To select Mark Site, press .

BOOKMARKS

Display Bookmark list.

1. To select Bookmarks, press .

INBOX

Display inbox list.

1. To select Inbox, press .

BROWSER MENU

RELOAD

Reloads current page.

- 1. To select Reload, press **7 FDS**.

SETTINGS

Displays Browser Menu Settings.

- 1. To select Settings, press **8 NV**.

● HOMEPAGE

Enables you to change the homepage.

- 1. To select Homepage, press **1->**.

● PROXY

Enables you to select another WAP PROXY.

- 1. To select Set UP.Link, press **2 INC**.

● CIRCUIT LINGER

- 1. To select Circuit Linger Timer, press **4 CH**.

● SCROLL MODE

- 1. To select scroll mode, press **5 JEL**.

● SCROLL SPEED

- 1. To select scroll speed, press **6 WND**.

BROWSER MENU

● KEY PRESS TIMEOUT

- 1. To select Key Press Timeout, press **7 FDS**.

● SECURITY

Display Security Menu Options.

- 1. To select Security, press **8 NV**.

● ADVANCED

Displays Advanced Menu options.

-SHOW URL

Displays the URL (Uniform Resource Locator) of the current page.

- 1. To select Show URL, press **1->**.

-RESTART BROWSER

Causes the deck history and deck cache to be cleared and starts a new session with the UP. Link.

- 1. To select Restart Browser, press **2 INC**.

BROWSER MENU

ABOUT...

Display About Menu Options.

1. To select About, press **9** .

• OPENWAVE

When Openwave is selected from the browser menu, the browser version and copyright information is displayed. The device layer version is also displayed.

1. To select Openwave, press **1** .

• SECURITY

Display a list of security-related items.

1. To select Security, press **2** .

Selecting the encryption item from the browser menu displays a list of security-related items.

Chapter 5

SAFETY INFORMATION

- Safety Information for Wireless Handheld Phones
- Safety Information for FCC RF Exposure
- SAR Information
- FDA Consumer Update

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

Read This Information Before Using Your Handheld
Portable Cellular Telephone

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *
NCRP Report 88 (1986) *
ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

*;
American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Nonionizing Radiation Protection.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

PHONE OPERATION

Normal Position: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on efficient operation:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Posted Facilities

Turn your phone OFF where posted notices so require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OTHER SAFETY GUIDELINES

Aircraft

FCC Regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

Potentially Explosive Atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle’s engine.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS AND WARNINGS

Please read and understand all of the Precautions and Warnings contained in this manual before attempting to operate your phone.

1. DO NOT use this equipment in an extreme environment where high temperature or high humidity exists, such as near a heater or in a closed car parked in the sun.
2. DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using the unit, lay down the unit to avoid possible damage due to instability.
3. DO NOT expose this equipment to liquids such as rain or spilled beverages.
4. DO NOT use unauthorized accessories. Use of unauthorized accessories may result in fire, electric shock or other bodily injury.
5. DO NOT disassemble the phone or its accessories. If service or repair is required, return the unit to an authorized HYUNDAI service center. If unit is disassembled, the risk of electric shock or fire may result.
6. DO NOT short-circuit the battery terminals with metal items etc.
7. DO NOT use harsh chemicals, cleaning solvents or strong detergents to clean this phone. Always clean it with a soft, damp cloth.
8. DO NOT paint this phone. This can clog moving parts.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OPERATING PROCEDURES

Never violate any of the following Rules and Regulations of the FCC when using your phone. The following offenses are punishable by fine, imprisonment, or both:

- Using obscene, indecent, or profane language.
- Using the unit to give off false distress calls.
- Wiretapping or otherwise intercepting a telephone call, unless that person has first obtained the consent of the parties participating in the call.
- Making anonymous calls to annoy, harass, or molest other people.
- Charging to an account without authorization to avoid payment for service.
- Refusing to yield a party line when informed that it is needed for an emergency call (It is also unlawful to take over a party line by stating falsely that it is needed for an emergency).

SAFETY INFORMATION FOR FCC RF EXPOSURE

WARNING! Read this information before using your phone

CAUTION

In August 1996, the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation (Holster Part Number : 2H020665002)

This device was tested with holster (Part No:2H020665002) for body-worn operation with the back of the phone kept 0.59 inches (1.5cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Other belt-clips, holsters and similar accessories not used by this device may not comply with FCC RF exposure limits and should be avoided.

Note: For more information about RF exposure, please visit the FCC website at www.fcc.gov.

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.23 W/kg and when worn on

SAR INFORMATION

the body, as described in this user guide, is 0.659 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID PP4TX-55C.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) web-site at <http://phonefacts.net>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.



**U.S. Food and Drug Administration -
Center for Devices and Radiological Health
Consumer Update on Mobile Phones**

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;

- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications

Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through

contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones ?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test

methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless

phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones:
(<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program: (<http://www.fcc.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection:
(<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project:
(<http://www.who.int/emf>)
- National Radiological Protection Board (UK):
(<http://www.nrpb.org.uk/>)

MEMO

Chapter 6

WARRANTY

- Protect Your Warranty
- 12 Month Limited Warranty

PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling, misuse, neglect or accident”.

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Hyundai product. Be careful. Some of these products may not be compatible to use with your Hyundai product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Hyundai accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Hyundai product.



Hyundai Curitel, Mobilefonerepair.com Ltd.
PO Box 51855, Pakuranga, 89 Carbine Road, Mt Wellington
Auckland, New Zealand
Telephone 09 917 4797 Fax 09 917 4700

12 MONTH LIMITED WARRANTY

HYUNDAI COMMUNICATIONS CORP. (the Company) warrants to the original retail purchaser of this Hyundai Handheld Portable Cellular Telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not assignable or transferable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;

12 MONTH LIMITED WARRANTY

(e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;

(f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the Cellular System as a whole.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place or purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you can telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 905-712-9299).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT

12 MONTH LIMITED WARRANTY

WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Hyundai Curitel, Mobilefonerepair.com Ltd.
PO Box 51855, Pakuranga, 89 Carbine Road, Mt Wellington
Auckland, New Zealand
Telephone 09 917 4797 Fax 09 917 4700