

# 材质: 108g铜板纸, 正反面印刷

## DOUBLE SIDE PRINT



### QUICK START GUIDE

 
#### TWIST BASS LED WIRELESS SPEAKER

##### CHARGING THE SPEAKER

⚡ Charge the speaker before using it for the first time.

🕒 Plug in the cable to the micro USB port and charge for 2 hours.


Connect the charging cable to charging port.

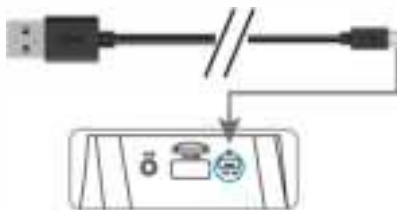

### QUICK START GUIDE

#### TWIST BASS LED WIRELESS SPEAKER
 
##### MEDIA KEY FUNCTIONS

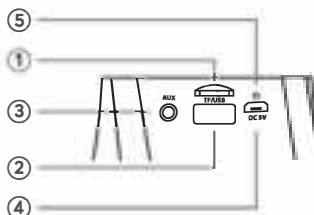


1. TF card playback
2. U disk playback and intelligent mobile charging interface.
3. AUX and audio antenna
4. Battery charging DC/5V
5. Indicator light display



### QUICK START GUIDE
 
#### TWIST BASS LED WIRELESS SPEAKER

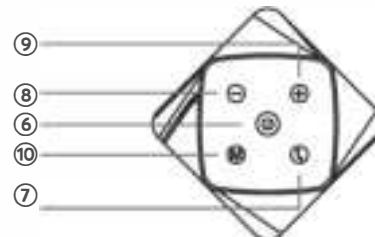

6. (OFF/ON)
7. Short press is play/pause in MP3/FM/BT modes, automatic search stations in FM mode.
8. (-) Long press: reduce volume. Short press: In FM mode is previous station. In MP3 mode is previous song.
9. (+) Long press: Increase volume. Short press: In FM mode is next station. In MP3 mode is next song.
10. (M) Short press: BT/USB/TF/FM/ AUX modes switch.




### QUICK START GUIDE
 
#### TWIST BASS LED WIRELESS SPEAKER

##### PAIRING YOUR SPEAKER

Your speaker will work best if it is within 33 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.

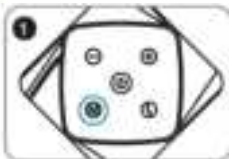

Press the "Ⓜ" button to turn to BT modes on the speaker. The speaker will "beep" when it is ready to connect.



From your smart phone or tablet, find a list of nearby devices and choose "DG-WARP". Enter "0000" if asked. The speaker will "beep" again when pairing is complete!



### QUICK START GUIDE

#### TWIST BASS LED WIRELESS SPEAKER

##### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

##### FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular



### QUICK START GUIDE

#### TWIST BASS LED WIRELESS SPEAKER

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

##### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Model: DG-WARP

BT ID: D042258  
FCC ID: 2AANZWARP

