



PC93128850 QSG

This art is supplied at 100% size. Do not resize, reshape or alter in any way.

BACK COVER

FRONT COVER

Controls & Connections Indoor Privacy Shutter Smart Camera SD Card Slot Quick Start Guide Micro USB Connection PK-00105711-1

INSIDE page 1


INSIDE page 2

Let's see what your Smart Camera can do: **Video Storage & Resetting**

4.5"

Enable Privacy Mode

To enable privacy mode, manually slide privacy shutter up. This disables audio and video functionality.

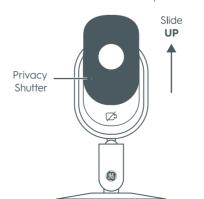

(2) Disable Privacy Mode.

To disable privacy mode, manually slide privacy shutter **down**. This restores audio and video functionality.



Choose Your Storage Option:

Cloud Storage

Your camera comes with a free trial of our premium Cloud video storage

> Your video will be stored in our secure Cloud accessed by two factor authentication.

SD Drive

Store all of your content locally on an SD card (sold separately) using the camera's built in SD drive.

How to Factory Reset Your Camera

- · Locate the pin hole on your camera.
- Press and hold the button for 3+
- · You can let go when the LED light turns red.

