


CR3504A-BK

CD Player

- USER MANUAL -

Product Description

Front Panel

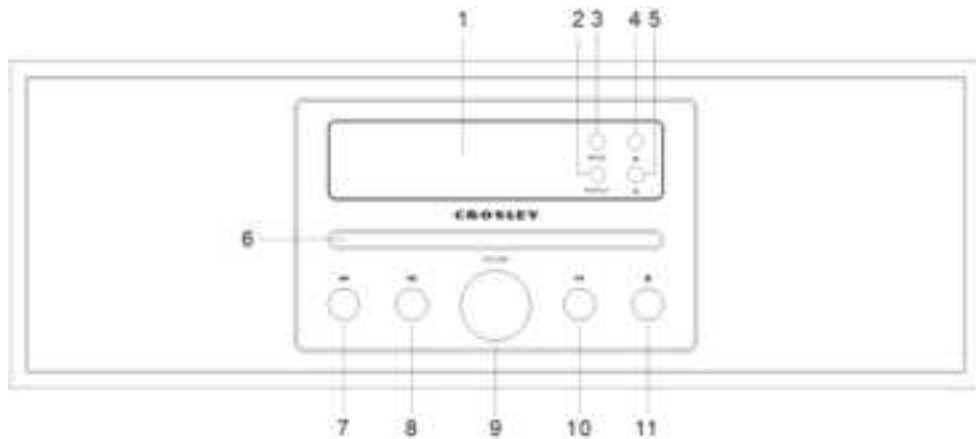

1. LED DISPLAY

2. **REPEAT:** When playing music, press “REPEAT” for the first time will repeat current playing. Press “REPEAT” twice will repeat the whole disc. Press “REPEAT” for three times will cancel repeat function.

3. **MODE:** Press to change the mode.

4. **Eject:** Open/Close the CD Door.

5. **POWER:** Press to power on/off the unit.

6. **DISC Tray:** The CD is loaded here.


7. **PREV:** In USB/Bluetooth mode:short press to previous section. In FM mode: short press to previous station. In CD mode: Short press to previous section. Hold and press to quick return button to quickly rewind playback. Press Play/Pause key again to resume normal playback.

8. **NEXT:** In USB/Bluetooth mode:Short press to next section. In FM mode:Short press to next station. In CD mode: Short press to previous section. Long press to quick forward button to quickly advance playback. Press Play/Pause key again to resume normal playback.

9. **VOLUME:** Rotary the knob to adjust the volume.

10. **PLAY/PAUSE:** In USB/CD/Bluetooth mode:Play/Pause. In FM mode:Automatically searching station. In LINE IN mode: Mute

11. **STOP:** When press the “STOP” key for the first time, the player will stop playing. Press “▶||” this button will continue to play from current music. When press the “STOP” key twice, the player will enter stop state. Press “▶||” this button will continue to play from first music.

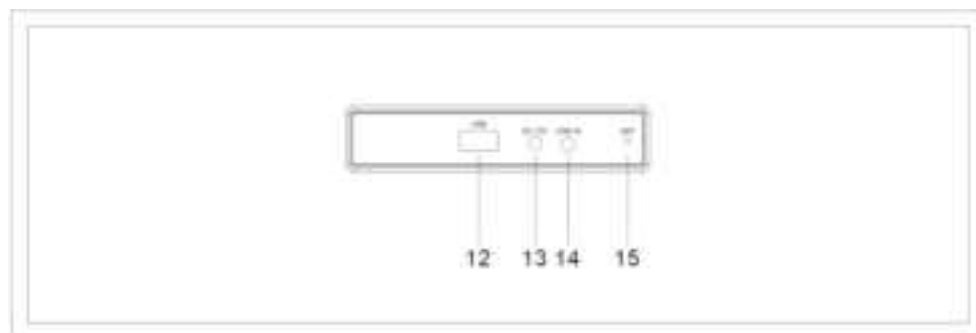

Back Panel


12. **USB Port (For music playback only)**

13. **DC 12V:** Power input jack

14. **LINE IN:** Audio input jack (connect another audio output device)

15. **ANT:** FM Antenna (Fixed)

Remote control

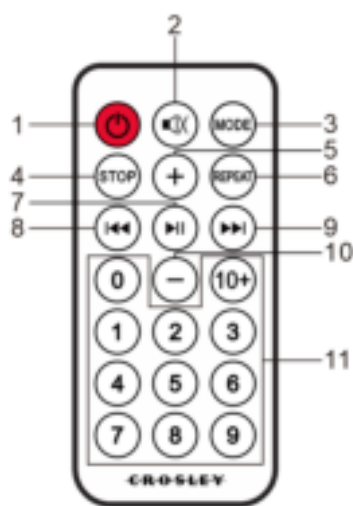

1. Power Key
2. Mute Key
3. Mode Key
4. STOP Key
5. Turn up volume
6. Repeat Key
7. Play/Pause Key(FM mode: Search Station)
8. Short press to last section/station. Long press to back forward in CD mode.
9. Short press to next section/station. Long press to fast forward in CD mode.
10. Turn down volume
11. Number Key

Connection

1. Plug the power cord to unit firstly and then plug the adapter to wall power outlet.
2. Press the POWER button on the unit to turn on the player.

Mode Selection

CD mode

1. Press Source button to enter CD mode.
2. Press the OPEN/CLOSE button on the unit or remote control to open the CD door.
3. Insert a CD in the disc tray with the label facing up and press the button to close the CD door.
4. Use the controls on the unit or the remote to begin playing the loaded disc.

Basic Operation:

-To skip to the next or previous track, press the Forward Skip or Backward Skip button correspondingly.

-To search fast forward or backward, press and hold the Forward Skip or Backward Skip button correspondingly until you reach the desired time. Press the Play/Pause button and playback will resume.

-STOP: When press the "STOP" key for the first time, the player will stop playing. Press "▶||" this button will continue to play from current music. When press the "STOP" key twice, the player will enter stop state. Press "▶||" this button will continue to play from first song.

-Repeat: When playing music, press "REPEAT" for the first time will repeat current playing. Press "REPEAT" twice will repeat the whole disc. Press "REPEAT" for three times will cancel repeat function.

-Number Key(0-9,10+)

For CD disc,

(1)To appoint 1-9 tracks, press the corresponding number keys(1-9)

(2)To appoint 10 track, press the number key (0)

(3)To appoint 10+ tracks, press the number key(10+). For example: the 15th song, press number key (10+) and (5).

(4)To appoint 20+ tracks, press the number key(10+) for twice. For example: the 25th song, press number key(10+) for twice time and press number key (5).

(5)If the track does not exist, the key is invalid.

For MP3 disc, press the number keys to select the tracks.

For example, the 38th song, press the number key(3) and number key(8).

USB MODE



- Insert USB flash driver with MP3 documents, the device will play the MP3 files automatically.

Bluetooth mode

The first time you use your Bluetooth device with this player, you will need to connect or “pair” it with the player first. Switch to the Bluetooth model, then use Bluetooth device to search the “**CROSLEY CR3504A**” pairing. There will be a prompt sound after the successful pairing. If the pairing device is disconnected, the unit will also issue a prompt sound.

FM mode

When you switch the unit to the radio mode, you can listen to the FM radio program in this mode.

- 1.This radio antenna is on the back of the machine. When you need to listen to radio, please open the FM antenna.
- 2.In FM mode, hold and press the Play/Pause key on the unit or remote control to automatically search station. It will save the station once searching completed. Press the “” or “” on the unit or remote control to select station.
3. Hold and press the PREV/NEXT to tune up or down the frequency band by 0.1MHz. If user miss your desired station, you can short press PREV/NEXT to move to their desired station within 2 seconds.

LINE IN mode:

Switching to LINE IN mode, use 3.5mm audio cable(not provided) to connect player with other audio output devices.

Trouble Shooting

If you are suffering from following problem, please refer to following supplied method. If the problem still can’t be solved, please contact the maintaining center.

Problem	Solution
No sound	1.To check the player connection between the mobile phone or other audio output device 2.The volume is turned down.Adjust the volume
Don’t play disc	1.To check whether the disc is put in the proper direction. 2.To check whether there is disc in the tray. 3.The disc is dirty. Please clean the disc.
The remote control does not work	1.To remove obstacles between remote control and player. 2.If the battery is exhausted, replace it with a new one. 3.The insulation sheet has been inserted in the battery compartment when shipped from the factory. Pull it out before use.
Button does not work	It may be caused by the power wave or other abnormality, please turn off the power and turn it on again after 10seconds.

Specification

Reference	CR3504A-BK
Playable disc types	CD/CD-R/CD-RW/MP3/WMA
Speaker	3” 6 Ω 10W x 2
FM Frequency Range	87.5-108MHz
Power Supply	Input AC 100V~240V 50/60Hz Output DC 12V--2A
Power Consumption	24W
Accessories included	AC adaptor, Remote Control

Note: Specification are subject to change without notice.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.