

- If you cannot eliminate the interference, the FCC requires that you stop using your.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

CARE

Keep the headphones dry; if they get wet, wipe them dry immediately. Use and store the headphones only in normal temperature environments. Handle the headphones carefully; do not drop them. Keep the headphones away from dust and dirt, and wipe them with a damp cloth occasionally to keep it looking new.

SERVICE AND REPAIR

If your headphones are not performing as they should, take them to your local RadioShack store for assistance. Modifying or tampering with the headphones' internal components can cause a malfunction and might invalidate their warranty.

SPECIFICATIONS

Transmitter:

Carrier Frequency 911.4 – 915.6 MHz
Power Source 12V DC, 250 mA
Modulation Method FM Modulation
Frequency Response 80 Hz – 20 kHz (6 dB)

Receiver:

Sensitivity <2 μ V (with 20 dB S/N)
S/N Ratio (@ -50dBm) >60 dB (A weight)
Audio Distortion <2%
Max. Audio output >8 mW
Power requirement 3 AAA alkaline or rechargeable batteries

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

PARTS AND ACCESSORIES

 
Parts and accessories are available at your local RadioShack store. Accessories are also available online at www.radioshack.com. Parts and accessories are available but not limited to the following. Visit your local RadioShack store or obtain a RadioShack catalog for a more complete listing of available accessories.

ACCESSORIES




Tired of the batteries dying right in the middle of your favorite song? RadioShack's wide variety of rechargeable batteries let you

control the power to your headphones so your favorite music is never interrupted again.

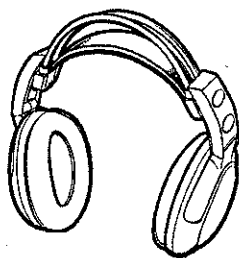

So you and your roommate can both enjoy the same music in different locations, RadioShack offers a complete line of additional wireless headphones for

 
your wireless headphone system.

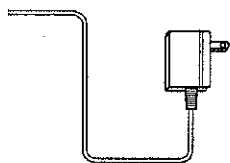


Just in case your AC adapter magically went missing or appears damaged, RadioShack carries

replacement AC adapters for every voltage. Don't forget to select the correct Adaptaplug™!

 You don't want to wait to use your new headphones until the batteries charge? You don't have to! To

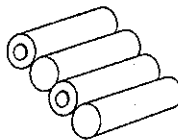

 let you use your headphones immediately, RadioShack carries a full line of alkaline batteries.

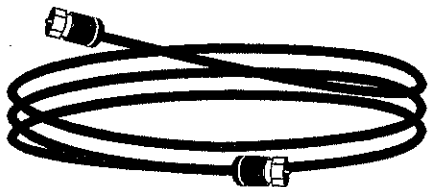

For the best possible stereo sound, check out RadioShack's awesome selection of audio cables. The best connection makes all the difference in your sound.

RadioShack Corporation
Fort Worth, Texas 76102

33-1196
AO0093AAA1
01A02
Printed in China