



11" Tablet

---

## PRODUCT GUIDE

Thank you for purchasing the **onn.** tablet powered by Android™ 13.

Featuring a fast and responsive Octa-core processor, this tablet is perfect for accomplishing everyday tasks, streaming music and movies, taking photos, checking emails, and engaging with social media.

 
The tablet offers 128GB of internal storage, Bluetooth connectivity, Memory card slot for up to 256GB of additional storage, on-the-go productivity services, and a utility app.

The following information will help you get the most out of your tablet.

What You Should Know to Ensure Best Performance:

- **Use the in-box charger and USB cable to charge your tablet.**
- Charge the battery completely before first use.
- While updates download in the background, tablet performance can be affected until completed.
- Close unused applications. Open apps that run in the background will affect overall performance.
- Battery Consumption: Play times on a fully charged battery will vary depending on your display settings, apps that remain open, and internet use(ie: streaming video content).
- It is recommended to use a tablet screen protector and tablet case to protect the tablet.
- As constant improvement,UI display may vary slightly.

## In The Box

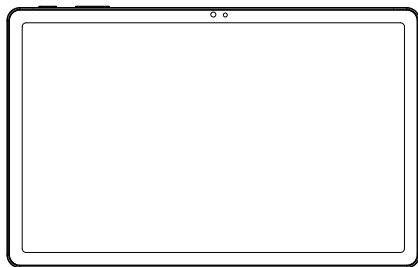


11" Tablet




Quick Start Guide



 User Manual

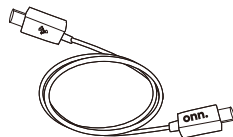

USB-C cable

 


Charger


Size: 47\*22\*39mm  
Input: 100-240V~50/60Hz,0.5A  
Output: 5V --- 3A  
9V --- 2.2A

## Getting to Know Your Tablet



 
Turn on tablet: Press and hold Power button for 4~5 seconds.



 Turn off tablet: Press and hold Power + Volume up button for 1 second.



   After turn on tablet, press and hold Power button for 3 seconds to call out Google Assistant.

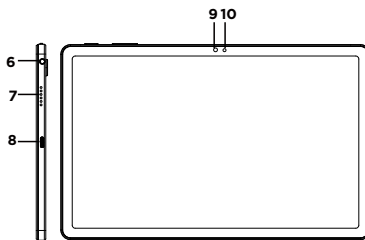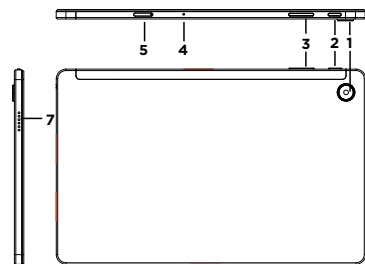


1. Rear Camera
2. Power On/Off
3. Volume Control
4. Microphone
5. Memory Card Slot
6. Headphone Port
7. Speaker
8. USB-C Charging Port
9. Front Camera
10. Light Sensor

## Preparing Your Tablet

 
### 1. Installing memory card

Install the memory card as shown in the figure.

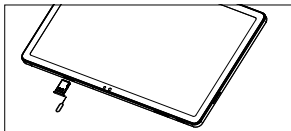

### 2. Charging your tablet

 It is recommended to fully charge the tablet before first use. **Use the in-box charger and USB cable to charge your tablet.** To charge the tablet, 1) plug the USB cable into the AC adapter, 2) attach the other end to the USB Type C input on the tablet.

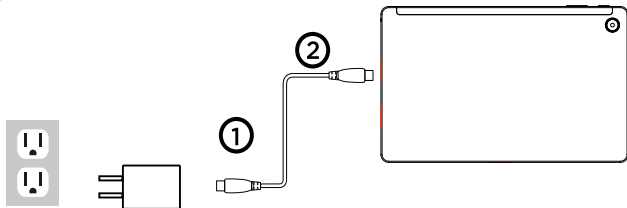

It is normal for the tablet to get warm while charging, playing high intensity games, or streaming video. Battery life will vary depending on usage.


Note: Leave tablet in well ventilated area while charging.

## Starting Your Tablet

 1. Press and hold the Power button for 4~5 seconds.


(If your tablet does not turn on, or instructs you to "Connect your charger", connect the AC adapter and charge the unit.)

2. At the Start-up screen, swipe up from the bottom of the screen to unlock.

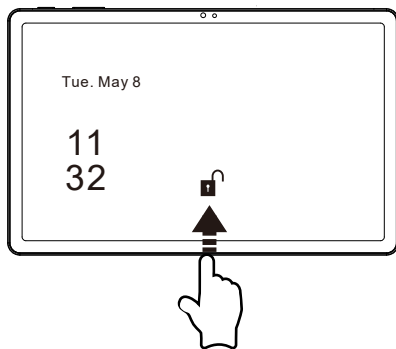

3. Once you've arrived at the Home screen, you can begin using your tablet.

## APP Launch At-a-Glance

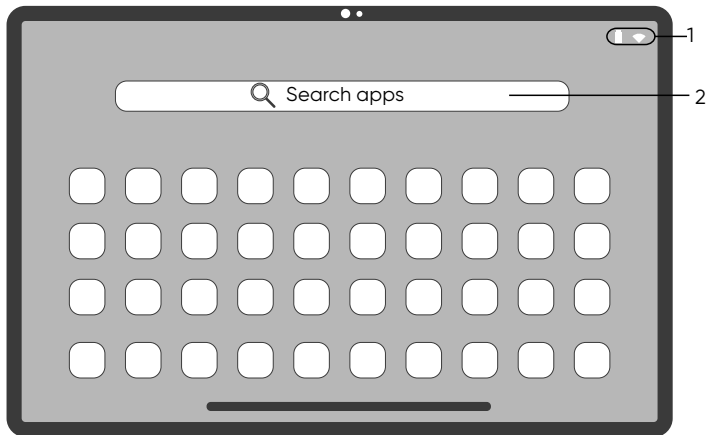 


- 1.Status Bar
- 2.Search Box

## Using the Camera



 
Tap on the Camera icon

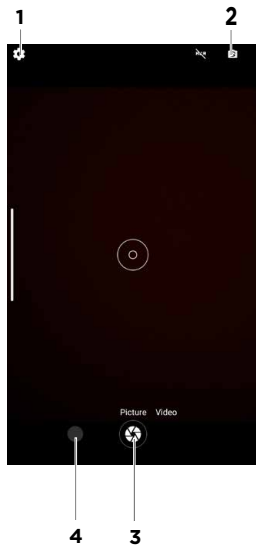

1. Camera Settings
2. Switch cameras(Front/Rear)
3. Take photo
4. Recent photo



## Touching and Typing

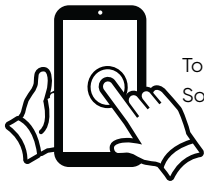 

To select an item on the screen, simply tap it once with your fingertip. Some items may require you to "double-tap".



To type in to a text field(i.e, when inputting your name, or a text field), tap the text field. The on-screen keyboard will appear, and allow you to type the information you wish to enter.



 
Touch and Hold: Keep your finger on an on-screen item until it glows or activates an alternate menu.



Drag: Move an App or object by touching and holding the image, then sliding it to the destination.



Slide: When there are extra "screens" to the side, slide one or more fingers from one side to another.



## Connecting to the Internet



In order to connect to the internet, you will need the following:

- A wireless router or an access point with a broadband internet connection.
- The name of your network(SSID), as well as the password or other credentials, if your network is secure.

The wireless router must support Wi-Fi 802.11 a/b/g/n/ac connections.

Go to "Settings" > "Network & internet" > "Wi-Fi" Tap on Wi-Fi to activate wireless connectivity.

The Tablet will scan for available Wi-Fi networks within range.

Secured networks will require a password. Once you have successfully entered your information the tablet will remember your settings.

## Connecting Bluetooth

Your Tablet is compatible with Bluetooth capable devices. Once your tablet searches and finds the Bluetooth device, follow on-screen instructions to initiate the pairing of the device with the Tablet. Add or "pair" a Bluetooth compatible device with your Tablet as follows:

 
- 1) Turn on the compatible Bluetooth device and make it discoverable.
- 2) Open the "Settings" > "Connected devices" .
- 3) Tap on Pair new device view available devices.



## Set up the Kids Space

Follow the steps below to set up Google Kids Space.



1. When asked who is going to use the device, tap **A child**. (If you've previously **set up** the tablet, tap on the Google Kids Space icon 🌟 )

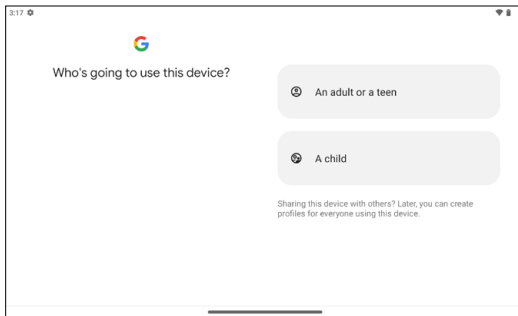


2. Sign into your child's existing Google Account or follow the prompts to create a new Google Account for your child under 13 (or the applicable age in your country).
3. When prompted to set up Google Kids Space, tap **Set Up**.
4. Edit your child's settings and interests.

## Turn off the Kids Space

  1. From the Google Kids Space home screen, press and hold the Parent menu .

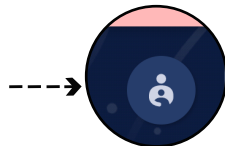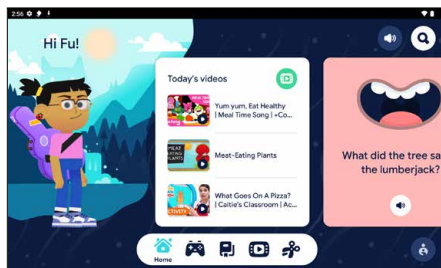


Parent menu

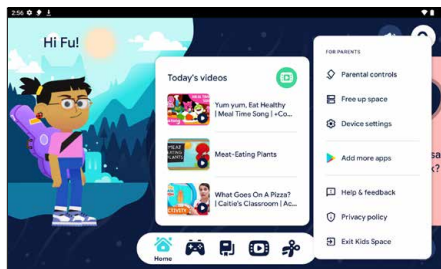 


## Turn off the Kids Space

 2. Get into Parents control.

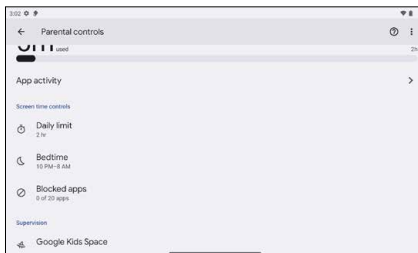


 3. Get into Google Kids Spaces and tap Turn off Google Kids Space.

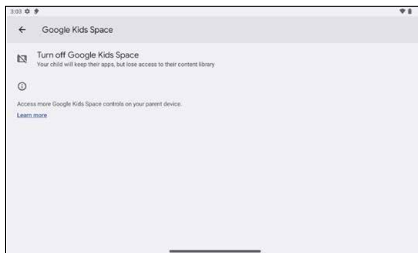


## Turn off the Kids Space

 4. Confirm your Google Account password to verify your identity as a parent

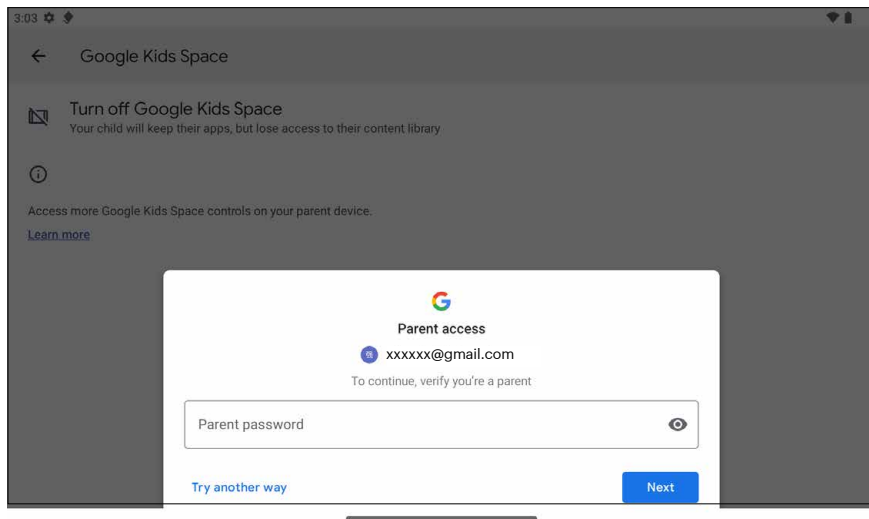


## Turn off the Kids Space


 
5. Select Turn off Google Kids Space in this device and turn off.

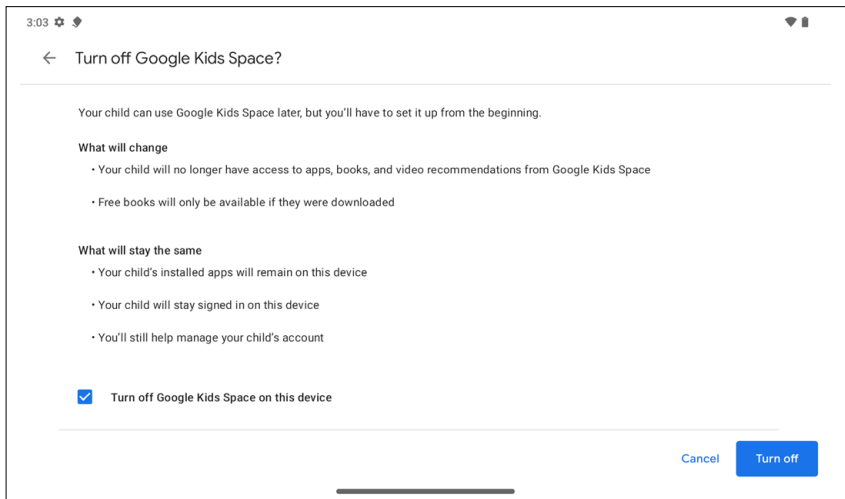




## Remove the Kids Space

  1. In the bottom right, press and hold the Parent menu  > Device Settings.

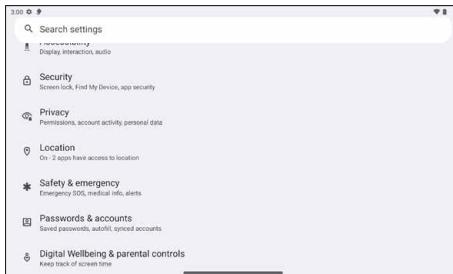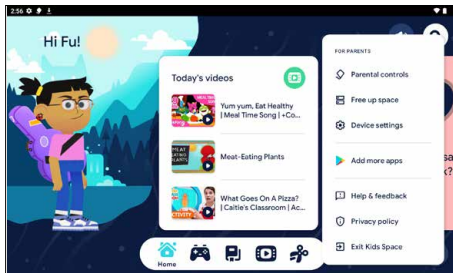


## Remove the Kids Space

 2. Go to Accounts to remove the account from the device. More details about Kids Space on [g.co/KidsSpace](https://g.co/KidsSpace)

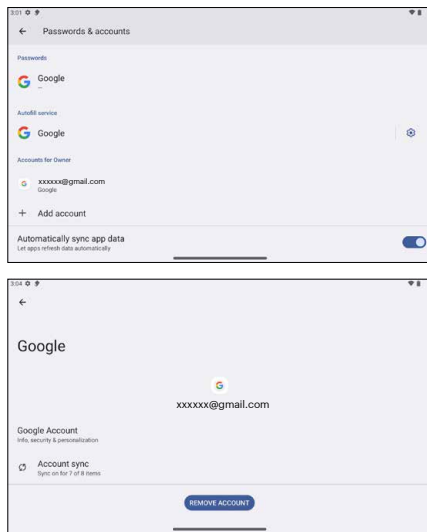


## Entertainment Space Set up

 
1. Slide the home screen to the right, follow the prompts to log in to Google Play.
2. You can choose to log in with a child account or an adult account.

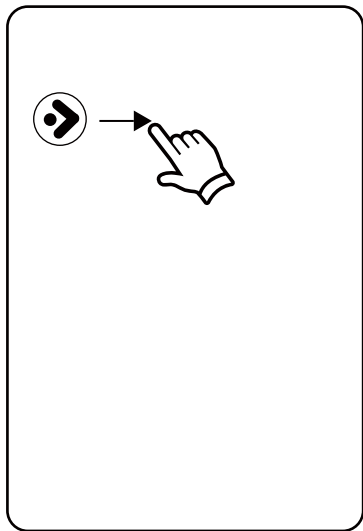

(Step 1)

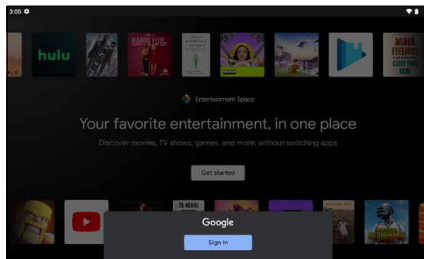 


(Step 1)

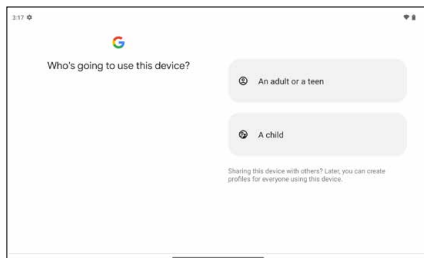 

(Step 2)

## Entertainment Space instruction

 3. Enter the Google account and follow the system prompts to enter the main interface of Entertainment Space.

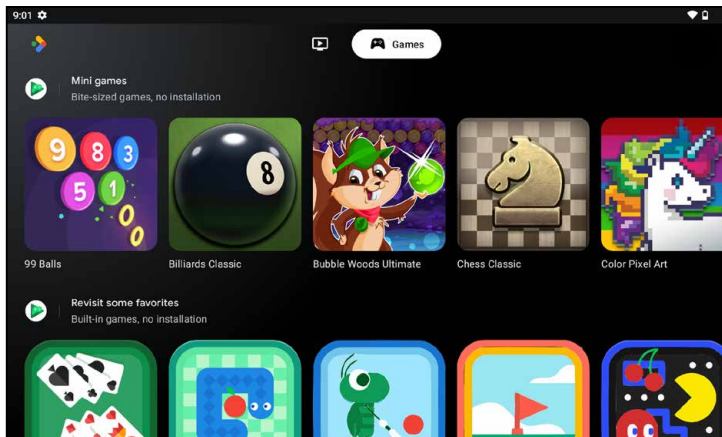


4. Tap Update to search for the latest updates of Entertainment Space.

## Tablet Updates

To ensure the tablet runs smoothly it is recommended to perform periodic system software updates, especially during initial set up of the tablet. You may receive notifications(on the Lock screen) from time to time that software updates are available.

Tap the notification to be directed to the update.

Other options to access updates:

1. Tab on "Settings"  > "System" > "System Update" .

**NOTE: To perform an update, you must be connected to Wi-Fi.**

## **Google Play Updates**

The first time you sign on to Google Play, updates will automatically start downloading on to the tablet. Installing a new application while multiple apps are downloading will reduce tablet speed and performance.

After all downloads and updates have been installed, the tablet will resume normal operating performance.

To view the progress of downloads working in the background, slide your finger down from the top edge of the screen.

## Important Safety Instructions

We would like you to have a safe and enjoyable experience.

Please read the following instructions and notices before using your tablet.

- Avoid using the tablet in extremely hot, cold, dusty, damp or wet environments.
- The tablet is not moisture/water-resistant. Avoid using the tablet around sources of water.
- Avoid dropping or forcibly placing the tablet onto a hard surface. This may damage the screen or internal electronic components and void the warranty.
- Do not use alcohol, thinner or benzene to clean the surface of the tablet. Use only cleaning products designed for computer tablet devices.
- Do not use the tablet while walking or driving.
- Excessive use of earphones at high volume may lead to hearing impairment. Limit earphone usage, and adjust the volume to a moderate level when doing so.
- The images in this guide may vary slightly from the actual product.
- Charge the tablet battery under any of the following circumstances:
  1. The battery level icon indicates low power, by showing a drained, red battery icon.
  2. The tablet powers-off automatically, and continues to do so even after restarting.
  3. On-screen keys do not work.
- Do not suddenly disconnect the tablet when formatting, uploading or downloading data. This can lead to program errors(e.g., system or screen "freezing".)
- Static discharge is normal and can occur in an electronic device. Although not life threatening, it may corrupt files or damage memory and its content.
- Dismantling the tablet will void the manufacturer's warranty.
- The tablet functions, hardware, software, and warranty information may be improved or modified by the manufacturer or their respective owners, and is subject to change without notice.

## Important Safety Instructions

1. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
2. WARNING: Only use attachments/accessories specified or provided by the manufacturer(such as the exclusive supply adapter, battery etc).
3. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
4. WARNING: To reduce the risk of fire or electric, do not expose this apparatus to rain or moisture.

The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids. Such as vases, shall not be placed on apparatus.

5. WARNING: Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.

6.  High sound pressure, Hearing damage risk, Do not listen at high volume levels for long periods.

Use the devices where the ambient temperature is between 0 and 35° C ( 32 to 95° F). Low-or high-temperature conditions might cause the device to change its behavior to regulate its temperature. Using Android device in very cold conditions outside of its operating range might temporarily shorten battery life and could cause the device to turn off. Battery life will return to normal when you bring the device back to higher ambient temperatures. Using the devices in very hot conditions can permanently shorten battery life.



## **The Fine Print**

Walmart warrants this product against defects in material or workmanship for a period of one(1) year from the original date of purchase. During this period, Walmart will replace a defective part with a new or refurbished part without a charge to you. If your unit is deemed unrepairable, **onn.** will replace the unit with a new or refurbished unit at Walmart's sole discretion. The customer is responsible for transportation cost and insurance charges(if applicable) to Corporate. It is the customer's responsibility to retain original packaging or provide like packaging in order to facilitate the warranty process. Walmart will incur no liability whatsoever to provide packaging for warranty items. Should the product be damaged due to insufficient packaging, the warranty may be voided. You must receive a return authorization number (RMA #) before sending the unit in for service. Service that is provided is warranted for the duration of the original warranty or 45 days whichever is greater.

## **Your Responsibility**

It is strongly recommended to make a backup copy of the contents on your hard drive in case of operational failure. Walmart will not be held liable for content that is on the device. Retain a copy of the bill of sale to provide proof of purchase. The warranty extends only to defects in materials or workmanship as limited above and does not extend to a cracked screen, damaged USB or DC port, cosmetic damage, or any other products, parts or accessories that have been lost, discarded, damaged by misuse or accident, neglect, acts of God such as lightning, voltage surges in the home, improper installation, or serial number rendered illegible.

## **The Fine Print**

Need help? We're here for you every day from 7 a.m. – 9 p.m. CST.

Give us a call at 1-888-516-2630

You will be instructed on how your claim will be processed so have information available including date of purchase, serial number and the problem with the product. Should a problem be determined to be within the limits of the warranty you will be provided with an(RMA) authorization number and instruction. Proof of purchase must be confirmed before any warranty service can be provided. Should a claim not be covered by the limited warranty, you will be asked whether you wish to have service provided for a fee.

Google, Android, Google Play and other marks are trademarks of Google LLC.

## Certification Information



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**Intertek**

**5014649**

**CONFORMS TO UL**

**STD.62368-1.**

**CERTIFIED TO CSA**

**STD.C22.2 NO.62368-1**

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## ISED Statement

- English: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

- French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. L'appareil numérique du ciem conforme canadien peut - 3 (b) / nmb - 3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

L'appareil destiné à fonctionner dans la bande 5150-5250 MHz est uniquement destiné à une utilisation en intérieur afin de réduire le potentiel d'interférences nuisibles aux systèmes mobiles par satellite cocanaux.

Specific Absorption Rate (SAR) information: This device meets the government's requirements for exposure to radiowaves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types: device has also been tested against this SAR limit.

This device was tested for typical body-worn operations with the back of the phone kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

## SAR English

### Specific Absorption Rate (SAR) information:

This Tablet meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. ISED RF Exposure Information and Statement the SAR limit of Canada (ISED) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the Tablet kept 0mm from the body. To maintain compliance with ISED RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the Tablet. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with ISED RF exposure requirements, and should be avoided.

## France

### Informations sur le débit d'absorption spécifique (DAS):

Cette tablette répond aux exigences du gouvernement en matière d'exposition aux ondes radio. Les lignes directrices sont basées sur des normes élaborées par des organisations scientifiques indépendantes à travers une évaluation périodique et approfondie des études scientifiques. Les normes comprennent une marge de sécurité substantielle conçue pour assurer la sécurité de toutes les personnes, quel que soit leur âge ou leur état de santé. Information et déclaration d'ISDE sur l'exposition aux RF la limite DAS du Canada (ISDE) est de 1,6 W / kg en moyenne sur un gramme de tissu. Types d'appareils: la tablette a également été testée par rapport à cette limite SAR. Cet appareil a été testé pour des opérations typiques portées sur le corps avec le dos de la tablette gardé à 0 mm du corps. Pour maintenir la conformité avec les exigences d'exposition RF d'ISDE, utilisez des accessoires qui maintiennent une distance de séparation de 0 mm entre le corps de l'utilisateur et l'arrière de la tablette. L'utilisation de clips de ceinture, d'étuis et d'accessoires similaires ne doit pas contenir de composants métalliques dans son assemblage. L'utilisation d'accessoires qui ne satisfont pas à ces exigences peut ne pas être conforme aux exigences.