

CAUTION-ELECTRIC TOY
 NOT RECOMMENDED FOR CHILDREN UNDER 6 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK.
 INPUT: 120VAC, 60HZ 3W ONLY
 OUTPUT: 7VDC, 0.15A

OPERATING INSTRUCTIONS

BATTERY CHARGING:

1. Plug the wall pack battery charger to the wall outlet.
2. Click the battery pack into the charger. Make certain the battery pack is secure in charger.
3. To disconnect, push the button of the charger (See Diagram 1) and simultaneously slide battery pack out.
4. You should charge the battery pack for 8 hours for the first two times. Then subsequent charges will only require 4 hours.
5. After charging, the battery pack will be warm. This condition is normal for the fully charged batteries.
6. If the speed of the car slows down suddenly it's time to recharge.
7. After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging. Recharging a warm or hot battery will greatly shorten the use life of the battery.

BATTERY PACK CARE

- Make sure the battery pack and connectors of the charger are dry before recharging.
- Battery packs can be charged for much longer periods without harm. However we recommend unplugging the battery pack if the battery pack will not be used for several days.

CAUTIONS

- Do not charge a battery pack that is hot, wet or shows leakage or corrosion.
- The battery pack may explode if disposed of in fire!
- Do not disassemble the battery pack.

HOW TO INSTALL BATTERIES IN VEHICLE

1. Make sure the ON/OFF switch is at the "OFF" position. (See Diagram 2)
2. Install the 6.0V batteries into the battery compartment. Make sure the (+) (-) polarity is correct.
3. Turn the locking latch in anti-clockwise direction to secure the battery pack inside the battery compartment. (See Diagram 3)

HOW TO INSTALL BATTERY IN TRANSMITTER

1. Slide open the battery cover of the transmitter. (See Diagram 4)
2. Load a new 9V battery; make sure that the polarities, as indicated by the batteries' plus (+) and minus (-) signs, correspond with the diagram of the battery compartment.
3. Replace the battery cover.

HOW TO PLAY

1. Build up antenna by passing the cable through the antenna tube provided and plug into the vehicle tightly. Otherwise the vehicle will not work.
2. Push the ON/OFF Switch to the "ON" position of the vehicle. (See Diagram 2)
3. Extend the antenna of the transmitter to full length.

 


DIAGRAM 1



DIAGRAM 2



DIAGRAM 3



DIAGRAM 4

CAUTION-
FOR STRID TOY
 Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.
 INPUT: 120VAC-60Hz 3W ONLY
 OUTPUT: 7VDC, 0.15A

FORWARD RUNNING (TURBO POWER BOOST)

1. Pull the trigger backward for forward running. (See Diagram 5)
2. Pull the trigger to half way for normal speed.
3. Pull the trigger to full extension for top speed.
4. Release the trigger half way to resume normal speed.

REVERSE RUNNING

1. Pull the trigger forward for reverse running. When the car is in reverse, it will only operate at normal speed. (See Diagram 6)

STEERING OPERATION

1. Turn the steering wheel to the anticlockwise or clockwise direction while pulling the trigger to the backward direction at the same time, the car will turn left to right and turn forward. (See Diagram 8)
2. Turn the Steering Wheel to the anti-clockwise or clockwise direction while pulling the trigger to the forward direction at the same time, the car will turn left or right and turn backward. (See Diagram 9)

STOP OPERATION

1. Release the trigger to stop the vehicle. (See Diagram 10)

ADVANCE OPERATION

DRIFTING

1. Pull the trigger to accelerate at maximum speed, and suddenly turn the STEERING CONTROL wheel to left or right at the same time.

DONUT SPINS

1. Pull the trigger to accelerate at maximum speed, and constantly turn the STEERING CONTROL wheel to left and right at the same time.

DRIFTING TIPS

1. For better drifting action, drive the car on the smooth surface.

FRONT WHEELS STEERING ADJUSTMENT

1. If the vehicle does not run straight, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 11)
2. If the vehicle runs toward left, turn "Steering Alignment Lever" towards "F".
3. If the vehicle runs toward right, turn "Steering Alignment Lever" towards "L".

PERFORMANCE TIPS

- Do not drive the car on grass, sand or carpet.
- Do not drive the car through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure the ON/OFF switch on your vehicle is at the "OFF" position when it is not in use.
- Do not bend the antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators, and steel grids in building up will affect the operation of your vehicle.
- Do not leave the vehicle or transmitter near sources of heat or in direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when not in use.
- Non-rechargeable batteries are not to be recharged (9V Battery).
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- For Transmitter: 9V
- For Vehicle: 6.0V Ni-Cd Rechargeable Battery Pack
- The supply terminals are not to be short-circuited
- Do not use rechargeable batteries for (9V battery).
- Do not overcharge the rechargeable battery pack.
- The charging hours for the rechargeable battery pack is 4 hours.

- Batteries are to be inserted with the correct polarity
- ATTENTION: Battery/Batteries should be installed by adult only
- The toy is not intended for children under 6 years of age.
- The toy must be used with the recommended transformer.
- The transformer is not a toy.
- Toys liable to be cleaned with liquid are to be disconnected from the transformer before cleaning.
- The instructions shall be provided which give details concerning cleaning and maintenance when necessary for safe operation of the toy
- The transformer or battery chargers used with the toy are to be regular examined for damage, to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this transformer or battery charger until the damage has been repaired.
- Keep packing for reference since it contains important information.
- Exhausted batteries are to be removed from the toy.

ATTENTION PARENTS:
 IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

 


DIAGRAM 5

 


DIAGRAM 6



DIAGRAM 7



DIAGRAM 8



DIAGRAM 9



DIAGRAM 10



DIAGRAM 11