


型号 PXN-Ravine Pro (308A英文版) 72*172 MM 尺寸 **PXN** 材质/克数/效果 书纸/100克/无膜 折成方式/页数 风琴折 / 10页 说明书 四色CMYK+PANTONE 151C ● 印刷颜色 版本 修改点备注 "Pulse pro 3" 修改 "Ravine Pro" 制作人 廖海燕 内容总审核人 周灯航 2023-6-29 发出日期


正面

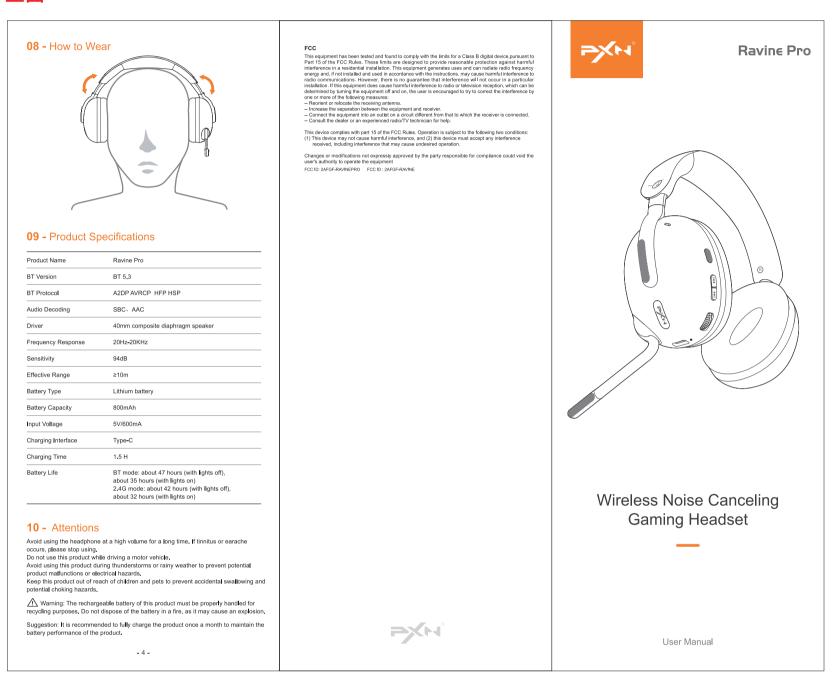

反面

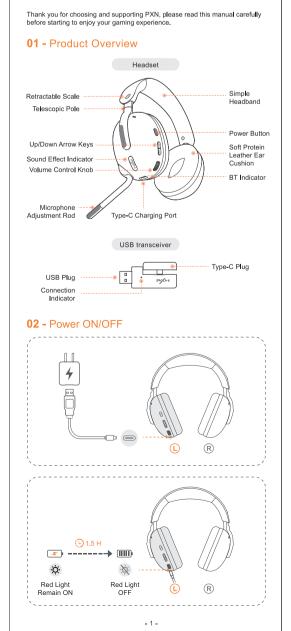

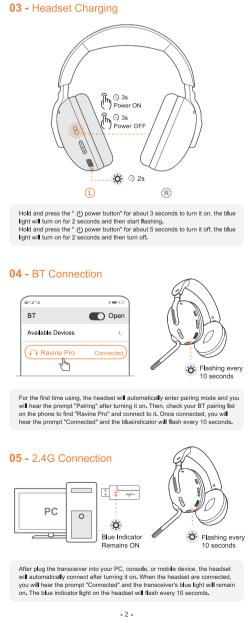

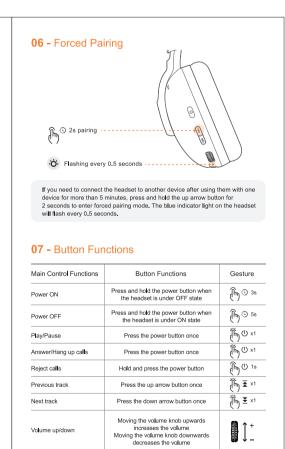

Double-click the down arrow button to switch to another sound effect You will hear a prompt when the sound effect has been changed

Double-click the up arrow button to switch to another working mode You will hear a prompt when the mode has been changed

Pu**I** down to open/Pu**II** back to dose You wi**I** hear a prompt when it switches on and off

Hold and press the up arrow button You wi∎ hear a prompt

To turn off the light, press and hold the down arrow key To turn on the light, press and hold the down arrow key once more

- 3 -

(jh) **¥** ×2

(h) ₹ ×2

Music mode (green light)

Movie mode (ice blue light)

ANC mode Transparent mode Normal mode

Microphone on/off

Forced pairing

LED light on/off