

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter module must not be co-located or operating in conjunction with any other antenna or transmitter.

The modular can be installed or integrated in mobile or fix devices only. This modular cannot be installed in any portable device.

This End equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

IMPORTANT NOTE:

In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

End Product Labeling

The final end product must be labeled in a visible area with the following:

“Contains FCC ID: 2AFG6-RK3288”.

Manual Information to the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

 
1 Software Description

The main achievement of the 3288 Module of meeting machine in the main interface machine android platform optimized display, a variety of entrance applications systems integration, to achieve a more compact display, also provides users with a more efficient operation of the inlet.

2 Use Introduction


Open meeting machine into the main interface, as the picture 2-1 shows.

- page upper left corner of the display screen wireless transmission, drop-down can view information;
- intermediate page displays the current date and time;
- upper right corner of the page displays the current network connection status and time, network connection status is divided into two kinds of wired networks and wireless networks, the current state of the icon shows the wired network.

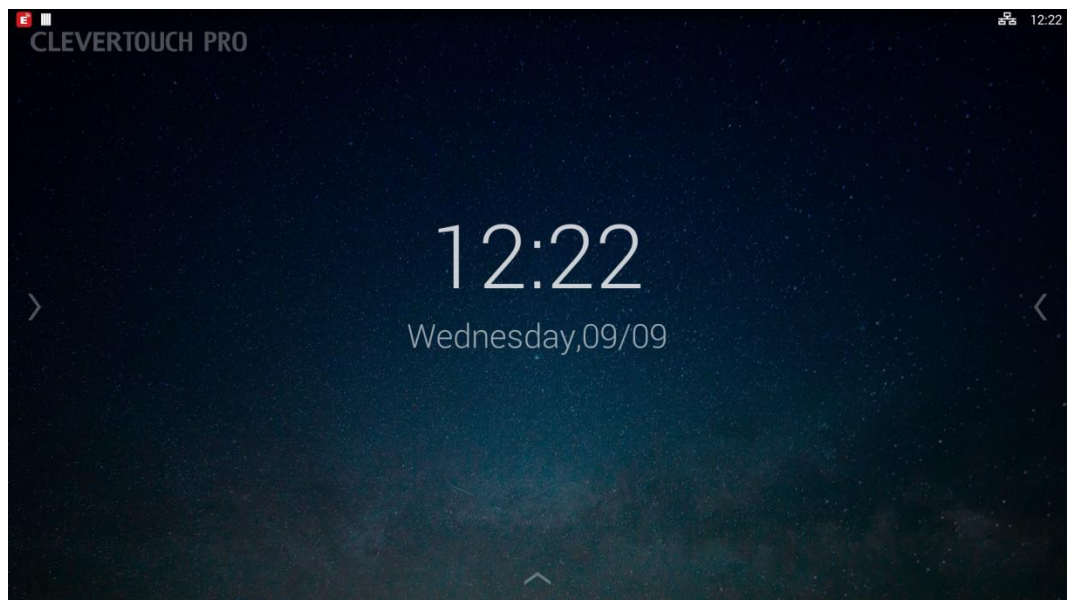


2-1 Main interface

 Click  on the main interface on the left, you can enter the main menu page, as the picture 2-1-1 shows, the same as the main interface on the right , as the picture 2-1-3 shows. You can click the button on the list into Lynx Pro, Files, Active, Montage, Eshare, Brower, Setting, Apps.

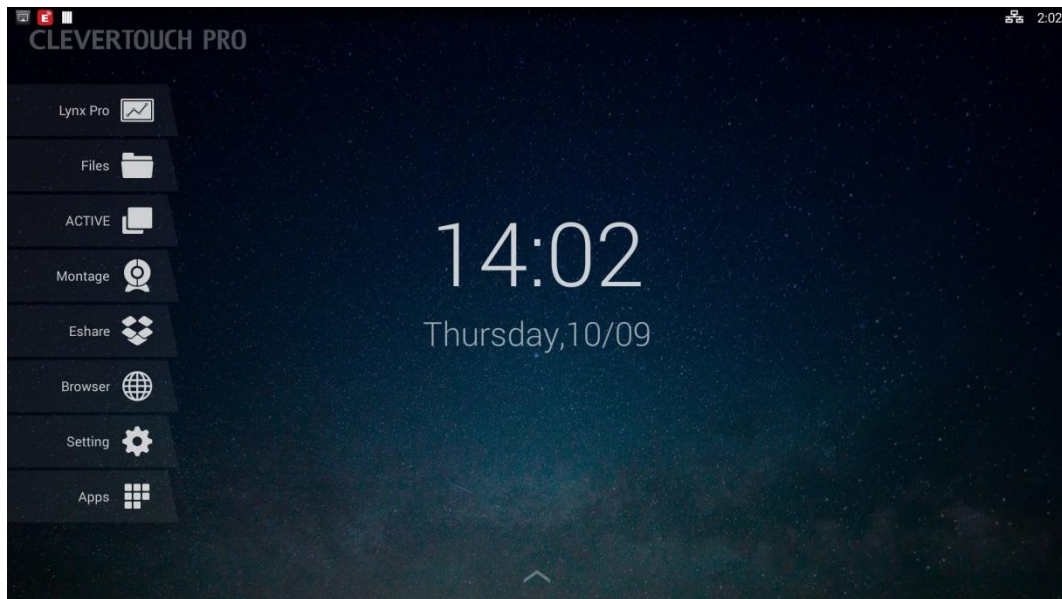

2-1-2 main_left

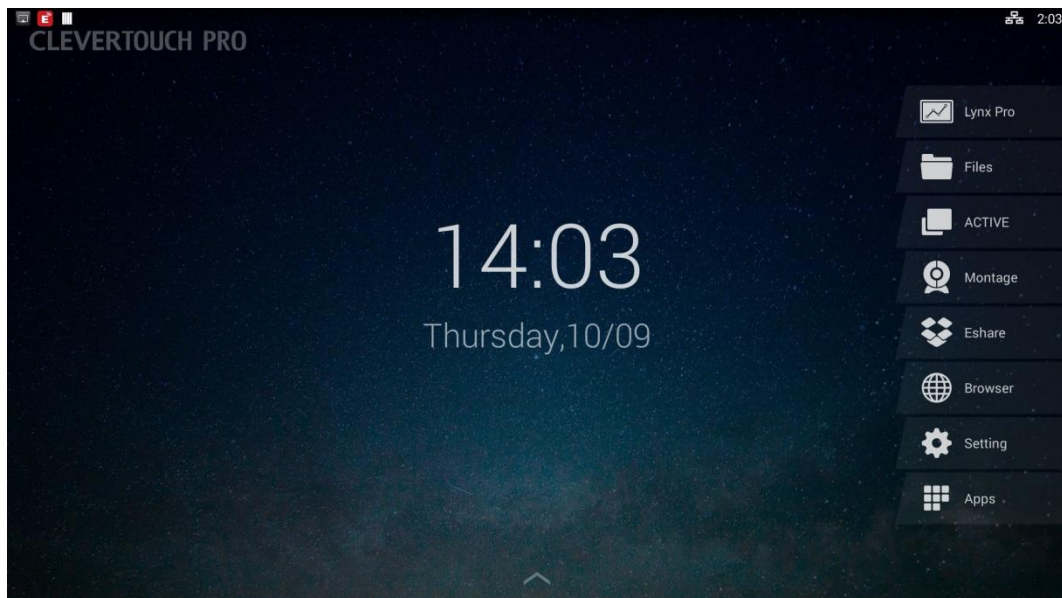 

2-1-3 main_right

2.1 Lynx Pro



Click  on the main interface, you can enter the Software of Lynx Pro, and edit your work with the Lynx Pro.

2.2 Files

 


Click  on the main interface, you can enter the files of the system. And then you can manipulate files, Such as opening files, manage folders, etc.

2.3 Active



Click  on the main interface, you can enter the page of Background application switching and cleanup, such as the picture 2-3-1 shows. Click the active you can switch current application software. Slide up or down you close the active.

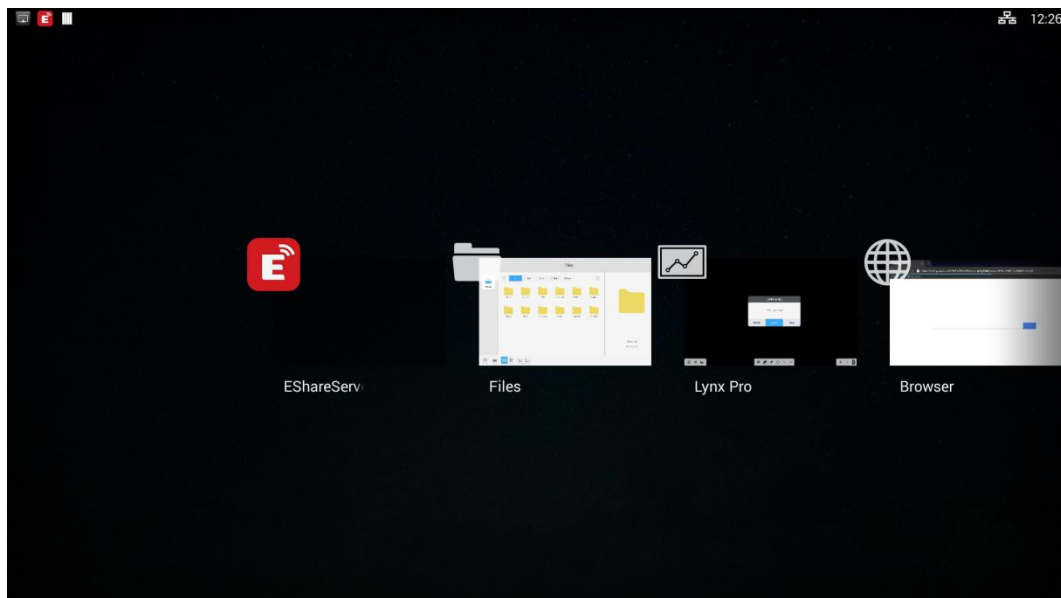

2-3-1 active

2.4 Montage



Click  on the main interface into Teleconferencing. You can have a meeting with people far away.

2.5 Eshare



Click  on the main interface, you can remotely operate this meeting machine.

2.6 Browser



Click  on the main interface to open the browser. You can browse the web resource with the browser.

2.7 Setting

 


Click  on the main interface into the page of setting the system.

2.8 Apps




Click  on the main interface into the page of apps, as the picture 2-8-1 shows.

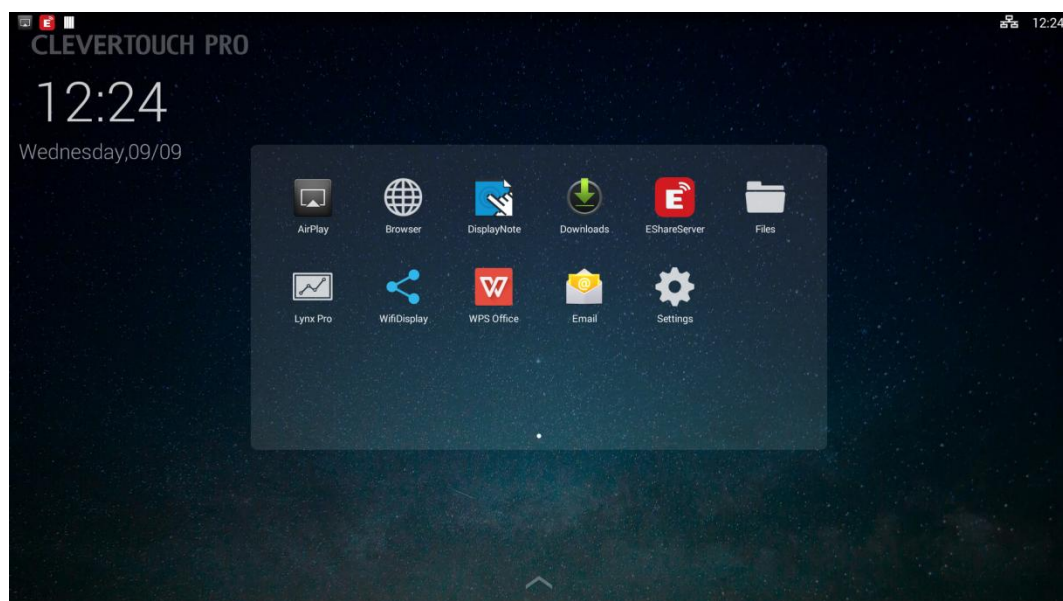

2-8-1 apps


2.9 Switching desktop background

 In the main interface, long press to bring up the desktop background switches, as the picture 2-9-1 shows.

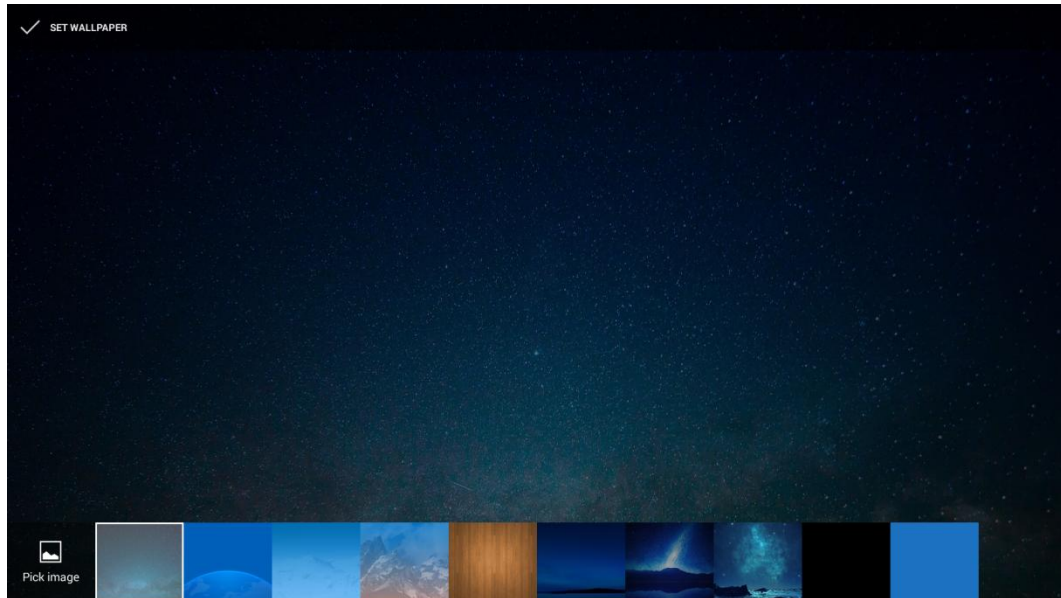

2-9-1 Switching Background

 For example, the following effects occur after the application is selected on a black background as the picture 2-9-2 shows.

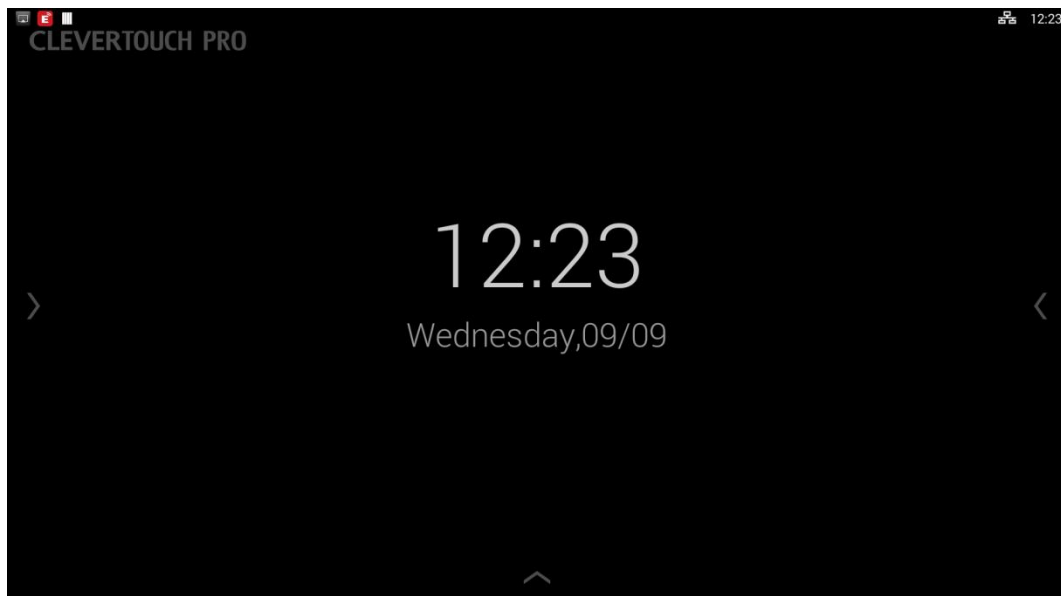

2-9-1 black background