

75 mm


75 mm

375 mm

75 mm

75 mm


75 mm

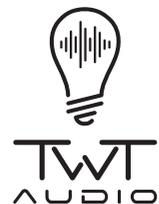


TW340 Quick Start Guide

REVO Wireless Headphone

Version : 5.3

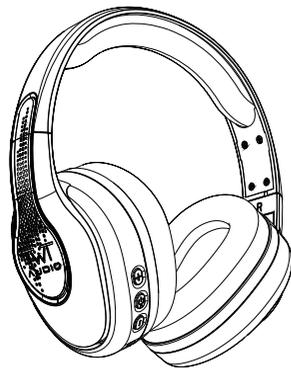

Product Diagram

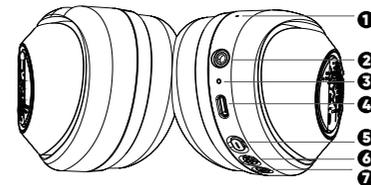

1. Microphone
2. 3.5mm Audio Port
3. LED Indicator
4. USB-C Charging Port
5. Volume - / Previous Track
6. Power Button
7. Volume + / Next Track

Button Controls

Function	Button Direction	Tone
Power On/Off	Press and hold the <i>Power Button</i> for 3 seconds.	Hello/Goodbye
Play/Pause	Press the <i>Power Button</i> once.	Beep
Increase/Decrease Volume	Press the <i>Volume +/- Button</i> once.	Beep at Max Volume Beep at Min Volume
Next Track	Press and hold the <i>Volume Up Button</i> for 2 seconds.	Beep
Previous Track	Press and hold the <i>Volume Down Button</i> for 2 seconds.	Beep
Answer Phone Call	When there is an incoming call, press the <i>Power Button</i> once.	Beep
Decline Phone Call	When there is an incoming call, press and hold the <i>Power Button</i> for 2 seconds.	Beep
Start Wireless Pairing	Press and hold the <i>Power Button</i> for 4-5 seconds when the headphones are powered on.	Pairing- You Are Connected
Auto Connect After Previous Pairing	When powered off, press and hold the <i>Power Button</i> for 3 seconds. The headphone will auto-connect to the previously connected device.	We Are Connected
Switching Sound Curve	Double tap the <i>Power Button</i> to change a sound curve profile. EQ #1 - leatherette ear cushions. EQ #2 - mesh sport ear cushions.	Beep (EQ #1) Beep Beep (EQ #2)

LED Indicators

LED Indicator LED	Status	Tone
Red LED On	Charging	N/A
Blue LED On	Fully Charged	N/A
Flashes Red Every 5 Seconds	Low Battery	Battery Low
Flashes Blue And Red	In Pairing Mode	Pairing
Blue LED On	Paired With A Wireless Device	We Are Connected
Blue LED Flashes Once Every 5 Seconds	Playing Music	N/A

HOW TO USE

Charge:

1. Connect the USB-C charging cable to the headphone via the USB-C charging port.
2. LED lights are red when charging and LED lights are blue when fully charged.
3. Unit will be fully charged normally after 2 hours. Up to a 20 hour battery life on full charge. (TW340 Wireless Headphone will not function while charging).

Pairing:

1. With the headphones are turned off, press and hold the power button for 4-5 seconds to enter pairing mode. LED will rapidly flash blue and red.
2. On your device turn on the BT function and set it to search for BT devices.
3. Select "TWT REVO 340" from the list of found devices.
4. When paired, the blue LED is on; When playing music, the blue LED flashes once every 5 seconds. (The tone will be "we are connected" when connecting the device with the headphone).
5. Multi Point: Turn off BT on both devices. Turn on BT on device #1. Hold the power button on TW340. Wait for prompt "Hello pairing." Once you hear prompt "You are connected" turn off BT on device #1. Turn on BT on device #2. Hold the power button on TW340. Wait for prompt "Hello pairing." Once you hear prompt "You are connected," you can now turn the BT on device #1 and both devices will now be "Paired."

Note:

- During pairing, if the headphones are not connected to any device within 10 minutes, the headphone will automatically turn off.

AUX In (3.5MM Port):

When the headphone battery is exhausted or powered off, the user can insert the 3.5mm audio cable and use it as a wired headphone. (The headphone will need to be powered off to use with 3.5 mm audio cable)

Reset: Press "volume -" button three times when headphone is in pairing mode but not connected to a device. This process will clear the existing pairing list.

Cushion Replacement:

Please go to www.twtaudio.com for instructions on how to replace and swap ear cushions.

Accessories included:

1. Charging cable (x 1)
2. 3.5mm audio cable (x 1)
3. Bonus pair of mesh ear cushions (x1)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SPECIFICATIONS

- Charging port : USB-C
- Charge time : Approximately 2 hours
- Play time : 20 hours at 50% of full volume
- Frequency response : 20-20,000Hz
- Sensitivity : 98dB±3dB
- Impedance : 32 ohms
- Detachable audio cord length : 1.2 meters
- Detachable audio cord material : TPE
- Detachable audio plug type : 3.5mm TRS
- Volume control : On-ear push button
- Driver unit : 40mm (neodymium magnet)
- Warranty : 2-year



105 mm