
铜版纸说明书彩色印刷 尺寸: 80X103MM



PRGB-12/2385 PORTABLE BLUETOOTH SPEAKER WITH LED LIGHTS & CARABINER

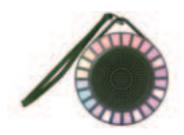

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

Getting Started

Remove the product from the box.

 Please retain all packaging until you have checked and counted all the parts and the contents against the Package Contents list.

- Package Contents

 
 Portable Bluetooth Speaker
- Type-C Cable Lanyard
- Instruction Manual

Key Features

- Portable Bluetooth Speaker with RGB Lights Connect & stream wireless musi
- Built-in Micro-SD card slot
- Speaker power 3 watts
- Rechargeable battery 500mAh
- Includes carabiner

SAFFTY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the speaker.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs
- Do not use the unit with wet hands.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use. Keen the unit out of reach of children.
- This unit is not a toy.



Number	Item	Function	
1	MICRO SD (TF) CARD SLOT	Micro SD (TF) card input	
2	DC 5V	Charging port	
3	LED INDICATOR	Charging / Bluetooth	
4		Long press for volume decrease.	
	VOLUME DECREASE - /	Bluetooth/TF card mode: short press to previous track.	
	PREVIOUS TRACK/STATION	FM radio mode: short press to the previous already saved	
		radio station.	
5		Long press for volume increase.	
	VOLUME INCREASE + / NEXT	Bluetooth/TF card mode: short press to next track.	
	TRACK/STATION	FM radio mode: short press to the next already saved radio	
		station.	
6	LIGHT BUTTON	Short press to change the color changing light pattern	
7	MODE / TWS BUTTON	Short press to change the mode between Bluetooth / TF /	
	MIODE / TWS BUTTON	FM radio, long press for TWS connect or disconnect	
8	ON/OFF / PLAY/PAUSE /	Long press to turn the speaker On or Off, short press for	
	SCAN / PHONE	PLAY/PAUSE/scan FM radio stations (only in FM radio mode)	

INSTRUCTIONS FOR USE Charging the Speaker

For best results, fully charge the unit before use

- 1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the
- 2. Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take about 1.5-2 hours to fully charge the battery.

Turn On/Off the Speaker

Long press the ON/OFF button to turn on/off the unit.

Pairing your device with the Speaker -

Your Bluetooth Speaker can stream wireless audio from any Bluetooth enabled device within the range of up to 33 feet. Simply follow the below steps.

- Turn ON the speaker.
- 2. You would hear an indication tone, and LED would flash blue rapidly. The speaker is now in pairing
- 3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
- It will search for available Bluetooth devices.
- 5. Powerhouse Bluetooth Wireless Speaker would appear as "SL Portable Speaker", in the list of searched devices. Select it from the available list of devices.
- 6. You might be prompted with "Pair with SL Portable Speaker?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
- 7. If required, enter the password '0000' to confirm pairing.
- 8. Once paired successfully, another indication tone would be heard, and LED would stay blue.
- 9. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat

Play your favorite song on the Bluetooth source device and music would now stream through the

Talking using the Bluetooth Speaker

ease ensure that you are paired with the Bluetooth Speaker to use the below functions.					
Function	Operation	Button			
Answer Incoming Call	Incoming Call	Press the Phone once to answer an incoming call.			
Reject incoming call	Incoming Call	Short press the Phone button twice			
End Call	Incoming Call	After your phone conversation, short press the Phone			
		button			
ncrease Volume	During a call	Press and hold the + button to increase the volume			
Decrease Volume	During a call	Press and hold the - button to decrease the volume			
Redial last number	Standby mode	Short press the Phone button twice			
	and connected				
	to a device				

Listening to Wireless Music

ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Increase volume	Playing music	Press and hold the + button to increase volume.
Decrease volume	Playing music	Press and hold the - button to decrease volume.
Pause	Playing music	Short press PLAY/PAUSE button once to pause music
Play	Pause	Short press PLAY/PAUSE button once to resume music
Previous track	Playing music	Short press the PREVIOUS TRACK/STATION button to the previous track
Next track	Playing music	Short press the NEXT TRACK/STATION button to the next track

Note: An indication tone will alert you when the volume is adjusted to maximum level.

TWS pairing use (if you own 2 Bluetooth Speakers)

- Make sure both speakers are "ON" and not paired with any Bluetooth device. An indication tone would be heard from each speaker.
- Long press the TWS button on master unit.
- Both units will wirelessly connect with each other, and you would hear an indication tone after they
- Activate the Bluetooth function on your source device (Mobile Phone, Tablet etc). Please refer to
- manufacturer's instructions for instructions on enabling Bluetooth on your device. Search for available Bluetooth devices and you would find "SL Portable Speaker" – Pair it with this
- You might be prompted with "Pair with SL Portable Speaker?" message on your source device, with
- If required, enter the password "0000" to pair with the device.
- You can now stream wireless music on your speaker through your source device.

Note: TWS stands for True Wireless. If you want to separate 2 speakers again for individual use, long nress the TWS button on any one speaker

Listening to Music using Micro SD (TF) Card Slot

Turn on the speaker.

2. Insert Micro SD (TF) card into the Micro SD (TF) card slot. An indication tone would be heard, and 3. Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button to move forward

4. Short press PLAY/PAUSE button to Play or Pause a track. Note: Micro SD (TF) Card: Supports up to 16GB; Supports music file format: MP3. Micro SD (TF) Card not

or backward on your playlist.

Turn on the speaker

2. Connect the USB charging cord (included) to the DC 5V charging port of the speaker, and leave the other end of the cable open. This cable servers as FM antenna for better reception.

3. Short press the MODE button each time until it reaches FM radio mode with sound from a FM radio 4. Short press the SCAN button for searching and recording all radio stations within frequency range

87.5-108MHz. 5. Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button for listening next or previous already saved radio station

1. Short press the MODE button to switch different functions of the speaker. The functions are -Bluetooth / Micro SD (TF) / FM radio. (Note: This switching function cannot work in TWS pairing use.)

When the speaker is not in use, turn OFF the device to save the battery power 3. Do not overcharge the speaker.

Color Changing light Mode (LEDs are not replaceable)

2. While playing, short press the "LIGHT" button each time to change 7 different color changing light 3. Long press the "LIGHT" button to turn on/off the color changing light.

. Do not play music at excessive levels as damage to hearing and/or equipment may result.

Do not use outdoors in wet or in damp surroundings.

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives

Keep this unit away from wet or damp surroundings.

· I 3 35" v D1 47" v H3 83"

Unit weight : ~5.3 oz Charging time : 1.5-2 hours : Up to 1.5 hours (max. volume)

Bluetooth range : 33 feet FM frequency range : 87.5-108MHz Built-In Rechargeable Lithium Battery: 3.7V 500mAh

Micro SD (TF) Card: Supports up to 16GB, supports music file format: MP3 (Note: Battery life & charging time may vary based on usage, types of devices connected & wireless

Problem	Possible Cause	Solution	
Low sound level	Source (Tablet, Mobile Phone, Laptop,	Adjust source volume.	
	etc.) volume too low.		
	Battery dead	Charge Battery.	
No sound	Volume in minimum position.	Increase the volume.	
	The connected device is not in play	Play the music in the connected device	
	mode.	and make sure the volume level is in	
		high level.	
	Input source incorrect.	Short press the MODE button to se	
		the input source to the desired	
		function.	
Sound distortion	Volume level too high	Decrease the volume.	

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device,

pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against frequency energy and, if not installed and used in accordance with the instructions, may cause harmful nterference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90-day warranty period, a product with a defect will be

either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90-day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement. SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday

10am to 6pm EST.

precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.