 




## OPERATION AND CONTROLS

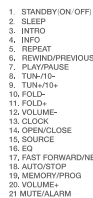

\*Please note: Some buttons only work in certain SOURCE modes

## OPERATION AND CONTROLS

**STANDBY**  
Press to switch on the unit. Press it again put the unit in standby mode.

**OFF/ON**  
Press to open or close the sleep tray.

**STOP**  
Press repeatedly to select a stop time or choose option **S-OFF** to disable the function, after which the unit will go into standby mode automatically. Then press **[STANDBY]** to wake it up.

**PAUSE**  
Press to introduce the track of the disc in progress. It takes approximately ten seconds for each track.

**REPEAT**  
In standby mode, press this button to set the clock. Press **[P] [=]** to tune to select 12H or 24H clock display, press **[P]** again to confirm, then press **[P]** to select the clock time, press **[P]** again to confirm it.

**SHUFFLE**  
Available in standby mode. Press to shuffle the tracks.

**FM/AM**  
Press repeatedly to switch among CD, AUX IN, Bluetooth, USB and FM mode.

**STOP**  
Press to stop playback.

**REPEAT**  
Press to temporarily pause a playback. Press it again to resume the playback.

**PAUSE**  
Hold down this button for 3 seconds to disconnect Bluetooth.

**STOP**  
Press to skip to the next track.

**PREV**  
Hold down to start previous track.


**STOP**  
Press to return to the previous track.

**STOP**  
Hold down to rewind playback.

**VOL +**  
Press **[VOLUME]** to turn up the volume.


**VOL -**  
Press **[VOLUME]** to turn down the volume.

**MEMORY**  
In stop mode, place a CD and press **[PROGRAM]** to access to the program mode. Press the arrows **[P] [=]** to select the track and press once again **[PROGRAM]** to confirm your selection. Press **[P]** to start program playback.


 **ALARM**

Press to temporarily switch off the sound. Press it again to switch it on.


In standby mode, press and hold to enter into alarm timer setting mode, then make sure that you have set the clock correctly by pressing [ $\frac{1}{2}$ ] [ $\frac{1}{2}$ ] keys. Press it again to confirm and set the volume value by the same method.

 **REPEAT**

Press repeatedly to switch the repeat modes.

 **TUNE+**

Press this button for each time to increase ten tracks.

 **TUNE-**

Press this button for each time to decrease ten tracks.

## OPERATION AND CONTROLS

**FOLD** Press to skip the next folder.

**ROLL** Press to return to the previous folder.

**EQ** Press to switch the equalizer modes: flat, rock, pop, jazz or classic

## FM RADIO OPERATION

**Press SOURCE to select FM mode.**  
**For optimal connection, attach provided FM Antenna.**

**TUNE+:** press to tune (increase) the frequency;  
**TUNE-:** press to tune (decrease) the frequency;  
**HOLD +:** press to increase/decrease the frequency  
 Hold down [TUNE+/-] to increase/decrease the frequency  
 continuously.

**MEMORY:** Press [MEMORY] to select a  
 preferred station by pressing **◀** or **▶** button, then again to  
 save it as a preset station.

**INFO:** Switches between receiving frequency / Program Service (Station Name)  
 and Program Type, Signal level and set (clock) time, if the station  
 supports these functions and the radio reception is adequate.

**AUTO:** Hold down to auto scan for the broadcasting radio channels,  
 press it again to stop auto scanning.

**▶:** Press to skip to the next preset station.

**◀:** Press to skip to the previous preset station.

**NOTE:** In Tuner mode, [VOLUME+/-], [MUTE] buttons are also active.

## CONNECTING TO BLUETOOTH

An external device with Bluetooth Connectivity can be wirelessly connected to this unit using the Bluetooth function.

1. Power ON the unit by pressing the Standby Button.
2. Press the source button until "BT" displays on the LED Screen.
3. Turn your external device's Bluetooth Setting ON. Wait a moment, then look for the Bluetooth pairing name "VS-115".
4. Select the Bluetooth pairing name, to connect the unit. Once connected, there will be an audible tone indicating device has been successfully paired.
5. Rotate the VOLUME CONTROL KNOB to adjust the sound level. Use all Play/Pause/Next/Previous functions as usual.

## OPERATION AND CONTROLS

**SPEAKER OUTPUT**

Connect the speakers to speaker output terminals with their attached speaker cables.

AUX IN OPERATION

An external (auxiliary) audio source (i.e. personal CD/MP3 Player/Mobile phone or computer) can be connected to this unit via AUX IN.

1. Plug a detachable Audio Cable (not provided) into the AUX IN socket on the front of the unit.
2. Press the source button until the LED Screen displays "AUX IN".
3. Plug the other end of the Audio Cable into the Headphone or Line Out socket of your External Source.
4. Rotate the VOLUME CONTROL KNOB to adjust the sound level.

## USB OPERATION

1. For USB playback, insert USB (not provided) into the USB Port on the front of the unit.
2. Press the Source Button until the LED Display shows "USB".
3. Playback will start automatically.
  - Use FOLD+ and FOLD- Buttons to switch between folders (if applicable).

## TROUBLESHOOTING

Before contacting customer service, please check the following chart for simple troubleshooting solutions.

Symptom	Cause(s)	Remedy
No power	<ul style="list-style-type: none"> <li>• The AC power cord is not connected to the power supply or is not connected to a power supply circuit.</li> </ul>	<ul style="list-style-type: none"> <li>• Please check that the AC power cord is connected securely.</li> </ul>
Sound is not heard or the sound is distorted.	<ul style="list-style-type: none"> <li>• The audio cables aren't connected correctly.</li> <li>• The volume is set to the minimum.</li> <li>• The speaker is muted.</li> <li>• The sound is switched off.</li> </ul>	<ul style="list-style-type: none"> <li>• Connect the audio cables correctly.</li> <li>• Turn up the volume.</li> <li>• Turn off the mute control and check the sound control is switched on the sound.</li> </ul>
Unable to play a disc	<ul style="list-style-type: none"> <li>• The disc is placed in the disc tray in a wrong way.</li> <li>• The unit isn't compatible with the disc.</li> <li>• The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>• Check that the disc is placed correctly in the disc tray.</li> <li>• Check the disc's label side.</li> <li>• Clean the disc.</li> </ul>
Power is input when the USB drive is inserted into the USB	<ul style="list-style-type: none"> <li>• The connected USB drive is probably not a certified one.</li> </ul>	<ul style="list-style-type: none"> <li>• Please use a certified USB drive.</li> <li>• Insert the USB drive down, and then connect the power cord from the AC outlet and the power cord to the power plug.</li> <li>• Then, power on the power supply.</li> <li>• The power will resume the normal functions.</li> </ul>
The buttons on the unit do not work	<ul style="list-style-type: none"> <li>• The unit is being interfered with static electricity.</li> </ul>	<ul style="list-style-type: none"> <li>• Switch off and unplug the unit.</li> <li>• Then connect the plug to the power supply and switch on the power.</li> </ul>
The remote sensor does not function.	<ul style="list-style-type: none"> <li>• There is no battery in the remote.</li> <li>• The battery is out of charge.</li> <li>• The remote control is pointed to the remote sensor.</li> <li>• The remote is closed out of its operating area.</li> <li>• The remote is shut down.</li> </ul>	<ul style="list-style-type: none"> <li>• Insert one AAAA 5V battery.</li> <li>• Replace the battery.</li> <li>• Make sure that the remote is pointed to the remote sensor.</li> <li>• Make sure the remote is within the operating area.</li> <li>• Then power on the unit again.</li> </ul>

## WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics LLC.

**Innovative Technology Electronics LLC**  
Limited Warranty - 90 Days / One Year Parts

Innovative Technology Electronics LLC (ITE) warrants that products to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. This warranty does not cover damage caused by misuse or accident. We warrant that we will endeavor to replace the product if it is determined to be defective at "No Charge". It is further agreed that the replacement product shall be made available to you as soon as possible after we receive the return of the original purchase. The warranty does not cover core cosmetic damage, scratches, dents, stains, or other damage to the appearance of the product. There will be no connection to improve upgrade advice or settings, misuses, mishandling, access, acts of God or force majeure events, or other causes beyond our control.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchases. Please contact us at [www.victrolasound.com](http://www.victrolasound.com) to request an RMA Return Material Authorization Number. Once received, please email your RMA number and serial number along with an RMA number on the package will be refused and returned to sender. Upon receipt of the return, we will inspect the item and determine if it meets the criteria for repair or replacement. If the item meets the criteria, we will ship you one of one that has equivalent value and features. To return an item, supply full name, address, phone number, item purchased, receipt of purchase and return for return to obtain RMA number.

All returns must be in the original packaging or responsible suitable to prevent damage. Customer must provide shipping label and insurance to service and replacement items. No cash refund. Package No return will be shipped back to a PO Box or APO address.

Shipping charges are extra and include:

- US Domestic Items \$60.00 to \$380.00 (Price Paid Per Unit)
- US \$100.00 for items \$100.00 to \$500.00 (Price Paid Per Unit)
- \$150.00 for items \$500.00 and above (Price Paid Per Unit)

- Shipping fees are non-refundable.

The limited warranty provided by Innovative Technology Electronics LLC, for handling and return shipping charges (ITE) will not be responsible for delays or unprocessed claims resulting from a customer's failure to follow instructions. For more information and details of inquiries or RMA request visit our website [www.victrolasound.com](http://www.victrolasound.com) and [sales@victrolasound.com](mailto:sales@victrolasound.com).

**Innovative Technology Electronics LLC**  
Clayton Drive D  
Port Washington, NY 11050  
Tel: 718-477-6540 Fax: 718-477-6540  
Website for support: [www.victrolasound.com](http://www.victrolasound.com) and [sales@victrolasound.com](mailto:sales@victrolasound.com)

There are no express warranties except as listed above.

THE LIMITED WARRANTY PROVIDED BY INNOVATIVE TECHNOLOGY ELECTRONICS LLC IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. ITE SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, DATA, OR OTHER SUCH DAMAGES. THIS LIMITED WARRANTY DOES NOT COVER DAMAGE TO THE PRODUCT EXCEPT TO THE EXTENT PROVIDED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED TO THE EXTENT PROVIDED BY APPLICABLE LAW. THERE IS NO LIMIT ON THE DURATION OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties. Therefore, where such laws apply, they may also have other effect not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary by state.