

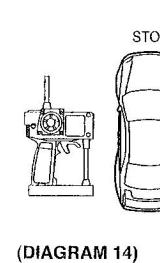
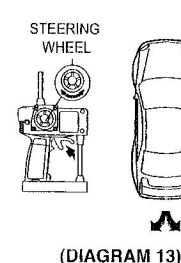
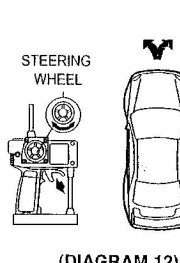
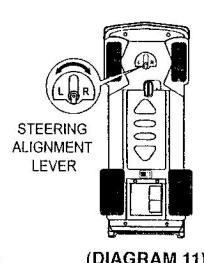
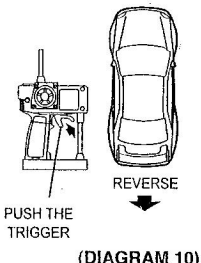
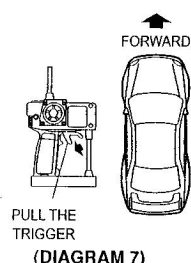
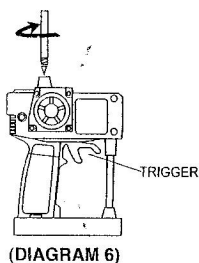
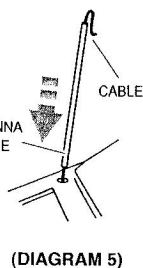
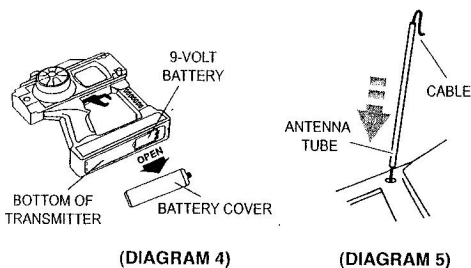
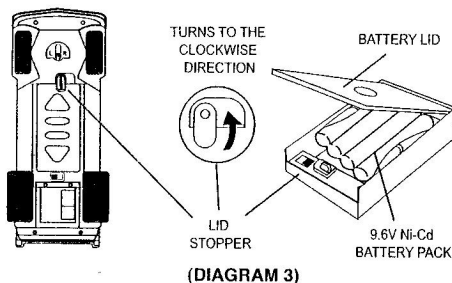


- Uncrew the battery cover at the bottom of the transmitter and place a 9-volt battery inside following the engraved signs (See Diagram 4).
- B. Replace the battery cover.

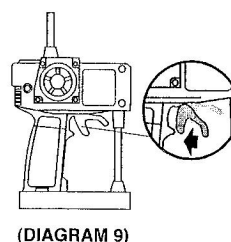

FORWARD RUNNING (TURBO POWER BOOST)

- D. Pull the trigger backward for forward running. (See Diagram 7)
- E. Pull the trigger to half way for normal speed. (See Diagram 8)
- F. Pull the trigger to full extension for turbo speed. (See Diagram 9) Release the trigger half way to resume normal speed.

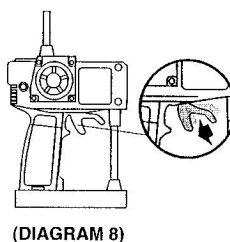

- G. Push the trigger of the transmitter forward (away from you). (See Diagram 10)

FRONT WHEELS STEERING ADJUSTMENT:

- H. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 11)
- I. If the vehicle runs toward left, turn Steering Alignment Lever towards "R".
- J. If the vehicle runs toward right, turn Steering Alignment Lever towards "L".

STEERING OPERATION:

- K. To make left or right-hand turns while driving forward, turn the steering wheel to left or right while pulling the trigger of the transmitter back (towards you). (See Diagram 12)
- L. To make left or right-hand turns while driving in reverse, turn the steering wheel to left or right while pushing the trigger of the transmitter forward (away from you). (See Diagram 13)

STOP OPERATION:

- M. Release the trigger to stop. (See Diagram 14).

- Do not drive car on grass, sand or carpet.
- Do not drive car through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is in the "OFF" position when it is not in use.
- Do not bend the antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in buildings will affect the operation of your vehicle.
- Do not leave the vehicle or transmitter near sources of heat or in direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when they are not in use.

ATTENTION PARENTS:
IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CAUTION:
ELECTRIC TOY
Not recommended for children under 6 years of age.
As with all electric products, precautions should be observed during handling and use to prevent electric shock.

INPUT : 120VAC-60Hz-5.5W ONLY
OUTPUT : 12VDC-0.2A

www.toysrus.com