


# CCU

## User Manual

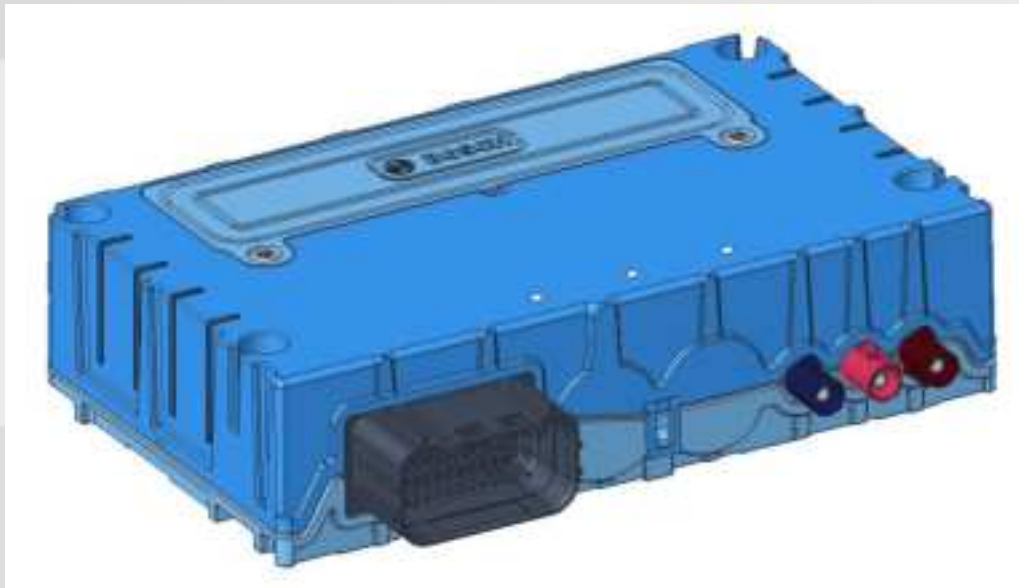

- **Product Name:** Connectivity Control Unit
- **Family Model Name:** iTraMS CCU
- **Model Name:** CU-303-0403

This preliminary document presents the status of the agreed specifications. It will be confirmed when all the validations has been completed with positive result

# Table of Contents

<b>1</b>	<b>Introduction .....</b>	<b>6</b>
<b>1.1</b>	<b>Objective .....</b>	<b>6</b>
<b>1.2</b>	<b>General.....</b>	<b>6</b>
<b>1.3</b>	<b>Disclaimer .....</b>	<b>6</b>
<b>2</b>	<b>Copyright .....</b>	<b>6</b>
<b>3</b>	<b>Agreed Product Use.....</b>	<b>7</b>
<b>3.1</b>	<b>Intended Use.....</b>	<b>7</b>
<b>4</b>	<b>Overview .....</b>	<b>8</b>
<b>5</b>	<b>Symbols Used.....</b>	<b>8</b>
<b>6</b>	<b>Warranty and Service Clauses .....</b>	<b>8</b>
<b>7</b>	<b>Safety and Instructions.....</b>	<b>8</b>
<b>7.1</b>	<b>Dos and Don'ts .....</b>	<b>8</b>
<b>7.2</b>	<b>Precautions for Installation .....</b>	<b>9</b>
<b>8</b>	<b>Scope for Delivery.....</b>	<b>9</b>
<b>9</b>	<b>Legal Requirements .....</b>	<b>9</b>
<b>10</b>	<b>Device Description .....</b>	<b>10</b>
<b>11</b>	<b>Installation .....</b>	<b>10</b>
<b>11.1</b>	<b>Installation of Cable Harness .....</b>	<b>10</b>
<b>12</b>	<b>Technical Specifications.....</b>	<b>11</b>
<b>a.</b>	<b>Digital Output.....</b>	<b>11</b>
<b>b.</b>	<b>Bus (CAN0 and CAN1) .....</b>	<b>11</b>
<b>c.</b>	<b>Internal Memory.....</b>	<b>11</b>
<b>d.</b>	<b>Power Requirements.....</b>	<b>11</b>
	<b>Annexure.....</b>	<b>12</b>
<b>1</b>	<b>Document Details .....</b>	<b>12</b>
<b>2</b>	<b>Document Revision History .....</b>	<b>12</b>
<b>3</b>	<b>Abbreviations Used .....</b>	<b>12</b>
<b>4</b>	<b>EMC Recommendations.....</b>	<b>12</b>
<b>5</b>	<b>General Info .....</b>	<b>13</b>
<b>6</b>	<b>Pin-Out details .....</b>	<b>13</b>

- 6.1 Main Connector ..... 13
  - 6.2 RF Connector ..... 13
- 7 Best Practice for Wiring Routing ..... 19
- 8 Grounding Scheme..... 20

# Table of Figures

Figure 1 Overview ..... 8

Figure 2 3D picture of the device..... 10

Figure 3 (a) Fixing Main Connector            (b) Remove Main Connector ..... 10

Figure 4 Wiring in iTraMS..... 13

Figure 5 Grounding Scheme ..... 20

## 1 Introduction

Intelligent Transport Management System (iTraMS) CCU is a telematics platform solution that provides transportation solutions to OEMs.

### 1.1 Objective

The purpose of this document is to set out for the customer information and requirements for what, according to our opinion, may be considered a proper and correct installation. Please note that Bosch does not assume any liability for the information/recommendations set out herein and that responsibility for the proper installation solely rests with the customer.

### 1.2 General

All efforts have been made to ensure the accuracy of material provided in this document at the time of release. However, the items described in this document are subject to continuous development and improvement. All specifications are subject to change without notice and do not represent a commitment on the part of Robert Bosch Engineering and Business Solutions Private Limited (RBEI). RBEI will not be responsible for any loss or damages incurred related to the use of information contained in this document.

Before starting up, connecting, and operating this product it is essential that the installation instructions and, in particular, the safety instructions are studied carefully. By doing so, any uncertainties in handling this product can be eradicated and will ultimately help avoid damage to the device.

#### FCC Compliance Notification to User

These devices comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) these devices may not cause harmful interference, and (2) these devices must accept any interference received, including interference that may cause undesired operation.

#### Co-Location Warning Statement

These devices and their antennas must not be co-located or operating in conjunction with any other antenna or transmitter.

#### Exposure Compliance

Do not touch the Primary antennas which are transmitting RF signals. Always disconnect power to the CCU before installation or maintenance service.

The Primary antennas should always be separated from the operator or nearby person by a minimum distance of 20 cm.

#### IC (ISED)

RSS-Gen Issue 4 8.4

These devices comply with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) These device may not cause interference; and (2) These devices must accept any interference, including interference that may cause undesired operation of the device

#### Information to User:

These devices must be operated as supplied by RBEI. Any changes or modifications made to these devices without the express written approval of RBEI may void the user's authority to operate these devices.

### 1.3 Disclaimer

iTraMS functionalities cannot be guaranteed if the stated instructions are violated. This includes handing by untrained person, using the wrong connector, etc. This product is not intended for use in life-support appliances, devices, or systems where a malfunction of the product can result in personal injury. RBEI customer using, integrating, and/ or selling this product for use in such appliances do so at their own risk and agree to fully indemnify RBEI for any resulting from incorrect use or illegal sale.

**WARNING: This device has been approved to use in the industrial circumstance (office use), there is possibility to have electro-magnetic interference if it is used in home**

## 2 Copyright

The information in this document should not be altered or amended without special notification from Robert Bosch Engineering and Business Solutions Private Limited (RBEI). RBEI undertakes no further obligation in relation to this document. RBEI or RBEI- Approved Service Personnel can only use the product described in it. Under no circumstance may any part of this document be copied, reproduced, transmitted, stored in a retrieval system, or translated into another language without the express written permission of RBEI.

©Copyright© 2020 Robert Bosch Engineering and Business Solutions Private Limited. The names and designations used in this document are trademarks or brands belonging to the respective owners.

### 3 Agreed Product Use

The intended and non-intended use of iTraMS CCU product is discussed in the below sections.

#### 3.1 Intended Use

RBEI will be responsible for delivered products being fit for use of purpose intended and/or having a defined level of quality, such responsibilities are subject to the application of the product conforming to the agreed upon environment, installation and stress conditions, as such are referenced in the attached specification.

When the product during the Bosch release procedures has successfully met the testing specifications agreed to the Customer, it is deemed to fully cover all requirements, if any, that the product be fit for the use or purpose intended and/or have a defined level of quality. Customer shall be responsible for the system application, which includes ensuring that the intended product application and all environmental, installation and stress conditions to which the product will be exposed are covered by such testing. Customer shall be responsible for making sure that the product will not be exposed to conditions in excess of those referenced in such testing specifications. The conditions of use (environment, application, installation and loads) contained in this manual and associated agreed documents constitute the scope of the product's suitability for its contractually required, intended or ordinary use and the scope of the product's condition/quality. The customer is responsible for ensuring the product's usability in the vehicle.

The product is intended for and is undergoing approval for installation and operation in automobiles, commercial vehicles, off-highway vehicles and coaches with a rated voltage of 12(24) volts. It may be necessary to adapt the product's factory-set state to suit the specific country.

Only connecting cables and external devices that are appropriate for the device in question as regards safety, electromagnetic compatibility and grade of shielding may be used. Compliance with the applicable standards cannot be guaranteed if the device is modified without the agreement of Bosch.

Bosch is only responsible for implementing the device side connector (interface) according to the customer's specifications. Bosch does not assume any responsibility and does not provide any guarantee for the plug-in connection – in particular for its electrical functioning, durability and imperviousness – since this

is applied by request of the customer.

If, in order to connect the device, ignition and battery are bridged, the device will draw the full operating current even when switched off. In this case, without any further deactivation on the vehicle-side, there is a risk of battery depletion. No liability is assumed for any damage occurring because of this. Do not cover ventilation openings and heat sinks – otherwise a build-up of heat may occur in the device that could lead to malfunction. There are no specific ventilation openings or heat sinks in CCU device, but mounting in a thermal capsuled environment should be avoided, as it will lead to an increase of the operating temperature.

Do not insert foreign bodies in the insertion slots or openings of the device – otherwise injury or damage to the device may occur.

The device must not be exposed to hot or burning objects (e.g. cigarettes).

To clean the device, never use hard or sharp objects that could damage the protective pane or housing. Do not use aggressive cleaning agents such as thinners, benzene, abrasive cleaners, spray cleaners, acidic or alkaline solutions, or wax. Do not spray any liquids onto the device. To clean the housing and protective pane / display, moisten a soft cloth with tepid water and wipe off the dirt. Make sure that no liquid enters the inside of the display. Afterwards, wipe the cleaned surface with a clean, dry cloth.

If the device is to be cleaned before installation in the vehicle, make sure the openings (in particular the connector contact points) are kept sealed so that no liquid can enter the device.

## 4 Overview

iTraMS is a platform for TCU or CCU that is an onboard system that controls wireless tracking, diagnostics and communication to/from the vehicle; these systems can be used for fleet management and vehicle tracking, among many others. This CCU has the following connectivity solutions:

1. Wireless Connectivity
  - a. Cellular – 4G LTE / 3G WCDMA
  - b. WLAN – 802.11 a/b/g/n
  - c. Bluetooth – BLE 4.2 and Classic
2. Wired Connectivity
  - a. CAN

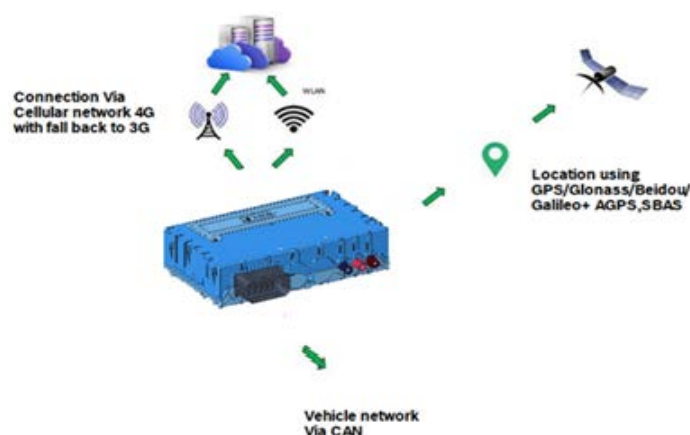


Figure 1 Overview

## 5 Symbols Used

The document conventions used in this manual are in the sections below:

KEYWORD	FORMAT	DESCRIPTION
Warning	<b>WARNING:</b> <b>Mismatch may damage the connector.</b>	Possible impending danger.
Note	<i>Note: The device should not be connected to any power supply during SIM installation.</i>	Record of points relevant to the topic.

## 6 Warranty and Service Clauses

For any use of products outside the released applications or environments outside the agreed product specification, no warranty shall apply and Bosch shall not be liable for such products or any damage caused by such products.

## 7 Safety and Instructions

### 7.1 Dos and Don'ts

- The different dos and don'ts to be followed while handling the device are as seen below:
- The CCU should not be opened or modified in any way. Doing so will void the warranty.
- Do not pour any liquid into any opening. It may lead to damage or malfunctioning of the product.
- The equipment is operable within the temperature range -40DegC to +65DegC.

## 7.2 Precautions for Installation

The product must be installed by skilled and instructed personnel only. Personnel scheduled to be trained, familiarized and instructed or to take part in a general training course may only work with the product under the supervision of an experienced person.

- Electro Static Discharge (ESD) precautions should be taken while installation of CCU.
- The CCU should be installed on the vehicle in accordance to the instructions in the Installation manual. Refer to the annexure for guidelines.
- Follow the specifications and instructions of the vehicle manufacturer.
- During vehicle installation, switch the gearbox to neutral and actuate the hand brake. Secure the vehicle against rolling away with brakewedges.
- Switch off the ignition when you connect/disconnect the CCU to/from the OBD interface.
- Do not drop the CCU. It may lead to damage or malfunctioning of the product.
- Install the CCU at a location that
  - Does not impair any of the safety devices (such as the main airbag, knee airbag and steering).
  - Does not impair the driver of his/her driving.
  - At least 20 cm away from any human contact and fastened with sufficient space.
  - Prevent any contact of the CCU, OBD connection cable or wiring harness with hot components.
  - The functioning of other lines or cables is not impaired, or they are not clamped.
  - The CCU should only be removed or replaced by an authorized personnel.

## 8 Scope for Delivery

The scope of delivery includes:

- On-board Unit (CCU)
- Installation Manual
- The voltage and current rating of the wiring harness must be greater than the voltage and current rating mentioned in the technical specifications.
- It is recommended to have a fast blow fuse with below rating in series on the positive power supply line at vehicle wiring harness.
- 5A for 12V applications
- If one of the following situations arise, get the equipment checked by service technician:
  - The wiring harness or connector is damaged.
  - Liquid has penetrated into the equipment.
  - The equipment has been exposed to moisture.
  - The equipment does not work as per specifications.
  - The equipment has been dropped and damaged.
  - The equipment has been exposed to elevated temperatures (beyond storage specifications).

**Note:** Check the product for any damages. Never use a damaged product. If you have any complaints, please contact the service technician.

## 9 Legal Requirements

iTRAMS CCU product family is undergoing Electromagnetic and Radio Frequency conformance tests and validations in different regions.



## 10 Device Description

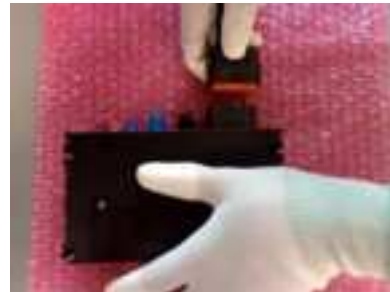


Figure 2 3D picture of the device

## 11 Installation



Figure 3 (a) Fixing Main Connector



(b) Remove Main Connector

### 11.1 Installation of Cable Harness

1. Suitable protective measures against electrostatic discharges are to be taken for persons and tools. In particular, CCU connector pins are not supposed to be touched.
2. Liquids and other media are not allowed to come in contact with the connectivity unit connector and its pins.
3. Plug the Cable harness cable into the CCU. Check the PIN numbers on the connector of the connecting cable.
4. Make sure that it is connected to the same pin slots on the device side connector. Lock the connector.
5. For a secure connection, the interlocking mechanism of the connector must not be damaged and must be in a completely closed state.
6. It must be ensured that the connector from the wiring harness side is disconnected only in dry and clean conditions
7. Remove the cable as shown in Fig.3 (b) above.
8. Connection and disconnection procedure must be done in a particular sequence as given below:
  - Connection sequence during installation
    - a. Connect Antenna cables
    - b. Connect main connector
  - Disconnection sequence
    - a. Disconnect main connector
    - b. Disconnect Antenna cables

**WARNING:** Mismatch of the sequence may damage the connector

**NOTE:** Un-used connectors (either Antenna Ports or Wired Connectors) must be closed appropriately to meet the specified IP rating of the product.

## 12 Technical Specifications

### a. Digital Output

DIGITAL OUTPUTS	REMARKS
Number of output	1 programmable High Side output shorted to the battery voltage
Max continuous current	450 mA

### b. Bus (CAN0 and CAN1)

Analog Inputs	REMARKS
Number of Interfaces	2 CAN Interfaces
Connection	2-wires (CANH-CANL)
Max Data rate	500 Kbps

### c. Internal Memory

Memory Type	REMARKS
Flash Memory	eMMC, 8 GB

### d. Power Requirements

INPUT POWER	VOLTAGE	REMARKS
Supply Voltage	12 V	9 to 32 V (Operational)
	24 V	
Maximum Operating Current	12 V	1.5 A
	24 V	1 A
Typical Operating Current	12 V	750 mA (Excluding Digital Output)
	24 V	400 mA (Excluding Digital Output)

The maximum operating current consumed by the external load of digital outputs.

It is recommended to have a fast blow fuse with below rating, in series on the positive power line of 5A for 12V applications.

# Annexure

## 1 Document Details

Subject	iTraMS CCU User Manual
Status	
Approved By	
Released By	
Notion of Confidentiality	Public

## 2 Document Revision History

DATE	VERSION NUMBER	DESCRIPTION NUMBER	SIGNATURE OF APPROVER
September 19, 2020	1.0	iTraMS CCU User Manual	

## 3 Abbreviations Used

ABBREVIATION	DESCRIPTION
BLE	Bluetooth Low Energy
CCU	Connectivity Control Unit
CAN	Control Area Network
EMC	Electro Magnetic Compatability
GPS	Global Position System
GNSS	Global Navigation Satellite System
I/O	Input and Output
IP	Ingress Protection
iTraMS	Intelligent Transport Management System
LTE	Long Term Evolution
OEM	Original Equipment Manufacturer
OBD	On Board Diagnosis
PCBA	Printed Circuit Board Assembly
TCU	Telematics Control Unit
USB	Universal Serial Bus
WLAN	Wireless Local Area Network
WCDMA	Wideband Code Division Multiple Access

## 4 EMC Recommendations

- Do not route the sensitive signals in parallel to high tension wires (ignition, Digital I/O).
- Wire from CCU to Vehicle battery should be as short as possible.
- Avoid loops in the routing.
- CCU ground shall be as short as possible fixed to chassis or directly to battery ground
- For CAN wiring, it is recommended to use a twisted pair (Figure 4).

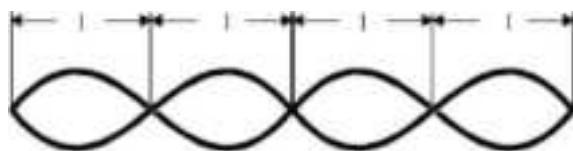


Figure 4 Wiring in iTraMS

## 5 General Info

- Sensor signal wires should be separated from both actuator signals and ignition switching signals.
- Correct fuse rating as per the system load to be calculated by the OEM and used on Battery positive supply.
- Calculation for their ratings will be responsibility of the customer.
- Twisted pair wires should be used for CAN signals (Figure 4).
- For CCU power ground, multi-point grounding on chassis is recommended.
- Before fixing the ground wires to the chassis of vehicle, paint or any insulating material should be removed and the surface should be cleaned to ensure proper ground connection.
- Fasteners with serrated washers to be used for fixing the ground cables to chassis.

### Wiring

- If necessary, wires of type FLR (R = reduced thickness of insulation) must be used.
- It is recommended to use constantly insulator copper strands as per DIN 72551 or the newer automotive norms LV112.
- Mechanically unloaded cables can also be connected as wires with reduced thickness of insulation (FLX or FLKr wiring).
- As per DIN 40621, the cables should be laid in a cable protection sleeve.
- Wiring harness layout in the vehicle - Sharp edges in the wiring layout should be avoided. The wiring and primarily the plug connections must be protected against direct water or spray mist.

## 6 Pin-Out details

The different connectors and their pin-out details are discussed in the below sections

### 6.1 Main Connector

Pin Number	Pin Description	CCU Pin Label	Remarks
6	CAN0_L	B_D_CAN0L	CAN0 : Low
7	CAN0_H	B_D_CAN0H	CAN0 : High
10	HS Digital-Output 4	O_S_OUT4	Digital : Output - High Side
11	Ground	G_G_BAT	Battery : Ground
12	Battery Plus	V_V_BAT	Battery : Positive
18	CAN1_L	B_D_CAN1L	CAN1 : Low
19	CAN1_H	B_D_CAN1H	CAN1 : High
24	KL15 (Ignition)	I_S_T15	T15

### 6.2 RF Connector

PIN NO	SIGNAL NAME
1	GNSS Antenna Port
2	LTE Main Antenna Port
3	LTE Diversity Antenna Port

## 7 Best Practice for Wiring Routing

- Due to the effects of gravity passing water through the wires, the CCU should be packaged higher than any wire end or splice in the harness.
- Measures should be taken to prevent water from collecting around the wiring harness. Plastic wire covering/protection should allow water to drain from harness.
- Wiring should be routed away from water drainage areas. Wires that are routed around sharp edges or that can be damaged from stone impingements should be protected
- Water in the wiring harness can cause interference on various signal wires due to poor wiring insulation.
- Wires splices and ground eyelets must be located away from direct contact with high pressure cleaner.
- Any wire end terminating in a splash water area should be orientated so that the wire end is pointing down.

## 8 Grounding Scheme

The grounding scheme for Gen2A is as seen below:

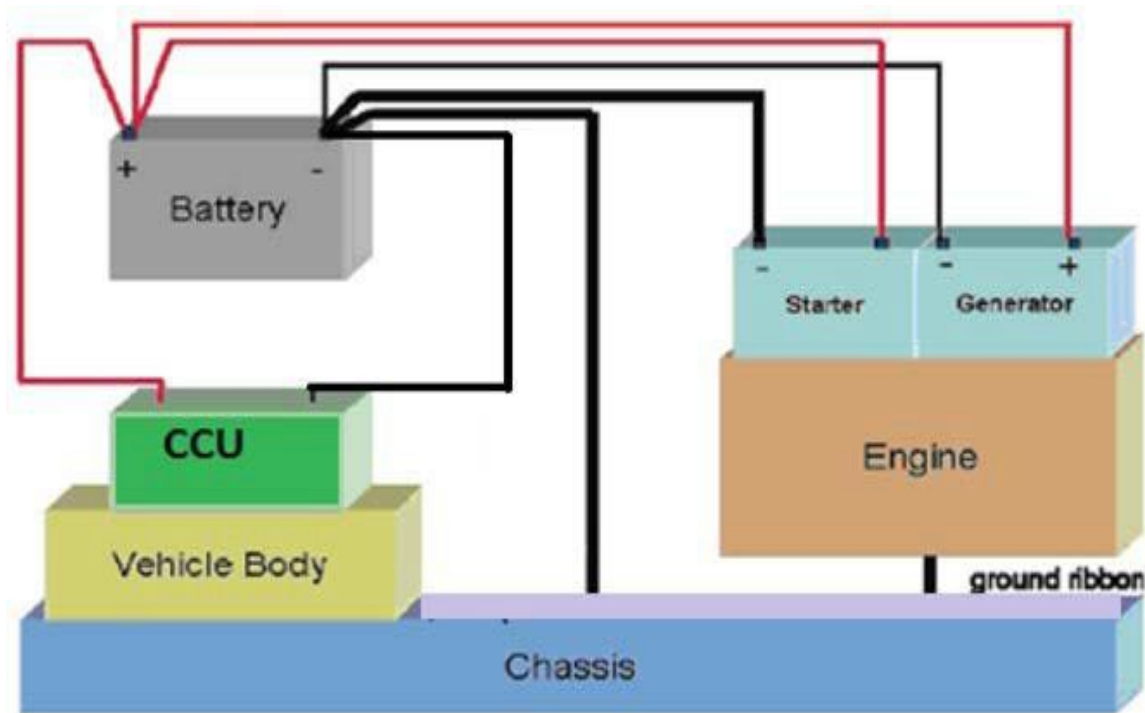


Figure 5 Grounding Scheme



**Robert Bosch Engineering and Business Solutions Private Limited**

**123. Industrial Layout,  
Hosur Road,  
Koramangala,  
Bangalore – 560095,  
INDIA**

**Email: [Connect@in.bosch.com](mailto:Connect@in.bosch.com)**

**Official Website: [www.bosch-india-software.com](http://www.bosch-india-software.com)**