

| MERCH BOX #14 User's manual | |
|---|--|
| 1.PRODUCT NAME | Merch Box #14 |
| 2.Components | Wireless Charger, Cable, Cell Phone Holder, Photo Frame, Photo Card, Manual *Adapters are not included in the component. |
| 3.Age | 14 years or above |
| 4.Country of Origin | Wireless Charger, Cable, Cell Phone Holder, Photo Frame, Manual-China / Photo Card-Republic of Korea |
| 5.Manufacturing Date | 23-Dec |
| 6.Manufacturer | Wireless Charger - Dongguan Youwei Smart Home Co.,Ltd Cable, Cell Phone Holder, Photo Frame, Photo Card, Manual - KEYTH INTERNATIONAL |
| 7.Distributor's Name & Address | HYBE CO., Ltd / +82 2 3444-0105 / 42, Hangang-daero, Yongsan-gu, Seoul, 04389 Korea |
| 8.US Contact Information | HYBE American Inc. / 2110 Colorado Ave. Suite 200 Santa Monica CA 90404 / 310-859-9060 |
| 9.Wireless Specifications | Input: DC 5.0V 2.0A / DC 9.0V 1.67A Output: 15W |
| [How to Connect to Wireless Charger] | |
| ①Connect the cable to the wireless charger. | |
| ②Place the device to charge in the center of the charging coil. At this time, the LED will light up if the charging device is placed correctly. The LED will not light up if the charging device is not placed correctly. | |
| [Notice to LED indication status] | |
| ①The LED light will turn on and then off after being connected. | |
| ②The LED light will remain turned on during charging. | |
| ③The LED light will remain turned on once charging is completed. However, the LED light may flicker for some models after the charging is completed. | |
| ④The LED light will turn off if the charging ports of the device and the charger do not match. When the LED light is off, it means the device is not being charged. | |
| When the LED light is flickering, it means the device is not being charged. | |
| There is no separate feature that turns the LED light on or off. | |
| If the light does not work according to the manual, separate the charger from the wireless charger and connect it again. | |
| The light may work differently for different types of devices (cell phones, wireless charging cases, Galaxy Buds, and smartwatches). | |
| [Precautions When Handling] | |
| Please read the precautions and the user manual carefully before using the product to use it properly. | |
| Please note that children under the age of 14, the elderly, or those who may have difficulty understanding or using the product should refrain from | |
| Keep the user manual in an accessible place. | |
| Failure to comply with the instructions below may result in damage to the product or injury. | |
| | |
| 1)Prohibitions (* Do not do these under any circumstances.) | |
| Do not use for purposes other than intended. | |
| Do not arbitrarily disassemble, repair, or modify the product. | |
| Keep the product away from alcohol and other volatile substances, as they may damage the product. | |
| Keep the product away from sharp edges, pointed objects, or rough surfaces, as they may scratch the product. | |
| If the product is dropped or subjected to an impact, internal damage may accumulate and lead to unexpected malfunctions or damage even during normal use. Be careful not to subject the product to impact. | |
| The product is not waterproof, so do not use it in the rain or in a humid place such as a bathroom or near a body of water. | |
| Be careful when using the product near sources of heat such as firearms, heating appliances, or campfires, as it may cause deformation of the product or | |
| This product includes wired components such as cables. Do not put them in your mouth or wrap them around your body. | |
| Do not wield the cable with the intent to assault. | |
| 2)Instructions (*Must be followed.) | |
| Install and use the product in a safe place where there is no risk of falling. | |
| If the product becomes contaminated, turn off the power and remove the cable before using a dry towel to wipe the product clean. | |
| If the product becomes abnormally hot, changes color, deforms, or emits any unusual odor during use, please discontinue use immediately. | |
| Avoid storing in direct sunlight or hot and humid places. | |
| Do not store in a place where heat is generated or near a heat-emitting device. | |
| Keep the product away from the reach of young children and pets. | |
| Do not charge with two devices on the product at the same time. | |
| 3)Additional Information | |
| Using a cable other than the one included may damage the product or slow the charging speed. | |
| | |
| Cases may have to be removed depending on their thickness and type to charge the device. | |
| Wireless charging may not work properly for mobile devices with thick cases on. We recommend removing the case before charging. | |
| | |
| There may be a slight unusual odor due to the nature of the material, but this will go away after a while. | |
| Minor scratches may occur during the production process, which is not a defect. | |
| We do not separately retain spare parts for the product. | |
| We are not liable for damages and accidents caused by intended misuse or user negligence. | |
| In case of a product defect, compensation will be provided as per the “Consumer Dispute Resolution Regulations” issued by the Korea Fair Trade Commis | |

| |
|--|
| FCC Compliance Statement |
| This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. |
| <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one of the following measures:</p> <ul style="list-style-type: none">• Reorient or relocate the receiving antenna.• Increase the separation between the equipment and receiver.• Connect the equipment into an outlet on a circuit different from which the receiver is connected.• Consult the dealer or an experienced radio/TV technician for help. <p>This equipment complies with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.</p> <p>FCC Caution</p> <p>Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate the equipment.</p> <p>This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.</p> <p>FCC ID: 2AZWB-MERCHBOX14</p> |