
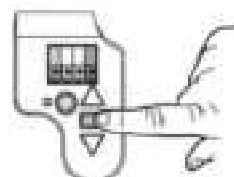


R19 ROUND

INSTRUCTIONS TO PROGRAM A REMOTE:

1. Press and release the learn button on the back of the motor unit. The light will illuminate for 30 seconds. This indicates the unit is in programming mode.

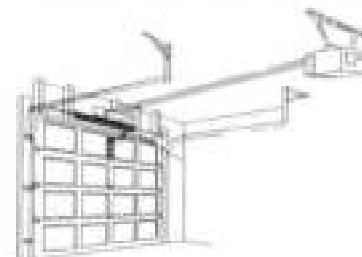

2. Within 15 seconds press the button you wish to program on the remote control.



3. You will hear an audible click and/or the light on the motor unit will turn off indicating the remote successful programming.

*Repeat steps 1-3 for any additional remotes you wish to program. Wait 60 seconds before programming another remote control.

INSTRUCTIONS TO ERASE ALL CODES FROM MEMORY:

Press and hold the purple learn button the back of the motor unit for 6 seconds or until the light turns off.

- a) The statement "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."
- b) The statement "Even used batteries may cause severe injury or death."
- c) The statement "Call a local poison control center for treatment information."
- d) A statement indicating the compatible battery type (CR2032).
- e) A statement indicating the nominal battery voltage 3V.
- f) The statement "Non-rechargeable batteries are not to be recharged."
- g) The statement "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."

- a) The statement "Ensure the batteries are installed correctly according to polarity (+ and -)."
- b) The statement "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
- c) The statement "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
- d) The statement: "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference.
(2)This device must accept any interference received, including interference that may cause undesired operation.

