

REMOTE CONTROL PROGRAMMING INSTRUCTIONS


GD-R28

SETTING DIP-SWITCH CODE:


1. Remove the cover from the transmitter to access the dip-switches.
2. Using a pen set slide the dip-switches(on/off) to a unique code of your choice.

INSTRUCTIONS TO PROGRAM A REMOTE:

1. Press and release the learn button on the back of the motor unit. The light will illuminate for 30 seconds. This indicates the unit is in programming mode.

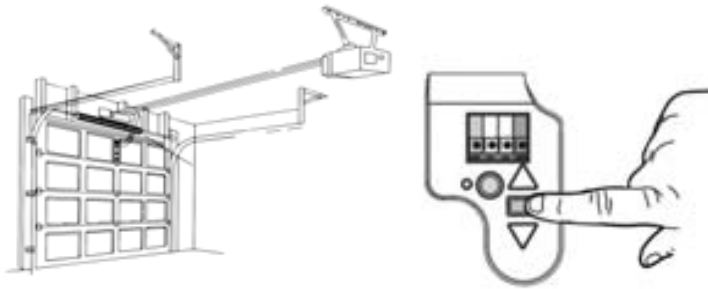

2. Within 15 seconds press the button you wish to program on the remote control.

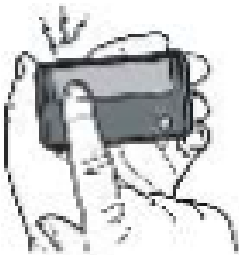

3. You will hear an audible click and/or the light on the motor unit will turn off indicating the remote successful programming.

*Repeat steps 1-3 for any additional remotes you wish to program. Wait 60 seconds before programming another remote control.

INSTRUCTIONS TO ERASE ALL CODES FROM MEMORY:

Press and hold the purple learn button the back of the motor unit for 6 seconds or until the light turns off.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

⚠ WARNING

In order to prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- Keep remote controls out of the reach of children.
- Only use the remote control when the gate/garage door can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- Keep the gate/garage door in sight until it is completely closed. Do not allow anyone to cross paths with the gate/garage door while moving or operating the remote control.