

EXHIBIT C

User Manual

CONTENTS

CHARACTER.....	1
SPECIFICATIONS.....	1
NAMES OF PARTS.....	2
INSTALLATION.....	3
POWER SUPPLY CONNECTION.....	4
CONTROLS AND CONNECTIONS.....	5
NOTE.....	6-7

 
Thank you for your kind using our wireless microphone with receiver. Before using the machine please read the instruction manual very carefully. According to our instruction manual for ensure you using of the best function and performance. If any defect please contact with our agent or dealer. It is our pleasure to serve you.

Thank you for your cooperation

NOTE


NAMES OF PARTS

(FRONT PANEL)

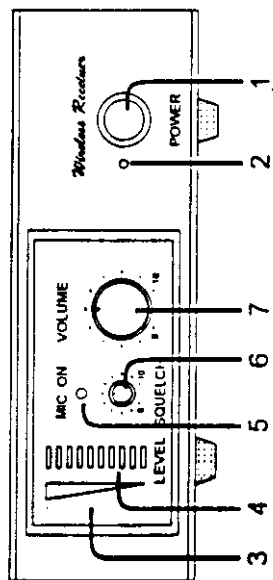


1. Power switch
2. Power ON indicator
3. Front module
4. AF Level display
5. Microphone ON indicator
6. Squelch ADJ.
7. Volume control

 (REAR PANEL)

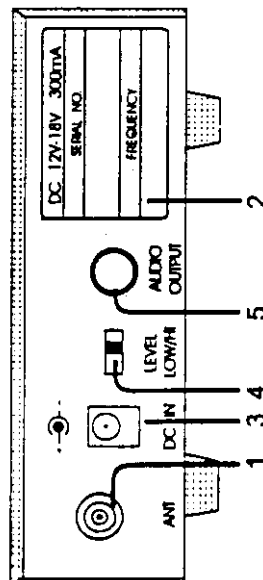

 1. Antenna receptacle.
2. Frequency label.
3. DC jack
4. AF Level adjust
5. Audio Output socket

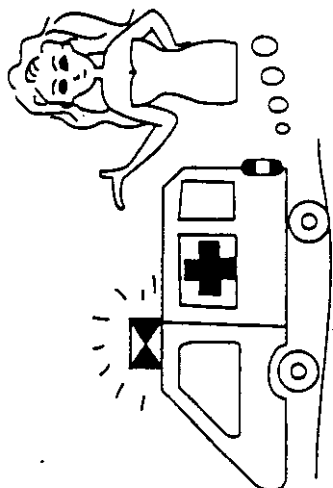

IF YOU ARE NOT TECHNICAL
ENGINEER PLS. DO NOT
MODIFIED OR KNOCK - DOWN
IT.

POWER SUPPLY CONNECTION

Use DC power supply could switch with adaptor supply or battery of 12V - 18V. Connection DC supply, DC plug connection with "DC-IN" socket. (See fig 4) another plug terminal connection with battery or power supply

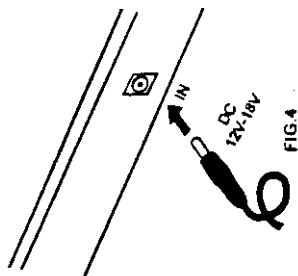 


FIG. 4

POWER SWITCH

Make sure the correct current voltage. Push this power switch once to turn on, push it again to turn the power off. If unit still fails to operate, Please check the fuse. (Internal in receiver). If unit still fails to operate, Secure a qualified technician or contact us for a Return Authorization prior to shipment

*Disconnect power supply before removing receiver cover

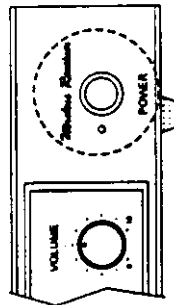 


FIG. 5

CONTROLS AND CONNECTIONS

VOLUME ADJUSTOR

The purpose of this control is to give the ability to provide an audio output level from the wireless system that is similar to that of a wired microphone

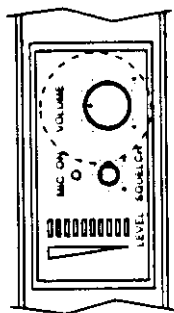 


FIG. 8

RECEPTION INDICATORS

This indicators does not light during standby. When microphone signal is received, the red indicator light to indicate the reception of microphone

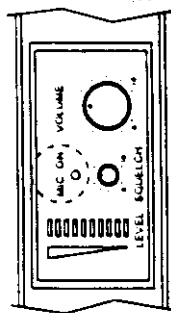 


FIG. 9

SQUELCH ADJUST

SQ Noisy controlled adjustment. Before you turn-on the transmitter, Please turn-on the receiver at first. The receiver already have been jamming by out side signal. Please adjust SQ controlled until the jamming signal has disappeared (clock-wise)

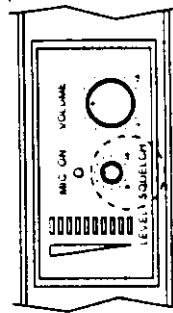 


FIG. 10

(SQ JUST)