

## Table of contents 1

<b>Safety precautions</b> .....	3	Adding new contacts .....	14
<b>Phone overview</b> .....	5	Finding contacts .....	15
<b>Getting started</b> .....	7	Editing contacts .....	15
Removing the back cover .....	7	Copying contacts .....	15
Inserting the SIM card .....	7	Deleting contacts .....	15
Inserting the battery .....	7	Defining Caller Groups .....	15
Installing the back cover .....	8	Privacy Manager .....	16
Charging the battery .....	8	My Number .....	16
Switching phone on/off .....	8	Phone Book memory status .....	16
<b>General instructions</b> .....	9	<b>Call logs</b> .....	16
Navigating the menus .....	9	Viewing call logs .....	16
<b>Security</b> .....	10	Deleting all call logs .....	16
PIN Code .....	10	Call duration .....	16
Phone lock .....	11	Call costs .....	17
SIM lock .....	11	<b>Messages</b> .....	17
<b>Text entry</b> .....	11	SMS .....	17
Input methods .....	11	SMS folders .....	17
Using iTap text input .....	11	SMS Chat .....	18
Using text input without iTap .....	12	Voicemail .....	18
Text templates .....	12	Cell Broadcast .....	18
<b>Calling</b> .....	12	<b>Tools</b> .....	19
Dialling with number keys .....	12	Alarm .....	19
Dialling previous numbers .....	12	World Clock .....	19
Listening to voicemail .....	13	Games .....	19
Ending a call .....	13	Calendar .....	19
Accepting a call .....	13	Shortcuts .....	20
Rejecting a call .....	13	Calculator .....	20
Adjusting the volume .....	13	SIM Toolkit (STK) .....	20
Swapping between calls .....	13	<b>Media Center</b> .....	20
Making a second call .....	13	Pictures .....	20
Call Waiting .....	13	Melodies .....	20
Call Menu .....	14	<b>Settings</b> .....	21
Activating Silent profile .....	14	Date & Time .....	21
<b>Your Phone Book</b> .....	14	Auto Power On/Off .....	21

## 2 Table of contents

---

Profiles .....	21
Display .....	22
Audio .....	22
Call Settings .....	23
Network .....	24
Security .....	25
Power Saving Mode .....	25
Language .....	25
Input .....	25
Flight Mode .....	25
Restore .....	25
<b>Questions &amp; Answers .....</b>	<b>26</b>
<b>Care and maintenance .....</b>	<b>29</b>
Battery quality statement .....	29
Display quality statement .....	29
<b>Product data .....</b>	<b>30</b>
<b>SAR .....</b>	<b>31</b>
<b>License Agreement .....</b>	<b>32</b>
<b>Menu tree .....</b>	<b>35</b>

## Safety precautions

### Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content to your children and the hazards associated with using the phone.



Remember to comply with legal requirements and local restrictions when using the phone. For example, in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is furthest away from the pacemaker. For more information consult your doctor.



Always keep the phone and accessories out of reach of small children.

Small parts such as the SIM card, dust cap, lens ring and lens cap can be dismantled and swallowed by small children.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



- Only use original batteries and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.
- All batteries can cause property damage, injury or burns if a conductive material such as jewelry, keys or beaded chains touch exposed terminals. The material may complete an electrical circuit and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. Your batteries are supplied with a protective cover. Please attach this cover to your batteries when detached from the phone and not in use.
- Do not dispose of batteries in fire as they may explode.



Ringtones, info tones and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to the ear when it rings or when you have switched on the handsfree function. Otherwise you risk serious permanent damage to your hearing.



The mains voltage (V) specified on the power supply unit must not be exceeded. Otherwise the charging device may be damaged.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



You may only open the phone to replace the battery and SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.



Dispose of unwanted batteries and phones as permitted by the laws in your countries.

Improper use will invalidate the guarantee! These safety instructions also apply to original accessories.


As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, a separation distance of **1.5 cm** is required.

## Phone overview

### ① Earpiece

### ② Display

### ③ / Soft keys

- The current functions of these keys are shown in the bottom line of the display.
-  : Press and hold to switch silent profile on/off.

### ④ Power on/off/End key

- Press and hold to turn the phone on/off.
- Press to end a call.
- Press to reject an incoming call.
- Press to cancel dialing.
- Press to return to idle mode.

### ⑤ Call key

- Press to send or answer calls.
- In idle mode: Press to open call record list.

### ⑥ OK key

- In idle mode: Press to open the main menu.
- In lists and menus: start an application/ function.

### ⑦ / / / Navigation keys

- In idle mode: Used as hot keys to enter the designated functions.
- In lists, messages and menus: Scroll up, down, left and right.

### ⑧ Voicemail key

In idle mode: Press and hold to dial your voicemail number.

### ⑨ - Number keys

- Press to enter numbers.
- Press and hold to start shortcut function/dial number (page 20).

### ⑩ Key

- Press briefly to enter "#".
- While dialling an extension: Press and hold to enter a "P" (pause). Then enter the extension number.

 
### ⑪ Asterisk key

- Press to enter an asterisk "\*".
- Press and hold to make an international call (enter "+").



## 6 Phone overview

- ① Speaker
- ② Headset jack
- ③ Charger socket

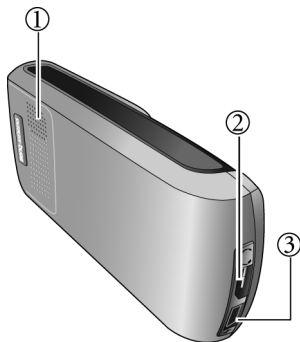

### Idle display icons

	Signal strength.
	New SMS messages
	Battery charge level, e.g. 100%
	Alarm set
	Keypad locked
	Line in use
	Normal profile active
	Meeting profile active
	Silent mode active
	Outdoors profile active
	Personal profile active
	Divert
	Headset connected
	Voice mail received

## Getting started

 
### Removing the back cover

1. Use a thin object such as a finger nail to press in at the groove just below the cover on the center top edge of the phone as illustrated.
2. Lift the cover off the phone.



### Inserting the SIM card

 
Slide the entire SIM card into the slot in the direction of the arrow shown on the compartment, with the metal contacts of the SIM card facing down and the cut corner at the top left as illustrated.



A SIM card can be easily damaged if its metal contacts become scratched. Therefore, take special care when holding or inserting it.

### Inserting the battery

1. Slide the top end of the battery down into the end of the battery bay.
2. Press the bottom end of the battery down so that it locks in place.

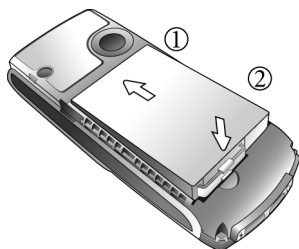

Switch off your phone before removing the battery.

## Installing the back cover

1. Insert the tabs on the inside bottom edge of the back cover into the slots on the bottom of the phone
2. Swing the cover down onto the phone to lock in place.



- Do not remove the battery while charging.
- It takes approximately 4 hours to fully charge a battery.
- When the battery is discharged, the charging may not start immediately when you plug in the connector. Wait 10 to 15 minutes for the phone to begin charging.
- Charging is only possible within a temperature range of 0 °C (+32 °F) to +45 °C (+113 °F).

When the battery is low, you will be warned with an alert sound.



## Charging the battery

The battery is not fully charged when first unpacked.

1. Plug the charger connector into the charger socket on the bottom of your phone, with the arrow showing upwards.
2. Plug the charger into a power outlet and charge for at least 4 hours.
3. Once the phone is fully charged, remove the charger from both the power outlet and the phone.

## Switching phone on/off

### Switching phone on

1. Press and hold  to switch the phone on. The phone will display the welcome animation (page 22).
2. When being asked, enter your PIN code and confirm with .

The PIN (Personal Identification Number) is the password provided by your network operator. You need this password in order to use the SIM card.


When the PIN code entered has been accepted, the phone will automatically search for the designated network. This search process may take a few seconds.



If you enter the PIN incorrectly three times in a row, the SIM card will be locked. You must now enter the PUK (Personal Unblocking Key) for that SIM card in order to unlock it. Please contact your service provider to obtain a PUK. To activate/deactivate PIN, see page 10.

## Idle mode

The phone is in idle mode and is ready for use when the name of the service provider is displayed on the idle screen.

Press  to return to idle mode from any situation.

## Signal strength

The signal strength is indicated in the top left corner of the display. More bars indicate a stronger signal.




Strong signal.

If the phone is not able to detect the designated network, or links to a network that you are not authorized to use, the signal strength meter will show no bars. You will only be able to make emergency calls.

## Emergency Call (SOS)


You can make an emergency call even if your phone is locked or cannot access your network, or if there is no SIM card inserted, as long as you are within range of a network of the type supported by your phone.

1. Enter 112 (the international emergency number).

2. Press .

No call is allowed to make if the keypad is locked.

## Switching phone off













Press  and hold to switch the phone off.


# General instructions

## Navigating the menus

The phone features various functions and settings organized in menus and sub-menus.

To select a function from menus:

1. Press  in idle mode to open the main menu.
2. Use , ,  and  to scroll up, down, right or left through the main menu. For example, scroll to **Settings**.
3. Press  to enter the menu.
4. Press  and  to scroll to a submenu, for example **Profiles**.
5. Press  to confirm selection.
6. Press  and  to scroll to the desired option, for example, **Normal**.
7. Press  to confirm selection.

- You can also access a function by pressing the corresponding menu number: e.g. open the main menu and press  to access **Settings**.
- In this user manual, the steps needed to reach a menu are shown in a condensed form, for example: **Settings > Profiles > Normal**.

## Security

### Settings > Security.

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

- If you enter the PIN incorrectly three times in a row, the SIM card will be locked. You have to enter the PUK for that SIM card in order to unlock it. Please contact your network operator to obtain a PUK.
- If the PUK has been lost, please contact your network operator.

### Security codes

PIN1	(Personal Identification Number) Protects your SIM card from unauthorized use.
PIN2	Needed for some settings and to change the PIN2.


PUK PUK2	(Personal Unblocking Key) Used to unlock SIM cards after the wrong PIN1 has been entered incorrectly three consecutive times.
Phone lock	Protects your phone from unauthorized use.  If activated you have to enter the phone code when the phone is switched on (default: 1234).
SIM lock	If activated, you have to enter SIM code to use the phone with another SIM card (default: 1234).

## PIN Code

The PIN is the password provided by your network operator and is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some network operators do not permit deactivating the control.




### PIN1 Code

#### Changing PIN status

- Select **Set Status**.
- Select **On/Off** to activate/deactivate PIN control.
- Enter PIN and confirm with .

#### Changing PIN

You can change the PIN to any 4 to 8-digit number.

1. Enter current PIN code and confirm with .
2. Enter new PIN code and confirm with .
3. Re-enter new PIN code and confirm with .

## PIN2 Code

Proceed as with PIN1 code.

## Phone lock

You can define the phone code (4 to 8-digits). If activated, the phone code is requested when the phone is switched on.

To activate the phone lock or change the phone code, proceed as with PIN1 code.

When the phone is locked, only emergency calls can be made.

## SIM lock

You can define the SIM code (4 to 8-digits). When activating the SIM lock, you have to enter the previously set SIM code (Default: 1234). If the SIM code is activated, you have to enter the SIM code to use another SIM card on the phone.

## Text entry


### Input methods

When an editing screen is displayed, the current text input method is indicated

in the upper right corner of the display. Following are some of the input methods. To have more options to enter texts, go to **Settings > Input** to select the desired input methods.


EN	iTap text input including the input language, e.g. english.
ABC	Text input without iTap
123	Numeric input

### Changing the Input Method




Press  repeatedly to select an input method.

iTap supports several input languages. The dictionary depends on the current input language. When selecting iTap please take note of the correct input language.

### Shifting between Upper and Lower Case Letters

Press  and hold to switch between lower and upper case letters.

### Using iTap text input

1. Press each key associated with the letter you want to enter only once. The letters you have entered appear on the display. The candidate words change with each key you press.
2. If the first highlighted word is not the word you want, press  or  to highlight the desired word.
3. Press  to enter the highlighted word. A space will automatically be inserted after the word.

4. Press / / / to move the cursor.
5. Press to delete the letter left of the cursor or marked text.  
Press and hold to delete all entered text.

## Using text input without iTap

1. Press a number key repeatedly until the required letter appears. After a brief interval the cursor will advance.  
Example:
2. Press once to enter the letter "a", twice to enter "b" etc.
3. Press to delete the letter left of the cursor.  
Press and hold to delete text quickly.
4. Press / to move the cursor (forwards/back).
5. Press to insert a space.  
Press and hold to insert a line feed.

## Entering symbols and special characters

1. Press to open the symbol table.
2. Press / / / to navigate to character.
3. Press to switch to next page.
4. Press to insert character.

## Text templates

### Messages > SMS > Templates

You can preset texts into your SMS message.

### Defining new SMS templates

1. Select (Option) and select Add.
2. Enter text.
3. Press to save the new SMS template.

## Calling

### Dialling with number keys

1. Enter a phone number in idle mode.
2. Press .

#### Entering international dialling codes:

- Press and hold until "+" is displayed. Then enter country and area code.


#### Dialling with number extension:

- Enter the number, then press and hold until "P" is displayed. Enter the extension number.

You can also use the phone book (page 14) or speed dial keys (page 20) to dial a number.

## Dialling previous numbers

 
1. Press to open call records.
2. Press / to select a number.

3. Press .


## Listening to voicemail

Press and hold .


If the voicemail number is not stored on your SIM card, you cannot access your voicemail by pressing and holding


. In this case you will need to manually set the number at **Messages > Voicemail > Set Number** (page 18).

## Ending a call


Press . The last call time is displayed.

## Accepting a call

 

Press  to accept a call.

- If **Settings > Call Settings > Answer Mode > Any Key** is activated (page 23), you can accept the call by pressing any key.
- Press  to mute during a call.

## Rejecting a call

Press  to reject an incoming call.

## Adjusting the volume

Press  /  to adjust the volume when making or during a call.

## Swapping between calls

\* Network support dependent.

### Putting the active call on hold

Press  (**Hold**) to hold a call.


You can dial a number to make another call.

### Activating held call


Press  (**Unhold**) to activate a call.

### Swapping between two calls

You have one active call and a call on hold.


Press  (**Swap**) to swap between the held and the active call.

### Ending a call

Press  to show a list of actions you can do to the calls: **End Active**, **End Hold**, and **End Waiting**.

## Making a second call

\* Network support dependent.

Enter a phone number and press  during a call.

You can also select a number from the call record list.

The currently active call is placed on hold automatically.

## Call Waiting

\* Network support dependent.

If there is an incoming call while you are on another call, the phone notifies you with a call waiting tone. The number/name of the waiting call is also displayed.

## 14 Your Phone Book


### Accepting a waiting call

Press  or  to accept call.

The currently active call is placed on hold automatically.


If there is already another call on hold, two options will be available: **End Active & Answer** or **End Hold & Answer**.

### Rejecting a waiting call

Press  (No). The waiting call is rejected immediately.

## Call Menu

Depending on the current situation, different functions will be offered.

During a call, press .

<b>Phone Book</b>	Use Phone Book to search number.
<b>Call List</b>	Open call records to search number.
<b>Conference*</b>	Talk with more than one party at a time.
* Network support dependent.	<ul style="list-style-type: none"> <li>• <b>Hold/Unhold/Swap:</b> Change the call status.</li> <li>• <b>Join:</b> Add calls to a conference.</li> <li>• <b>Private:</b> Isolate a single call while putting all other parties on hold.</li> <li>• <b>Forward:</b> Connect two parties while ending your own call. You can link an active and a held call.</li> </ul>

### End Call

- **End All:** End all active/held calls.
- **End Active:** End active calls.
- **End Hold:** End held calls.
- **End One:** End single call.

### Mute/Unmute

Activate/deactivate silent mode.

### SMS


Read/write a SMS during a call (page 17).

\* Network support dependent.

## Activating Silent profile

To avoid the disturbance caused by a ringing phone, you can activate the **Silent** profile. Incoming calls are signalled by vibrating without ringing.

Press and hold  in idle mode to activate/deactivate the silent profile.

When the Silent profile is activated, the phone vibrates for a second and  is displayed in the status of the idle display.





## Your Phone Book

The capacity of a phone book on your SIM card depends on the type of SIM card provided by your network operator.

## Adding new contacts

1. Enter the number in idle mode.

You can also select **Phone Book > Add to** add a new contact.



2. Press  (**Save**) to save the number as a contact.
3. Select a save location: **To SIM/To Phone**.
4. Scroll to the desired data field and press  to edit the field.
5. Press  to return to the phone book data screen after filling the field.
6. Press  (**Save**).

### Phone book entries on SIM card/phone memory




<b>Name</b>	Contact's name.
<b>Number</b>	Contact's phone number.
<b>Caller Group</b>	Select a caller group for the contact. See page 15 for defining caller groups.

### Finding contacts

1. Press the corresponding key for **Names** in idle mode.
2. Scroll to the desired contact.
3. If necessary, press repeatedly the number key that matches the first letter of the name you wish to locate, then scroll to the contact you want.

- You can also select **Phone Book > Find** to find a contact.
-  displays in front of the contact, if the contact is stored in your SIM card;
-  displays if the contact is stored in your phone memory.

When you have found the entry you want, you can:

- Press  to view contact.
- Press  to dial number.
- Press  (**Option**) to **Add, Edit, Copy to SIM/Copy to Phone, or Delete** a contact.

### Editing contacts

**Phone Book > Edit**

Edit contacts stored in the SIM/phone memory.

### Copying contacts

**Phone Book > Copy.**

Copy contacts stored in the phone to SIM card, or vice versa.

### Deleting contacts



**Phone Book > Delete.**

Delete one contact at a time or delete all contacts at once from the phone book.

### Defining Caller Groups

**Phone Book > Caller Group.**





Caller groups are combinations of phone settings used to identify a particular group of contacts.

1. Scroll to a caller group.
2. Press  to view the contacts in the group.
3. Press  (Option) to add (if no contact in this list), modify, or remove contacts.

## Privacy Manager

Phone Book > Privacy Manager.

Create a list of calls to accept (Accept List) and a list of calls to reject (Reject List). You can set this setting to Off if necessary.

1. Scroll to **Accept List/ Reject List**.
2. Press  (Edit) to display the list.
3. Press  (Option) and select **Add** to add contacts to the list.
4. Scroll and select the contact with , and press  (Done) to activate.

## My Number

Phone Book > My Number.

Enter your phone number and name.


## Phone Book memory status

Phone Book > Memory Status.




Display the current and max. number of entries saved in the SIM/phone.


 
## Call logs

### Viewing call logs

1. In idle mode press   
Or select the desired list type:  
**Calls > Missed/Received/Dialed**.
2. Select a call from the list.

When the call is displayed.

- Press  to call the number.
- Press  to view the details of the call.
- Press  (Option) to call, save/edit, or delete the call.

 shows beside missed calls;  
shows beside received calls;  shows  
beside dialed calls.

### Deleting all call logs

Calls > Cleanup All.

### Call duration

Calls > Duration.

### Displaying call times

Select the desired list type: **Last/ All/ Received/ Dialed**. The total time for all calls of the selected type is displayed.

### Resetting call times

Select **Reset**.



## Call costs

\* Network support dependent.

**Calls > Cost.**

## Displaying call costs

Display the cost of your last call (Last) or total costs of all calls (All).

## Resetting call costs

Select **Reset**.

Requires entry of the PIN2 code.

## Displaying limit for total costs

Select **Limit**.

## Setting a unit price and currency for cost calculation

Select **Settings**.

Requires entry of the PIN2 code.

# Messages

### About SMS



SMS (Short Messaging Service) allows you to send text messages.

For details on text entry, see page 11.


## SMS


### Creating a new SMS

**Messages > SMS > New**

1. Enter text.
2. Press  (**Option**) and select **Insert Text** to insert text templates (page 12).
3. Press  to send the message, save it to the Drafts, or delete it.

## Receiving SMS

The icon  indicates new messages in idle mode.

Press  to read a new SMS.

Received messages are saved in the SMS inbox automatically (page 17).

## SMS Settings

**Messages > SMS > Settings**

Your phone is already set up to send or receive messages. Contact your network operator for details.





## SMS folders

**Messages > SMS**

The folders below are offered for SMS messages.

### Inbox

Incoming messages are saved here.

Read messages saved on the phone and on the SIM are marked by  and  respectively. Unread messages saved on the phone and on the SIM are marked by  and  respectively.

## Outbox

Failed messages are saved here.

## Sent

Messages successfully delivered are saved here.

## Drafts

You can save a message as draft while creating it.

## Private Folder

Entry of the phone code (default: 1234) is required to access the Private Folder.

You can save private messages in a separate folder.

## Cleanup

You can delete all messages or by folder.

## SMS Chat

Messages > SMS Chat


You can chat online via SMS.

## Voicemail

Messages > Voicemail

### Get Voicemail

Dial the voicemail number to access your voicemail. The number is provided by your network operator.

To call the voicemail number in idle mode: Press and hold  .

## Set Number

Save the voicemail box number.

## Cell Broadcast

Messages > Cell Broadcast

Cell broadcast messages are messages that your network operator broadcasts to all phones within a particular area. These messages are broadcast in numbered channels, e.g. channel 30 might be for local weather, 60 for traffic reports. You can receive cell broadcast messages that your network operator broadcasts, and select your preferred topics and languages.

For more information about available channels and a list of the information they provide, contact your network operator.

## Receive

Switch the function on/off.

## Topics

Set the desired channel numbers which represent the broadcast information you wish to receive from your network operator.

## Language

 


 


Set languages for broadcast information. Only information in the set language is received.


# Tools

## Alarm



Tools > Alarm

### Set alarm

1. Select an alarm.
2. Scroll to an option with  / .
3. Press  to select.
4. Press  /  to change the settings.
  - **Set Status:** Set the alarm on or off.
  - **Set Time:** Enter time for the alarm.
  - **Set Frequency:** Select frequency for the alarm.
  - **Set Alarm Tone:** Set ringtone of the alarm.
5. Press  (**Save**).

When an alarm is set,  is displayed in standby mode.



### Stop alarm

- Press  (**Snooze**). The alarm will ring again five minutes later.
- Or
- Press  (**Exit**). The alarm will not ring until the next scheduled time.

## World Clock

Tools > World Clock

Time and date must be set for the calendar to work correctly. Go to **Settings > Date & Time**.

Press  /  to check the time around the world.

## Games

Tools > Games

 




Your phone features a number of entertaining applications and games. You can play the games that are embedded in the phone. To find out how to play these games, read their on-screen instructions.

## Calendar

Tools > Calendar

 

You can enter events in the calendar. Time and date must be set for the calendar to work correctly. You may set the alarm to ring when a date occurs.


### Creating a new event

1. Press  /  to select a date, or press  (**Option**) to select **Go to Date**.
2. Press  (**Option**) and select **Add**.
3. Edit data fields for the event.
4. Press  (**Save**).





## Shortcuts

### Tools > Shortcuts

You can number keys  to  as shortcuts to important functions/numbers (for speed dial).

 

 is already assigned to voicemail dialing. You cannot change this setting.

### Setting Shortcuts

1. Press  /  to select a number key.
2. Press  (Option) and then Edit. Select **Function/Phone Number** to assign a function or phone number to the number key.
3. Select function/contact and confirm with .








To delete a shortcut setting, select **Remove** in the options menu.

### Using Shortcuts in idle mode

Press and hold  to  to run the function/dial the number the shortcut key represents.

## Calculator

### Tools > Calculator

1. Enter amount to calculate. Use  /  to enter decimal points.
2. Perform calculations using  /  /  /  and , as indicated on the Calculator screen.


## SIM Toolkit (STK)

Shown only if it is provided by your SIM card, and the name is predefined by your network operator. For further details, please contact your network operator.

## Media Center


### Pictures

#### Media Center > Pictures

Contains images saved on the phone. Press  (Option) to set the selected picture as the wallpaper.

### Melodies


#### Media Center > Melodies

Contains melodies (ringtones). Press  (Option) to set the selected melody as group ring ID or ringtone.

# Settings

## Date & Time

### Settings > Date & Time

Set time and date, as well as the format displayed on the idle screen. Press  to save settings.

- **Set Date:** Set current date.
- **Set Time:** Set current time.
- **Set Format:** Set time/date format.




## Auto Power On/Off

### Settings > Auto Power On/Off

You can set a time the phone is switched on/off automatically.

#### Attention

When on an airplane, be sure that **Auto Power On/Off** is deactivated.




1. Select function: **Power On/Power Off**.
2. Press  and  to switch the function on.
3. If set to on, enter time.
4. Press  to save settings.

## Profiles

### Settings > Profiles


A profile is a group of settings that determine, for example, whether the phone will alert you to incoming calls through a ring tone or a vibrating alert, and how ring tones in general are used on the phone. These settings allow the phone's operations to best suit the environment you are in.

### Selecting profile

Press  /  to select a profile and confirm with  to activate it.

5 standard profiles are provided with default settings:

- **Normal:** This is the default profile.
- **Meeting:** Settings in this profile have been predefined to suit a meeting environment.
- **Silent:** All ring tones are deactivated and incoming calls are signalled by vibrating without ringing.

You can also press and hold  in idle mode to activate/deactivate the Silent profile.



- **Outdoors:** Settings in this profile have been predefined to suit an outdoor activity.
- **Personal:** You can use this profile for a group of custom settings.

### Edit profile

1. Press  /  to select a profile.

2. Press  (**Edit**) to edit the profile.

You can make the following settings:

- **Vibrate:** Decides whether the phone vibrates when there is an incoming call.
- **Call Ring:** Ringtone that sounds when there is an incoming call.
- **Message Tone:** Ringtone that sounds when there is a new message.
- **Calendar Tone:** Ringtone that sounds when your calendar event approaches.
- **Keypad Tone:** Decides whether keypad sounds when keys are pressed.
- **Ring Volume:** Adjust ring volume.  
Press  /  to adjust it.
- **Restore:** Reset the profile to its default settings.

You cannot modify settings in **Silent** profile.

## Display

### Settings > Display

Set the display of the phone to suit your requirements.



## Wallpaper

Select the wallpaper displayed for the idle display.

## Personal Banner

Enter a text to be displayed on idle display.

## Contrast

Press  /  to adjust the contrast of the display.

## Brightness

Adjust the brightness of the display to appear lighter or darker. Press

 /  to adjust it.

## Audio

### Settings > Audio



Set the tones on the phone to suit your requirements.


- **Call Ring:** Set ringtone for incoming calls.
- **Message Tone:** Set tone for incoming messages.
- **Alarm Tone:** Set tone for alarms.
- **Calendar Tone:** Set tone for current events.
- **Keypad Tone:** Set tone when a key is press.
- **Ring Volume:** Adjust volume for ringtones.
- **Speech Volume:** Adjust volume for speech.

## Call Settings

Settings > Call Settings

### Answer Mode

Set whether calls can be accepted by pressing any key (except for ) or only by pressing .

 


- **Any Key:** Set calls to be accepted by pressing any key.
- **Send Key:** Set calls to be accepted only by pressing .

### Connect Alert

Set the phone to ring, vibrate, or flash the backlighting when the call recipient has answered your call.

### Minute Minder

If activated, the phone beeps at the set interval time during a call.

1. Press  /  to switch the function on.
2. Press  to save settings.

### Show Number

When you make a call, your number can be shown or hidden on the display of the called party. Set **Presel** to use the default setting of the network operator.


### Call Divert

\* Network support dependent.

You can specify the conditions under which the call types should be diverted

to your voicemail box or another number.

- **Forward All:** All calls are diverted.

When activated,  is displayed in the status bar of the idle display.

- **When Busy:** A call is diverted if another call is in progress.
- **No Reply:** A call is diverted if not answered.
- **Not Reachable:** A call is diverted if the phone is switched off or is out of range.
- **Cancel All:** Cancel all call divert settings.

### Call Barring

\* Network support dependent.

Restrict the dialling or receiving of certain calls. To activate or cancel call barring, you have to enter the network password provided by your network operator.

- **All Outgoing:** All outgoing calls except emergency numbers are barred.
- **Intl.Out:** Only local calls can be made.
- **Intl. Except Home:** International calls are not permitted. However you can make calls to your home country when abroad.
- **All Incoming:** Phone is barred for incoming calls.
- **Incoming When Roaming:** You do not receive calls when you are outside your home network.

## 24 Settings

- **Cancel All:** Enter the network password to cancel all call barring settings.
- **Change Password:** You can change the network password, which can be obtained from the network operator.

### Call Waiting

\* Network support dependent.

If activated, an incoming call is signalled by a call waiting tone when you are on another call. The number/name of the incoming call is displayed (page 13).

### Auto Redial


When activated, the phone will automatically redial, if there is no answer at a number you have dialled.

### Fixed Dialing Number

You can define a list of numbers that can be dialled. Numbers not included in this list, cannot be dialled.

Requires entry of the PIN2 code.

#### Adding numbers to the Fixed Dialing Number list

1. Select **Modify**.
2. Enter PIN2 code and confirm with .
3. Enter number.

If the PIN2 code is entered incorrectly three consecutive times, the PIN2 code will be locked down. You will need the PUK2 code to unlock the PIN2 code. Contact your service provider to obtain the PUK2 code.

### Active Line

\* Network support dependent.

You can use two different phone numbers on one phone. You can designate one number for dialling calls, while accepting incoming calls dialled to both numbers.

### Network

#### Settings > Network

\* Network support dependent.

The network that your phone uses is configured automatically. When turned on, the phone automatically connects to the designated network, or automatically connects to a roaming network when you are outside the coverage of your regular network. When outside the coverage of your regular network, you can manually select the local network system.

### Network Mode

- **Automatic:** The phone will scan for the available network when you are outside the home network.
- **Manual:** The phone will list of all networks for you to choose one when you are outside the home network.



## Band Setting

Set an appropriate band in the GSM network system.

## Security

### Settings > Security

 
You can use various codes and locks to prevent unauthorized use of the phone.

### PIN Code/ Phone Lock/ SIM Lock

For descriptions of the security codes, see page 10.

### Auto Keypad Lock

If activated, the keypad is locked automatically if no key has been pressed for a specified period of time in idle mode. You can set the time interval before the keypad is locked. However, you can still be called.

The keypad can also be directly locked and unlocked by pressing and holding  in idle mode.

## Power Saving Mode

### Settings > Power Saving Mode

If activated, the keypad back light is switched off and the brightness of the display is reduced to save battery power.

## Language

### Settings > Language

Set current display language.

## Input

### Settings > Input

Set the default input methods for text entry (page 11).

## Flight Mode

### Settings > Flight Mode

When you are on a flight where the use of mobile phones is prohibited, select this option so that the phone will not link to any network. But the alarm and the calendar reminder can still be available.

## Restore

### Settings > Restore

Reset the phone to default values (factory setting).

## Questions & Answers

If you encounter problems while using the phone, or if it performs erratically, you can consult the information in the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible causes	Possible solution
Poor reception	<p>The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions can not effectively reach it.</p> <p>The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).</p> <p>You are too far away from a base station for your service provider.</p>	<p>Move to a location where the network signal can be properly received.</p> <p>Avoid using the phone at such times, or try again after waiting a short time.</p> <p>You can request a service area map from your service provider.</p>
Echo or noise	<p>Poor network trunk quality on the part of your service provider.</p> <p>Poor local telephone line quality.</p>	<p>Press the End key and dial again. You may be switched to a better-quality network trunk or phone line.</p> <p>Press the End key and dial again. You may be switched to a better-quality network trunk or phone line.</p>
Battery will not charge.	<p>The battery or battery charger is damaged.</p> <p>The phone's temperature is below 0 °C (+32 °F) or higher than +45 °C (+113 °F).</p> <p>Poor contact between the battery and charger.</p>	<p>Contact the dealer.</p> <p>Adjust the battery charging environment to avoid extremes of temperature.</p> <p>Check all connectors to make sure all connections have been properly made.</p>

Problem	Possible causes	Possible solution
Shortened standby time	<p>The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.</p> <p>The battery is depleted. In high-temperature environments, battery life will be shortened.</p> <p>If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.</p>	<p>If you are located in an area where signalling is weak, temporarily switch off the phone.</p> <p>Use a new battery.</p> <p>Change your location to one where the network is accessible, or temporarily turn off your phone.</p>
You cannot switch your phone on.	Battery power has been depleted.	Recharge the phone's battery.
SIM card error	<p>SIM card malfunction or damage.</p> <p>SIM card inserted improperly.</p> <p>Debris on the SIM card contacts.</p>	<p>Take the SIM card to your service provider for testing.</p> <p>Insert the SIM card properly.</p> <p>Use a soft, dry cloth to clean the SIM card contacts.</p>
Unable to connect to the network.	<p>SIM card invalid.</p> <p>You are not within the network's service area.</p> <p>Poor signal.</p>	<p>Contact your service provider.</p> <p>Check the service area with your service provider.</p> <p>Move to an open space, or if you are inside a building, move closer to a window.</p>
You cannot answer incoming calls.	<p>You have activated <b>Accept List</b> or <b>Reject List</b> in the <b>Privacy Manager</b> option.</p> <p>You have activated the <b>Call Barring</b> feature.</p>	<p>Go to <b>Phone Book</b> and select <b>Privacy Manager</b> in the options menu. select <b>Off</b> in order to deactivate this option.</p> <p>Go to <b>Settings &gt; Call Settings &gt; Call Barring</b>, and then select <b>Cancel All</b>.</p>

Problem	Possible causes	Possible solution
You cannot make outgoing calls.	<p>You have activated the <b>Call Barring</b> feature.</p> <p>You have activated the <b>Fixed Dial Number</b> feature.</p>	<p>Go to <b>Settings &gt; Call Settings &gt; Call Barring</b>, and then select <b>Cancel All</b>.</p> <p>Go to <b>Settings &gt; Call Settings &gt; Fixed Dialing Number</b> and select <b>Off</b> to turn this feature off.</p>
PIN Code is blocked.	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the SIM card's PUK code, use the PUK code to unlock the SIM card.
Unable to enter information into the Phone Book.	The Phone Book's memory is already full.	Delete unnecessary data from the Phone Book.
Unable to select certain features.	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.

## Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone become wet, disconnect it immediately from the power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.
- Do not use or store the phone in dusty, dirty areas. Its moving parts may be damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot environments (e.g. vehicle instrument panel in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold environments. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.

- The phone has better protection against splashes, dust and knocks if the supplied seals are used.

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts is not working properly, obtain fast and reliable help at our service centres.

## Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only original batteries.

## Display quality statement

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Just remember that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

## Product data

### Declaration of conformity

BenQ Mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The relevant declaration of conformity (DoC) has been signed. Please call the company hotline if you require a copy of the original or visit: [www.BenQMobile.com/conformity](http://www.BenQMobile.com/conformity)

CE 0168

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not

ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

#### Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

### FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help.

#### CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

### RF exposure warning

This equipment must be installed and operated in accordance with provided instructions and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

## SAR

### European Union (RTTE) and international (ICNIRP)

#### INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

#### THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and was adopted into the European Standard EN 50360 and into other national standards. The CE mark demonstrates that the EU requirements are met.

The highest SAR value for this device when tested at the ear was **0.37W/kg<sup>1</sup>**. As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, a separation distance of **1.5 cm** is required.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the

device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you nevertheless want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization ([www.who.int/emf](http://www.who.int/emf)) or BenQ Mobile ([www.BenQMobile.com](http://www.BenQMobile.com)).

**Max.SAR measurement  
0.521W/Kg(Body SAR)**

1 The tests are carried out in accordance with international guidelines for testing.

## License Agreement

This License Agreement ("Agreement") is between You and BenQ Mobile GmbH & Co. OHG ("BenQ"). The Agreement authorizes You to use the Licensed Software, specified in Clause 1 below, which may be included in your phone, stored on a CD-ROM, sent to You by electronic mail or over the air, downloaded from BenQ Web pages or servers or from other sources under the terms and conditions set forth below.

Read this Agreement carefully before using your phone. By using your phone or installing, copying, and/or using the Licensed Software, You acknowledge that You have read and understood the Agreement and agree to be bound by all of the terms and conditions stated below. You further agree that if BenQ or any licensor of BenQ ("Licensor") is required to engage in any proceeding, legal or otherwise, to enforce their rights under this Agreement, BenQ and/or its Licensor shall be entitled to recover from You, in addition to any other sums due, reasonable attorney's fees, costs and disbursements. If You do not agree to all of the terms and conditions of this Agreement, do not install or use the Licensed Software. This Agreement governs any Updates, releases, revisions, or enhancements to the Licensed Software.

1. **LICENSED SOFTWARE.** As used in this Agreement, the term "Licensed Software" means collectively: all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided and includes any related BenQ or third party software and upgrades, modified versions, updates, additions and copies of the Licensed Software, if any, distributed over the air, downloaded from BenQ Web pages or servers or from other sources.

2. **COPYRIGHT.** The Licensed Software and all related rights, without limitation including proprietary rights therein, are owned by BenQ,

its Licensors or affiliates and are protected by international treaty provisions and all applicable national laws. This Agreement does not convey to You nor allow You to acquire any title or ownership interest in the Licensed Software or rights therein. The structure, organization, data and code of the Licensed Software are the valuable trade secrets and confidential information of BenQ, its Licensors or affiliates. You must reproduce and include the copyright notices with any permitted copies You make of the Licensed Software.

3. **LICENSE AND USE.** BenQ grants to You a non-exclusive, non-transferable end user right to install the Licensed Software or use the Licensed Software installed on the phone. The Licensed Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

4. **LIMITATIONS ON LICENSE.** You may not copy, distribute, or make derivative works of the Licensed Software except as follows:

- You may make one copy of the Licensed Software, excluding the documentation, as an archival backup copy of the original. Any other copies You make of the Licensed Software are in violation of this Agreement.
- You may not use, modify, or transfer the right to use the Licensed Software other than together with the accompanying hardware or copy the Licensed Software except as expressly provided in this Agreement.
- You may not sublicense, rent or lease the Licensed Software.
- You may not reverse engineer, decompile, modify, or disassemble those Licensed Software programs except and only to the extent that such activity is ex-



pressly permitted by applicable law notwithstanding this limitation.

Parts of the Licensed Software may be supplied by third parties and may be subject to separate license terms. Such terms are set out within the documentation.

5. MISUSE OF THE LICENSED SOFTWARE OR DATA GENERATED BY THE LICENSED SOFTWARE IS STRICTLY PROHIBITED BY BENQ. MAY VIOLATE GERMAN, U.S. AND OTHER LAWS AND MAY SUBJECT YOU TO SUBSTANTIAL LIABILITY. You are solely responsible for any misuse of the Licensed Software under this Agreement and for any liability or damage related in any way to your use of the Licensed Software in violation of this Agreement. You are also responsible for using the Licensed Software in accordance with the limitations of this Agreement.

6. TERMINATION. This Agreement is effective from the first date You install, copy or otherwise use the Licensed Software. You may terminate this license at any time by deleting or destroying the Licensed Software, all back up copies and all related materials provided to You by BenQ. Your license rights terminate automatically and immediately without notice if You fail to comply with any provision of this Agreement. The rights and obligations under sections 2, 5, 6, 7, 9, 12 and 13 of this Agreement shall survive the termination of this Agreement.

7. YOU ACKNOWLEDGE THE LICENSED SOFTWARE IS PROVIDED "AS IS" AND NEITHER BENQ NOR ANY OF ITS LICENSORS MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE LICENSED SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR

OTHER RIGHTS. THERE IS NO WARRANTY BY BENQ OR ITS LICENSORS OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND BENQ AND ITS LICENSORS HEREBY DISCLAIM ANY AND ALL LIABILITY ON ACCOUNT THEREOF. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY A BENQ REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY AFFECT THIS DISCLAIMER. YOU ASSUME ALL RESPONSIBILITY TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE, AND RESULTS OBTAINED FROM IT.

8. NO OTHER OBLIGATIONS. This Agreement creates no obligations on the part of BenQ other than as specifically set forth herein.

9. LIMITATION OF LIABILITY. IN NO EVENT SHALL BENQ, ITS EMPLOYEES, LICENSORS, AFFILIATES OR AGENTS BE LIABLE FOR ANY DIRECT DAMAGES, LOST PROFITS, DATA OR BUSINESS, OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, INTERRUPTION OF BUSINESS OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY, ECONOMIC, PUNITIVE OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED, AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY, OR ARISING OUT OF THE USE OF OR INABILITY TO USE THE LICENSED SOFTWARE, EVEN IF BENQ IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE LIMITATION OF LIABILITY SHALL NOT APPLY IF AND TO THE EXTENT BENQ'S LIABILITY IS MANDATORY UNDER THE APPLICABLE LAW E.G. ACCORDING TO PRODUCT LIABILITY LAW

OR IN THE EVENT OF INTENTIONAL MISCONDUCT, PERSONAL INJURY OR DEATH.

10. TECHNICAL SUPPORT. BenQ and its Licensors have no obligation to furnish You with technical support unless separately agreed in writing between You and BenQ or the applicable Licensor.

BenQ and where applicable its Licensors in the Licensed Software shall be free to use any feedback received from You resulting from your access to and use of the Licensed Software for any purpose including (without limitation) the manufacture, marketing and maintenance or support of products and services.

11. EXPORT CONTROL. The Licensed Software may include technical data and cryptographic software and is subject to German, European Union and U.S. export controls and may be subject to import or export controls in other countries. You agree to strictly comply with all applicable import and export laws and regulations. Specifically, You agree, to the extent required by U.S. Export Administration Regulations, that You shall not disclose or otherwise export or re-export the Licensed Software or any part thereof delivered under this Agreement to (a) Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country (including a national or resident of such country) to which the U.S. has restricted or prohibited the export of goods or services.

12. APPLICABLE LAW AND FORUM. The laws of Germany govern this Agreement. No choice of law rules of any jurisdiction will apply. The courts in Munich shall settle any disputes arising out of or relating to this Agreement provided you are a merchant.

 
13. MISCELLANEOUS. This Agreement represents the entire agreement between You and BenQ relating to the Licensed Software and (i) supersedes all prior or contemporaneous oral or written communications, proposals, and representations with respect to its subject matter; and (ii) prevails over any conflicting or additional terms of any acknowledgement or

similar communication between the parties during the term of this License. Notwithstanding the foregoing, some products of BenQ may require You to agree to additional terms through an on-line "click-wrap" license, and such terms shall supplement this Agreement. If any provision of this Agreement is held invalid, all other provisions shall remain valid unless such validity would frustrate the purpose of this Agreement, and this Agreement shall be enforced to the full extent allowable under applicable law. No modification to this Agreement is binding, unless in writing and signed by a duly authorized representative of each party. This Agreement shall be binding on and shall inure to the benefit of the heirs, successors, and assigns of the parties hereto. The failure of either party to enforce any right resulting from the breach of any provision of this Agreement by the other party will not be deemed a waiver of any right related to a subsequent breach of such provision or any other right hereunder. Notwithstanding anything to the contrary in this Agreement, BenQ and/or its licensors may enforce its rights, including but not limited to copyright, trademark or trade names, in accordance with the rules of law in each country.

## Menu tree

<b>Phone Book</b>	>	Find Edit Add Copy Delete Caller Group Privacy Manager My Number Memory Status
<b>Messages</b>	>	SMS SMS Chat Voicemail Cell Broadcast
<b>Calls</b>	>	Missed Received Dialed Cleanup All Duration Cost
<b>Tools</b>	>	Alarm World Clock Games Calendar Shortcuts Calculator STK

## 36 Menu tree

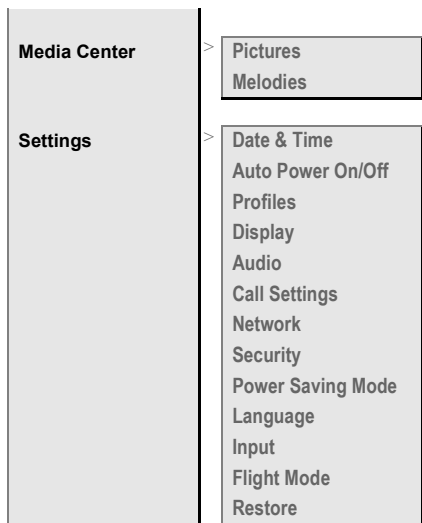

P/N: 4].xxxxx.xxx