 
 


## GODOX设计文件图注

|        |                 |    |     |
|--------|-----------------|----|-----|
| 项目类型   | 说明书             | 版本 | A   |
| 项目名称   | RC-R9II说明书      |    |     |
| 产品料号   | 705-RCR920-00   |    |     |
| 尺寸(mm) | 成品50x120mm      |    |     |
| 尺寸公差   | ±1mm            |    |     |
| 材质     | 105g铜版纸         |    |     |
| 工艺说明   | 单色，黑色印刷，折页，双面印刷 |    |     |
| 备注/色值  | 中文为页正面，英文页为反面   |    |     |
| 设计师    | 李佳龙             | 校对 | 吴水宁 |

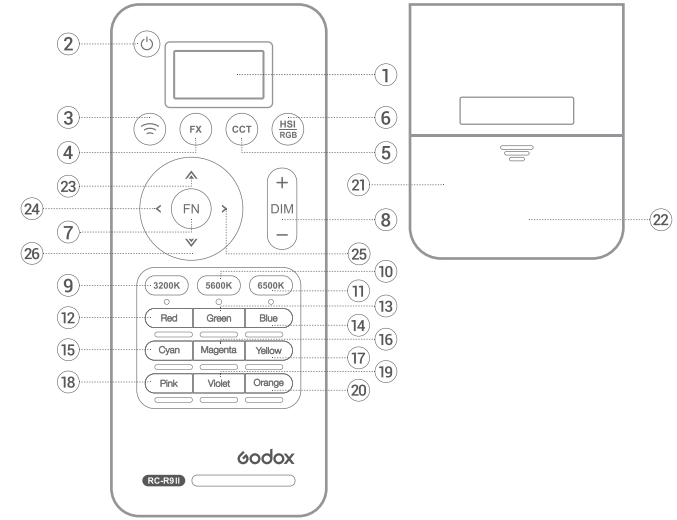

## 部件名称

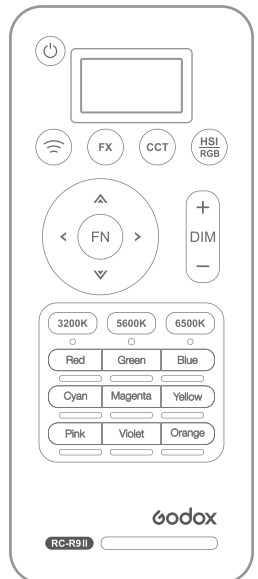

1. OLED屏

2. 电源开关按键

3. 无线设置按键

4. FX光效模式按键

5. CCT双色温模式按键

6. HSI/RGB彩光模式按键

7. FN按键

8. DIM亮度调节按键

9. 3200K色温按键

10. 5600K色温按键

11. 6500K色温按键

12. Red按键

13. Green按键

14. Blue按键

15. Cyan按键

16. Magenta按键

17. Yellow按键

18. Pink按键

19. Violet按键

20. Orange按键

21. 电池槽

22. 上键

23. 左键

24. 右键

25. 下键

## RC-R9II

### 遥控器

### Remote Control

#### 使用手册

 
#### Instruction Manual

## 遥控器设置

短按电源开关按键实现开机/关机。

### 1. 遥控器频道/组别/ID调整

按无线设置 按钮，进入频道/组别/ID设置界面。

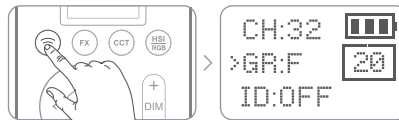


**CH设置:** 按上下键选中CH频道, 按左键或右键选择频道, 频道选择范围32个: 1-32。



**GR设置:** 按上下键选中GR频道, 按左键或右键选择组别, 组别选择范围16组(A B C D E F, 0-9)。



 **ID设置:** 按上下键选中ID, 按左键或右键选择ID, ID选择范围: 1-99。



### 2. FX光效模式设置

按FX按钮 进入彩光模式。按上键或下键选择光效模式种类, 选中后按左右键可选择当前类别中的模式: I, II, III 3种模式。情景光效模式有14类共39种, 可根据需求选择。

| 序号 | 显示  | 场景   | 显示I | 显示II | 显示III |
|----|-----|------|-----|------|-------|
| 1  | 显示  | 彩光循环 | 慢速  | 中速   | 快速    |
| 2  | 闪光灯 | 闪光灯  | 发布会 | 狗仔队  |       |
| 3  | 派对  | 派对   | 生日会 | KTV  | 迪斯科   |
| 4  | 雷闪电 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |
| 5  | 闪光灯 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |
| 6  | 闪光灯 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |
| 7  | 闪光灯 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |
| 8  | 闪光灯 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |
| 9  | 闪光灯 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |
| 10 | 闪光灯 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |
| 11 | 闪光灯 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |
| 12 | 闪光灯 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |
| 13 | 闪光灯 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |
| 14 | 闪光灯 | 闹夜   | 闹夜  | 闹夜   | 闹夜    |

### 3. 双色温模式

按CCT按钮 进入双色温模式, 按上/下/左/右键调节色温, 色温调节范围: 2500K-8500K, 上下键以±1000调节色温, 左右键以±100调节色温。也可直接短按 按钮 选择对应的色温: 3200K, 5600K, 6500K。



### 4. 彩光模式

按H按钮 进入彩光模式。按上键或下键选择色相H, 再按左右键调色相, 色相调节范围0-360°。



调节饱和度S: 按上键或下键选择饱和度S, 再按左右键调节饱和度, 饱和度调节范围0-100。



也可以直接选择遥控器上对应的彩色: Red, Green, Blue, Cyan, Magenta, Yellow, Pink, Violet, Orange。

### 5. 亮度调节

1. 当前单组灯亮度打开时, 按DIM+或-键调节亮度, 亮度调节范围为: 0-100%。

 


2. 打开/关闭单组亮度: 按无线设置键进入无线设置界面, 按上键或下键选中组别GR, 按FN打开或关闭当前组别灯亮度, 显示OFF为关闭状态, 显示数字0-100为打开状态。



注: 接收端在开机状态下才可以接收无线信号。

## Names of Parts

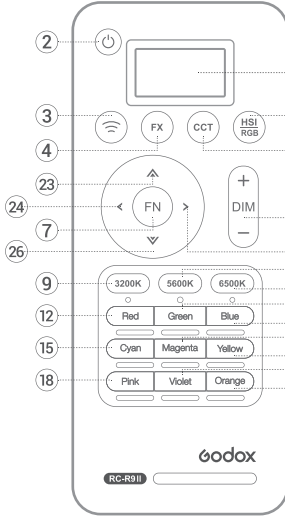

01. OLED Panel

02. Power Switch

03. Wireless Setting Button

04. FX Mode Button

05. CCT Bicolor Mode Button

06. HSI Colorful Light Mode Button

07. FN Button

08. DIM Brightness Adjustment Button

09. 3200K Color Temperature Button

10. 5600K Color Temperature Button

11. 6500K Color Temperature Button

12. Red Button

13. Green Button

14. Blue Button

15. Cyan Button

16. Magenta Button

17. Yellow Button

18. Pink Button

19. Violet Button

20. Orange Button

21. Battery Compartment

22. Battery Compartment Cover

23. Up Button

24. Left Button

25. Right Button

26. Down Button

## Remote Control Setting

Short press the power switch button to power on or off the remote control.

### 1. Remote Control Channel/Group/ID Adjustment

Press wireless setting button 按钮 to enter channel/group/ID setting interface.



 
**CH Setting:** Press up and down button to choose CH channel and press left or right button to choose channel value from 1 to 32.



**GR Setting:** Press up and down button to choose GR group and press left or right button to choose group value from A to F and 0 to 9.



**ID Setting:** Press up and down button to choose ID and press left or right button to choose ID value from 1 to 99.

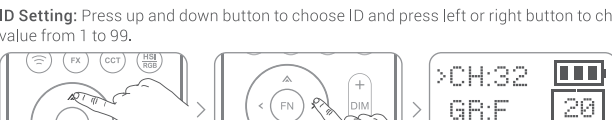


### 2. FX Modes Setting

Press FX to enter FX modes and press left or right button to choose the categories of them. After choosing the kinds, there are I, II and III modes can be selected. There are 39 kinds of situational FX modes which are divided into 14 categories for your choice.

| No. | Display | Situation               | Display I      | Display II       | Display III |
|-----|---------|-------------------------|----------------|------------------|-------------|
| 1   | 显示      | Colorful lights recycle | Slow speed     | Medium speed     | Quick speed |
| 2   | 闪光灯     | Flash                   | Flash          | Press conference | Paparazzi   |
| 3   | 派对      | Party                   | Birthday party | KTV              | Disco       |
| 4   | 雷闪电     | Lightning               | Discontinuous  | Frequent         | Sustainable |
| 5   | 闪光灯     | Broken bulb             | Discontinuous  | Frequent         | Sustainable |
| 6   | 闪光灯     | TV                      | Slow speed     | Medium speed     | Quick speed |
| 7   | 闪光灯     | Candle                  | Discontinuous  | Frequent         | Sustainable |
| 8   | 闪光灯     | Fire                    | Firewood       | Campfire         | Fire hazard |
| 9   | 闪光灯     | Firework                | Brief          | Continuous       | Show        |
| 10  | 闪光灯     | Police car              | Strong flash   | Frequent flash   | Quick flash |
| 11  | 闪光灯     | Fire truck              | Strong flash   | Frequent flash   | Quick flash |
| 12  | 闪光灯     | Ambulance               | Strong flash   | Frequent flash   | Quick flash |
| 13  | 闪光灯     | Music                   | Music I        | Music II         |             |
| 14  | 闪光灯     | SOS                     |                |                  |             |

### 3. Bicolor Modes

 Press CCT button to enter bicolor modes and press up, down, left and right button to choose the color temperature from 2500K to 8500K. Press the up and down button will change the color temperature by ±1000 per time while pressing the left and right button by ±100 per time. You can also choose 3200K, 5600K and 6500K directly by pressing the corresponding buttons.

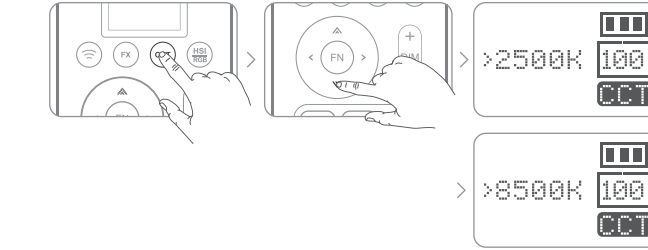

### 4. Colorful Light Mode Setting

Press HSI button to enter colorful light modes.

Adjust hue H: press the up or down button to choose hue H. Then, press the left or right button to adjust hue value from 0 to 360°.



Adjust saturation S: press the up or down button to choose saturation S. Then, press the left or right button to adjust saturation value from 0 to 100.



You can also choose Red, Green, Blue, Cyan, Magenta, Yellow, Pink, Violet and Orange color directly by pressing the corresponding buttons..

### 5. Light Brightness Adjustment:

1. When the current single light's brightness is displayed, press DIM + or - button to adjust the brightness from 0 to 100%.



2. Turn on/off the single group's brightness: press the wireless setting button to enter wireless setting interface. Press the up or down button to choose the group GR and press the FN button to turn on or off the single group's brightness. When the brightness is off, OFF will be displayed. When the brightness is on, figure 0 to 100 will be displayed.

**Note:** Wireless signals can only be received when the receiving end is powered on.

## Technique Data

|                                 |                                   |
|---------------------------------|-----------------------------------|
| Remote Control                  | RC-R9II                           |
| Power Supply                    | 3.0V(AAA*2)(battery not included) |
| 2.4G Frequency Range            | 2413.0MHz-2464.5MHz               |
| Max. Transmitting Power         | 5dbm                              |
| Distance(empty)                 | 100m                              |
| Channel                         | 32(1 to 32)                       |
| Grouping                        | 16 Group(A B C D E F, 0 to 9)     |
| ID                              | 99 (1-99)                         |
| Working Environment Temperature | -10~+40°C                         |
| Dimension                       | 55x133x10mm                       |
| Net Weight                      | 63g                               |

## Warning

Operating frequency:2413.0MHz-2464.5MHz  
Maximum EIRP Power: 5dBm

### Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.For more information of DoC, Please click this web link :https://www.godox.com/DOC/-Godox\_RC-R9II\_DoC.pdf. The device complies with RF specifications when the device used at 0mm from your body.

## 规格参数

|         |                       |
|---------|-----------------------|
| 遥控器     | RC-R9II               |
| 供电      | 3.0V(AAA*2)(不包括电池)    |
| 无线频率    | 2.4GHz                |
| 距离 (空旷) | 100m                  |
| 频道      | 32个(1-32)             |
| 分组遥控    | 16组(A B C D E F, 0-9) |
| ID      | 99个(1-99)             |
| 工作环境温度  | -10~+40°C             |
| 产品尺寸    | 55x133x10mm           |
| 净重      | 63g                   |

## 产品保修

尊敬的用户, 本保修卡是申请维修服务的重要凭证, 请您配合销售商填写并妥善保管, 谢谢!

| 产品信息  | 型号   | 产品条码 |
|-------|------|------|
| 用户信息  | 姓名   | 联系电话 |
| 销售商信息 | 名称   | 联系电话 |
| 备注    | 销售日期 |      |

注: 此表应由销售商盖章确认。

### 通用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品, 其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

### 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算, 购买日以购买产品时保修卡登记日期为准。

### 如何获得维修服务

您可直接与销售商或授权服务机构联系, 也可拨打神牛产品服务电话, 与我们联系, 由我们的服务人员为您安排服务。申请保修时, 您需提供有效的保修卡作为保修凭证, 方可获得保修。如您不能提供有效的保修卡, 则在我们可确认产品或部件属于保修范围的情况下, 也可以为您提供保修, 但这不作为我们的义务。

### 不适用保修的情况

如产品存在下列情况, 本文件项下的保证和服务将不适用 ①产品或部件超过相应保修期; ②错误或不适当使用、维护或保管导致的故障或损坏, 如: 不当搬运; 非按产品合理预期用途使用; 不当插拔外接设备、跌落或外力挤压; 接触或暴露于不当温度、溶剂、酸碱、水浸或潮湿环境; ③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏; ④产品或部件原有识别信息被修改变更或删除; ⑤无有效保修卡; ⑥使用非法授权、非标准或非公开发行的软件造成的故障或损坏; ⑦因不可抗力或意外事件造成的故障或损坏; ⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况, 您应向相关责任方寻求解决, 神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的, 不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗, 不是保修范围内的故障。

### 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

| 产品类别 | 零件名称                              | 保修期 (月) | 保修服务类型 |
|------|-----------------------------------|---------|--------|
| 部件   | 电路板                               | 12      | 客户送修   |
|      | 电池                                | 3       | 客户送修   |
|      | 充电器等带电性能的部件。                      | 12      | 客户送修   |
| 其他   | 如闪光灯、造型灯、外壳、保护罩、锁紧装置、包装、电源线、同步线等。 | 无       | 无保修    |

神牛产品服务电话: 0755-29609320-8062

### 深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道锦程社区福川工业区厂房2栋  
电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

### GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaohuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423  
E-mail: godox@godox.com

### godox.com

Made in China 1 705-RCR900-02



## Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following

### Product Maintenance Information:

| Product Type | Name                                                                                                    | Maintenance Period(month) | Warranty Service Type                         |
|--------------|---------------------------------------------------------------------------------------------------------|---------------------------|-----------------------------------------------|
| Parts        | Circuit Board                                                                                           | 12                        | Customer sends the product to designated site |
|              | Battery                                                                                                 | 3                         | Customer sends the product to designated site |
|              | Electrical parts e.g.battery charger, etc.                                                              | 12                        | Customer sends the product to designated site |
| Other Items  | Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, power cord, sync cable, etc. | No                        | Without warranty                              |

Godox After-sale Service Call 0755-29609320-8062

### Warranty Period

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

| Product Information  | Model        | Product Code Number |
|----------------------|--------------|---------------------|
| Customer Information | Name         | Contact Number      |
|                      | Address      |                     |
| Seller Information   | Name         | Contact Number      |
|                      | Address      |                     |
|                      | Date of Sale |                     |

Note: This form shall be sealed by the seller.

### Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g., promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.