
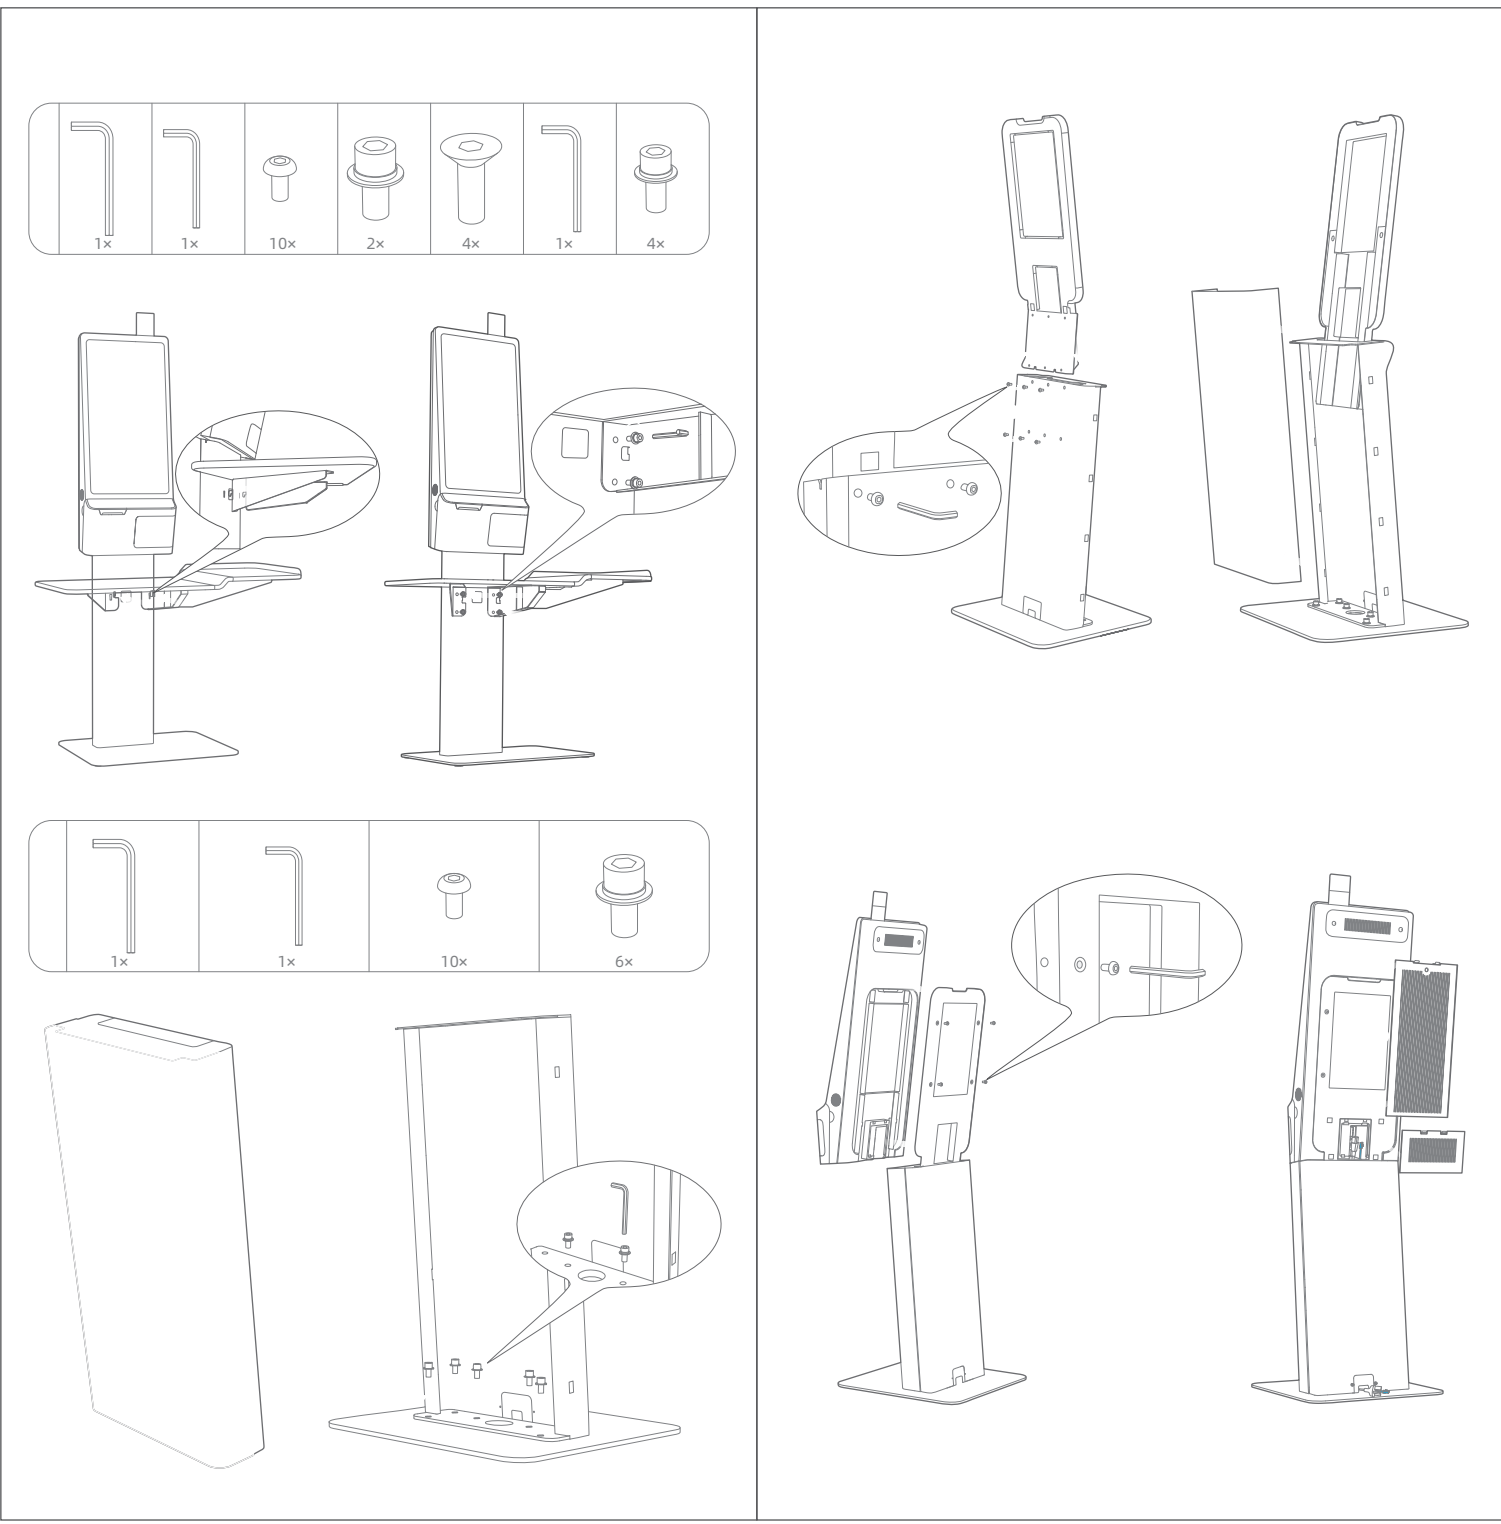
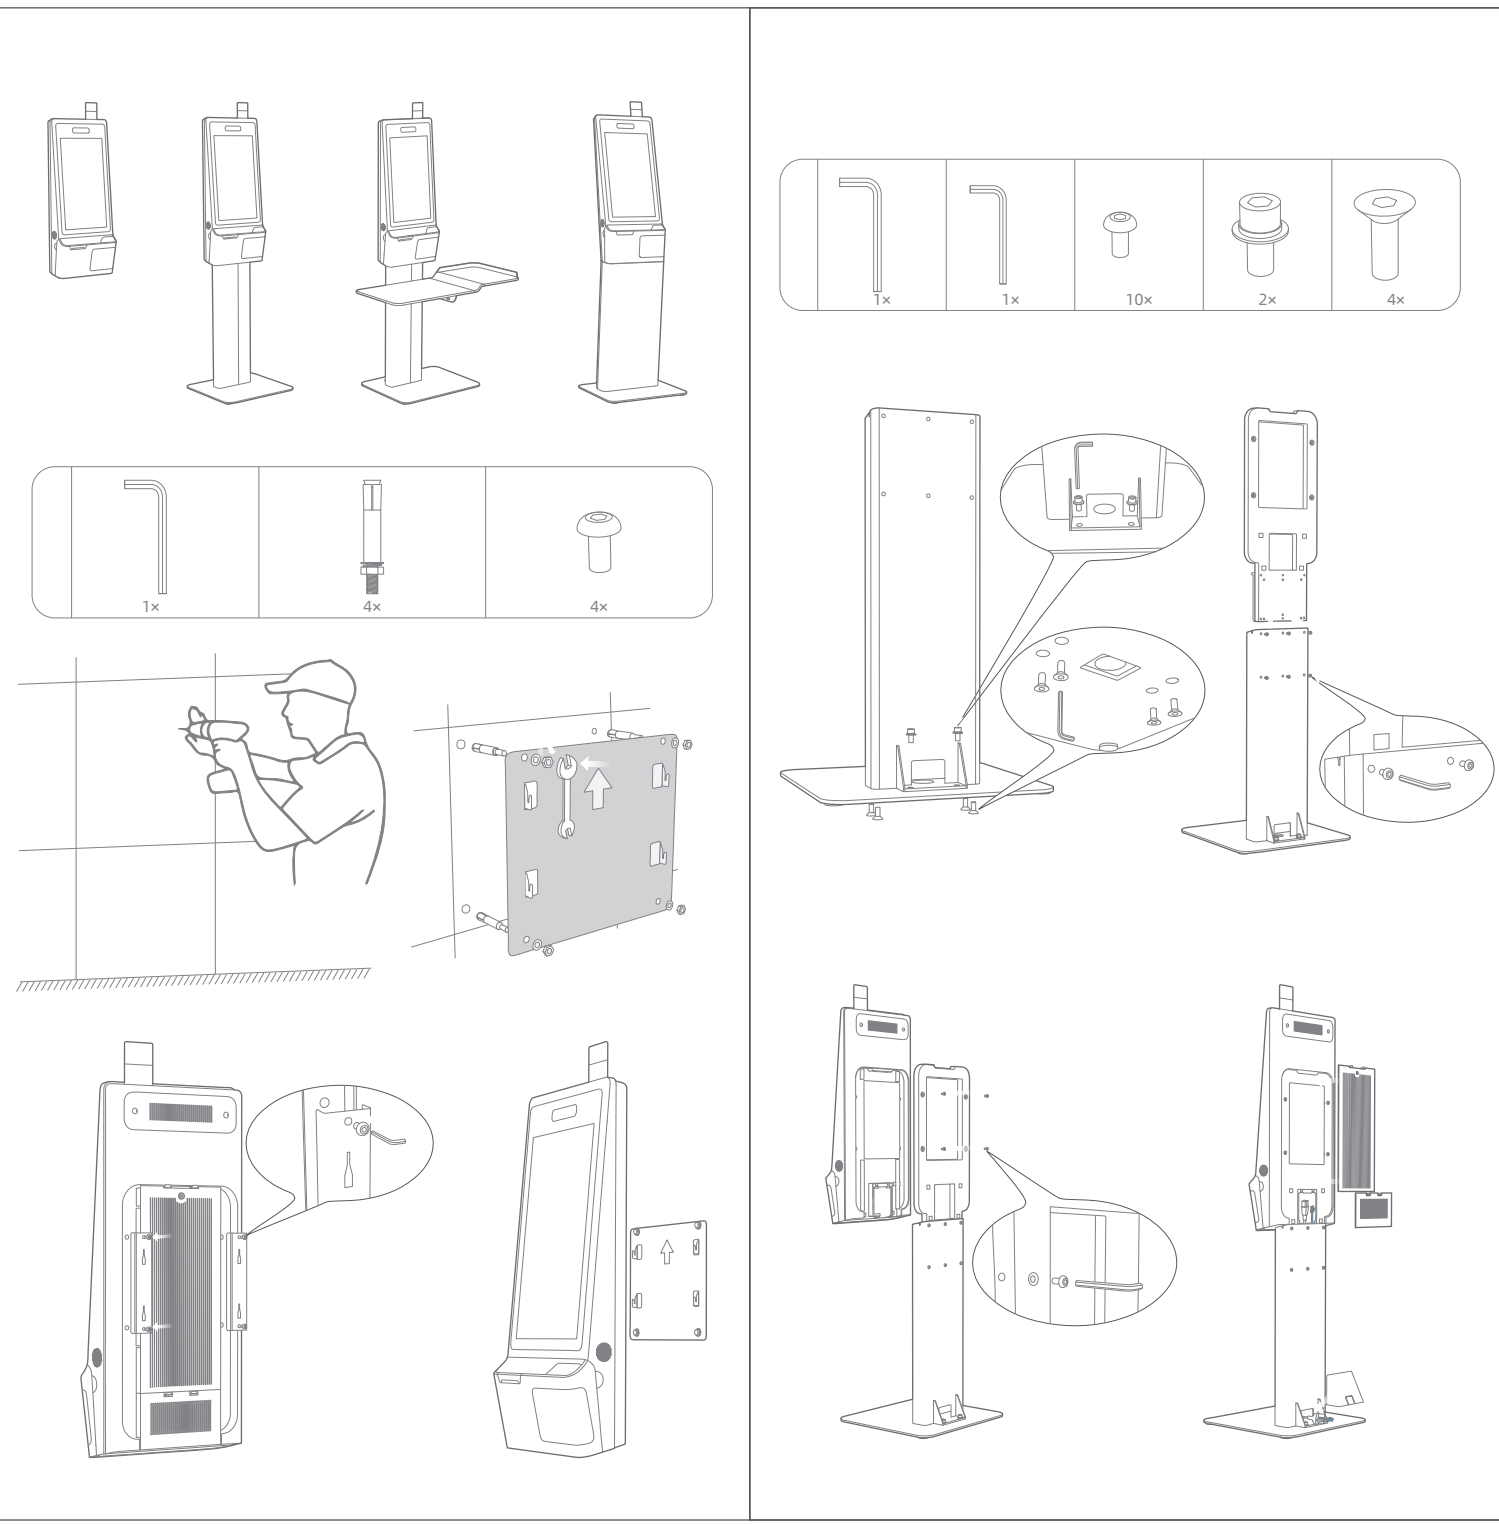


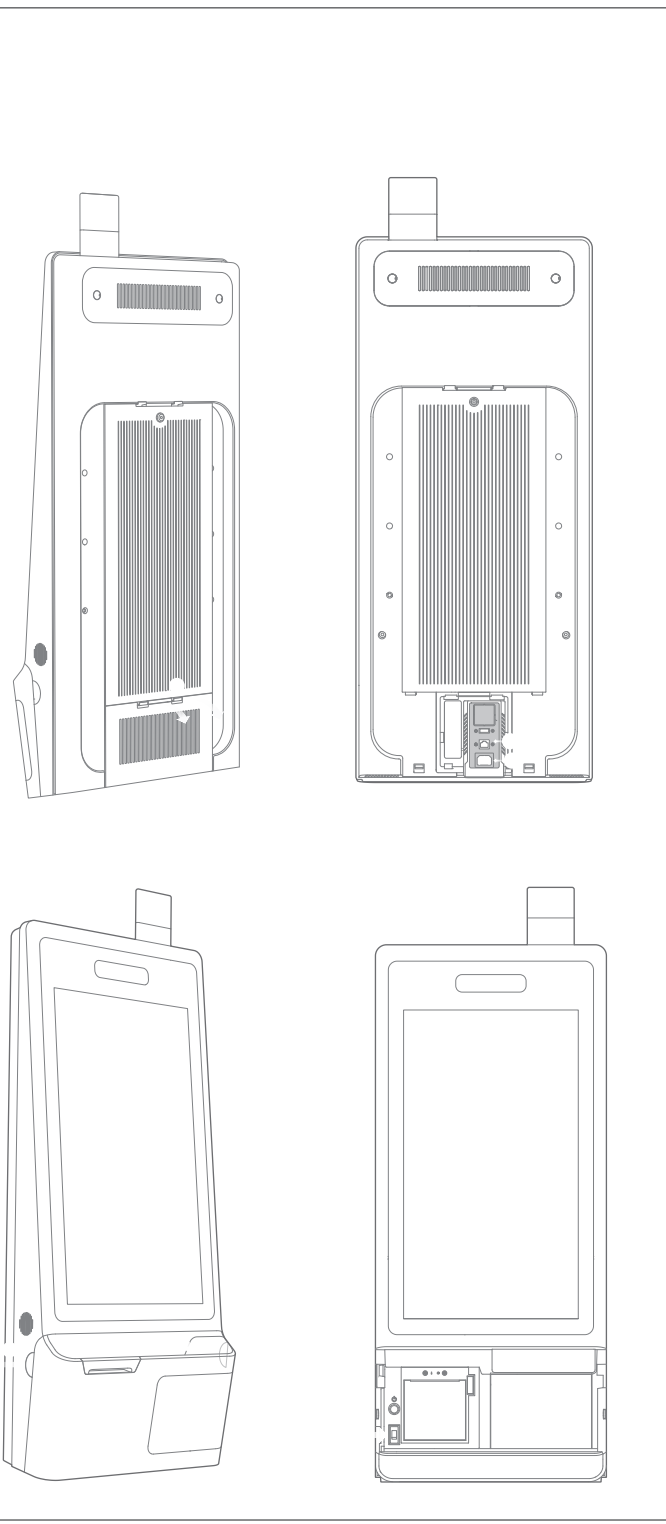

Press the buttons on both side of the host at the same time to open the flip panel.

Toggle downward the printer driving lever to open the paper storage cover.

Put in the 80mm thermal sensitive paper with a roller in it and pull out a section outside the printer exit.

Press both sides of the paper storage cover to close it.
The printer will automatically cut paper in power on state.
In power off state, it is necessary to manually tear off excessive paper:
Close the flip panel.

