

Home position



The display is home position.

In the desktop window, slide down or up on the touch panel.



STEP1

Tap the “設定(=Settings)” icon (red frame part)



STEP2

Tap the “すべてを見る(=All setting menu)” icon (red frame part)



The display after the STEP1 and scroll down.

STEP3

Tap “端末情報 (=About phone)” icon (red frame part) and scroll down.



The display after the STEP2 and scroll down.

