


P909 9" Polaroid Tablet User Guide

08/01/2016

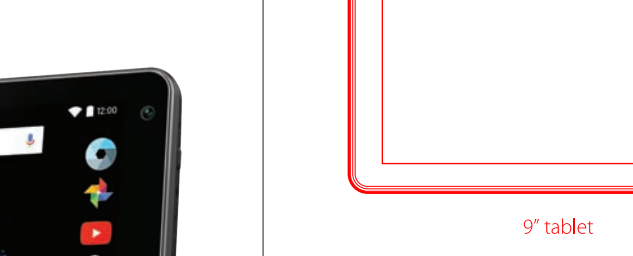

Polaroid | 9" HD TABLET
HENA

P909 /MID-9526L
User Guide


In the box

- 9" tablet
- User guide
- USB charging cable
- Charger

Care & safety precautions

- During charging, keep your device and charger near room temperature for efficient battery charging.
- New batteries do not fully charge.
- New batteries or batteries stored for a long time may take more time to charge.
- The included charger is intended for indoor use only.
- Service should only be provided by an authorized service provider.
- Never attempt to disassemble, repair or modify the tablet yourself.
- Do not use the tablet in rain or other wet locations.
- Avoid falling any liquid on the tablet.
- Do not use the tablet gets wet, unplug all cables and turn off the tablet.
- Do not attempt to dry the tablet with an external heat source.
- Unplug all cables and turn off the tablet before cleaning.
- Use a soft, lint-free cloth to clean the tablet and display.
- Avoid getting moisture in open ports.
- Do not use household cleaners, solvents, alcohol or abrasives to clean the tablet.
- Regularly check the tablet for proper and safe conditions. If there is any damage, or broken parts, remove the tablet from use.
- If for any reason the screen display is fractured or cracked, immediately remove the product from use and contact Customer Support.
- It is not possible for devices to be triggered by light flashes or patterns such as those on computer or TV screens. To reduce exposure to this potential hazard, play/watch in a well-lit room, at a recommended distance from the screen and take 10-to-15 minute breaks every hour.
- Children should be supervised when using the tablet.
- Keep out of reach of children under 3 years of age.
- Children pulling on the cord could cause the computer monitor or other equipment to which the device is connected to fall with possibility of property damage, serious injury or death. Adult supervision required during use.
- Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss.
- When using headphones or earbuds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment, turn the volume down if you cannot hear the people speaking near you.
- Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected.
- If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

Buttons, ports & hardware

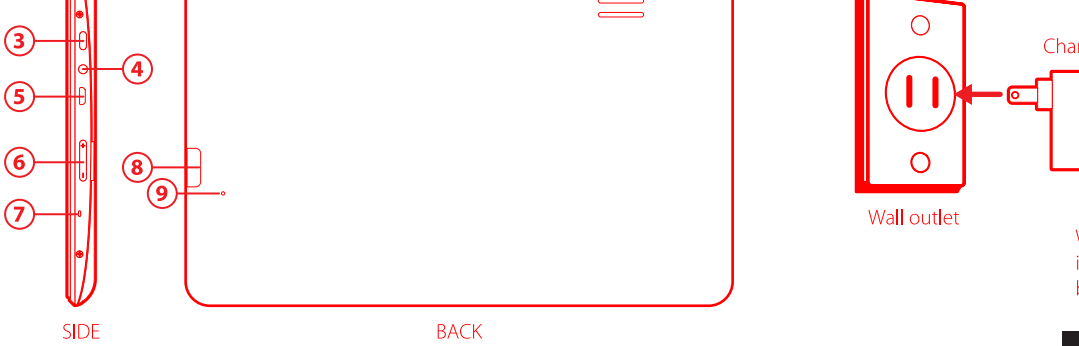

- 1 9" HD display
- 2 Built-in camera (video chat)
- 3 Power button
- 4 Headphone jack
- 5 Micro USB port
- 6 Volume buttons
- 7 Microphone
- 8 Micro SD card slot
- 9 Reset button
- 10 Speaker

Specifications:

- 9.0" HD display (1024 x 600)
- Android 6.0, Marshmallow
- Quad-Core processor
- 8GB internal storage
- Micro SD card slot
- Built-in camera (video chat)
- Wi-Fi
- Bluetooth®

Power ON / OFF

Turning on the tablet
Press & hold the  button until the startup screen appears.

Power off the tablet
Press & hold the  button until the "Power off" option appears.

Lock the tablet (standby)
Briefly press the  button. (Lock the tablet to conserve the battery).

Unlock the tablet
Briefly press the  button, and slide the "Lock icon" up.

Initial Setup

- Press and hold the Power button to get started.
- Follow the initial setup wizard prompts.
- To use the Google Play store, sign into or create a Google account.



Power ON / OFF

Turning on the tablet
Press & hold the  button until the startup screen appears.

Power off the tablet
Press & hold the  button until the "Power off" option appears.

Lock the tablet (standby)
Briefly press the  button. (Lock the tablet to conserve the battery).

Unlock the tablet
Briefly press the  button, and slide the "Lock icon" up.

Initial Setup

- Press and hold the Power button to get started.
- Follow the initial setup wizard prompts.
- To use the Google Play store, sign into or create a Google account.



Power ON / OFF

Turning on the tablet
Press & hold the  button until the startup screen appears.

Power off the tablet
Press & hold the  button until the "Power off" option appears.

Lock the tablet (standby)
Briefly press the  button. (Lock the tablet to conserve the battery).

Unlock the tablet
Briefly press the  button, and slide the "Lock icon" up.

Initial Setup

- Press and hold the Power button to get started.
- Follow the initial setup wizard prompts.
- To use the Google Play store, sign into or create a Google account.



Home screen

Press and hold widgets to place them on the home screen as shown below.

Press icon on the home screen to access the Apps Screen.

Home Screen

Apps Screen

Notifications panel

Swipe down from the top edge of the screen to display the Notifications panel where you can browse and reply to your emails, check software updates, reminders and other.

Quick Settings panel

Swipe down **twice** from the top edge of the screen to expand and access the Quick Settings panel, where you can easily enable/disable Wi-Fi, Bluetooth, Airplane mode and other settings.

Connecting

Wi-Fi and Bluetooth

To enable/disable Wi-Fi or Bluetooth, simply tap the icons on the Quick Settings panel as shown below.

To access more settings options, select the icon.

Expanding the storage Inserting a Micro SD card The tablet supports Micro SD cards up to 64GB (not included). To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place. To remove the Micro SD card, gently press it inward to eject.	Transferring files - Connect the tablet to the computer using the included USB charging cable as shown below. - Tap the "USB for charging" notification on the tablet screen. - Select "File transfers".	Resetting If the tablet malfunctions or freezes, you can use the reset button to restart it. To reset the tablet, take a metal pin (such as the end of a paper clip) and gently push the recessed reset button on the side of the tablet as shown below. The tablet will restart.	Legal information FCC Part 15: This Product has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) Rules. These requirements are intended to provide reasonable protection against harmful interference in residential environments. This equipment operates under certain radio frequency energy and electromagnetic noise conditions and its operation may cause interference if used near sensitive electronic equipment. No guarantee is made that such interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the receiver off/on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna; - Increase the separation between the equipment and the receiver; - Plug all electrical outlets into a circuit different than that to which the receiver is connected; - Consult the dealer or an experienced radio-TV technician for help. We do attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. *This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.* Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits. Information Regarding Exposure to Radio Frequency Energy Your Device is designed and manufactured not to exceed the maximum limits for exposure to RF energy set by the Federal Communications Commission of the United States (FCC). Information on your Device is on file with the FCC and can be found under the Display Game section of http://www.southcom.com after searching on the FCC ID by your Device, which can be found on the back of the Device. PUR Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, we should properly dispose of this product in accordance with applicable regulations, directives or other government rules in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product. You may also go to www.e-waste.com and reference Social Responsibility: http://www.pdofair.com/social-responsibility to learn more about the specific laws in your area and to locate a collection facility near your home. Battery Disposal & Recycle This device contains a lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal. ☎ 800.622.4487	Limited Warranty LIMITED WARRANTY TO ORIGINAL CONSUMER This Product sold in the original packaging(s) is supplied and distributed new by an authorized reseller as warranted by AT&T. (AT) to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows: Product Type: Tablet, Territory : United States / Canada , Parts Number : 1 Year, Labor Number : 1 Year To obtain warranty service: - Contact the Customer Support number located below, or go to our website portal to receive an SRD number. - Provide proof of the date of purchase within the package (Date of bill of sale). - Display all shipping costs to the authorized service center, and remember to include return postage. - Include a return shipping address (PO Box), a telephone contact number, and the defective unit within the package. - Describe the defect or reason why you're returning the product. Customer Support ☎ 1-877-684-8487 (toll free) Monday - Friday, 8AM - 1PM EST www.southcomtec.com Click on "Product Support" Your product will be repaired or replaced at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products returned damaged as a result of shipping will require you to file a claim with the carrier. The shipping address of the authorized service center is: ☛ Customer Service Dept. 36 c/o Southern Telecom 400 Kennedy Drive Bayville NJ 08007 Warranty services not provided This warranty does NOT cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voidable in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OTHER THAN THOSE WE EXPLICITLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTION THROUGH DISCOUNTS ALL WARRANTIES ARE THE PROPERTY OF SOUTHERN TELECOM AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR SHOP OR END USER. REGARDLESS OF THE ORIGINAL PURCHASE PRICE, AT DISTRIBUTE'S SOLE DISCRETION, ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER IN EVENT THAT DEFECTIVE OR DAMAGED GOODS DO NOT MEET OUR POLICY OF REPLACEMENT OR SPECIAL FINANCIAL OFFERINGS. RETURN OF NON-DANGEROUS OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECROSS CAUSED BY THE USE, MISUSE OR IMPAIRMENT TO USE THE PRODUCT, IS EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. INTENTIONAL VIOLATION OF THESE TERMS WILL VOID YOUR RIGHTS AGAINST US AND YOU AGREE TO WAIVER YOUR RIGHTS UNDER THE LAW. Some countries, states or provinces do not allow the reduction or limitation of consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have others that vary from state to state or province to province. Consult your authorized reseller to determine if another warranty applies. FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment . This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
--	--	--	--	---