DONNER

CREATE DOTHESIC MOMENT

Dobuds Open DIW:311

Operation Manual | MANUEL D'INSTRUCTIONS | BENUTZERHANDBUCH Manuale di Istruzioni | Manual de instrucciones | 操作マニュアル



CONTENTS

Thank you for choosing Donner!

IN THE BOX



Charging case × 1



Ture Wireless Stereo earbuds



• USB Type-C cable × 1



User manual × 1

PRODUCT OVERVIEW


Earbud:




Charging Case:




Charging Case Battery Indicator Light

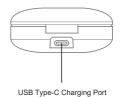

WEARING

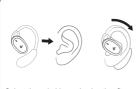


Select the suitable eartip size that fits your ear.

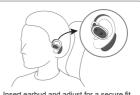

Insert earbud and adjust for a secure fit.

CHARGING

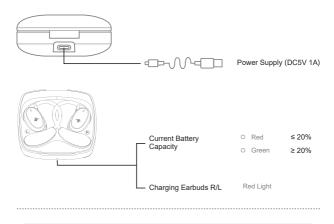

Fully charge the battery before using the earbuds for the first time or when they have been unused for extended periods.

BLUETOOTH PAIRING



Open the charging case, the earbuds will be wakened up, and enter the BT pairing status.






Activate Bluetooth on your device. Search and select "Donner Dobuds Open" in your device settings to connect.



Pairing: Blink Blue and White.

Connected: Blink White.

CONTROLS

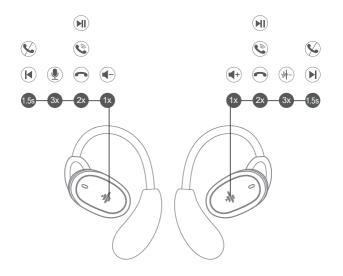

(4)	Power On	Auto: Take out from the charging case Manually: Tap and hold the MFB for 1s	
0	Power Off	Auto: Place back into charging case	
▶II) X2	Play/Pause	Double-tap the MFB	
€ -X1	Volume-	Single tap the left MFB	
€ + X1	Volume+	Single tap the right MFB	
(M) 1.5s	Previous Track	Press and hold left MFB for 1.5s	
1.5s	Next Track	Press and hold right MFB for 1.5s	
€ X2	Answer A Call	Double-tap the left/right MFB	
⊙ X2	Hang Up A Call	Double-tap the left/right MFB	
% 1.5s	Reject A Call	Long press the left/right MFB for 1.5s	
⊕ X3	Activate /Off Voice Assistant	Triple-tap the left MFB when the TWS connection succeeded. Triple-tap the left/ right MFB when in single-earbud mode.	

Note:

Earbud will automatically power off if it fails to connect with any mobile phone or other compatible devices within 3 minutes after the TWS connection is on.

RESET

Try the following steps if the earbuds cannot properly pair with each other or with other devices





Place the earbuds in the charging case and leave the case open.



Press and hold the reset button on the case for 3s until both indicators blink in white and blue. Reset is completed.



Reset Button

SPECIFICATIONS

Model	DTW-E11	
Bluetooth Version	Bluetooth 5.3	
Bluetooth Frequency	2.402GHz~2.480GHz	
Bluetooth Transmitted Power	< 8dBm	
Paired Name	Donner Dobuds Open	
Operation Mode	Touch control	
Charging Port	Type-C	
Operating Range	≥10m(No obstacles between)	
	Earbud	About 8H
Talk/Play Time		About 6.5H
runor lay rinic	With charging case	About 32H
		About 26H
Charging Time	≤1.5H	
Pattony Canacity	50mAH(Earbuds)	
Battery Capacity	400mAH(Charging case)	

CAUTIONS

Hearing Comfort

To prevent damage to your hearing, please do not raise the volume too high.
Listening to loud sounds for an extended period may cause temporary or permanent hearing loss.

Traffic Safety

 Do not use headphones while walking, driving, or cycling, which may cause traffic accidents.

Placement

 Do not store it in the following environments: Direct sunlight, high temperature, excessive humidity, excessive dust, and strong vibration.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. FCC Radiation Exposure statement

The device has been evaluated to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.