

MVTAG



Item Locator Quick Start Guide

Getting Started

01

1. Power On / Off:

- Press your Item Locator's function button once to turn on – it should beep once indicating it is powered on.
- To power off, hold the same button for at least 5 seconds. You will hear 2 beeps indicating your Item Locator is powered off.

2. Check For Updates:

- To use the Apple Find My app to locate your Item Locator, the latest version of iOS, iPadOS, or macOS is recommended.



Function Button

Add Your Item Locator

02

1. Start the App

- Open Find My™ app on your supported iPhone or iPad.
- Allow notifications from the app.

2. Connect your Item Locator

- Power on your Item Locator.
- In Find My™ app, select the "Items" tab.
- Tap "Add Item" then tap "Other Supported Items".
- Once your Item Locator is located, tap "Connect".
- Choose a recognizable name and color for your Item Locator and tap "Continue".
- Find My™ will ask for confirmation to add your Item Locator to your Apple® ID. Tap "Continue".
- Tap "Finish" and your Item Locator will be set up and ready to be connected to whatever item you wish to locate (e.g. your keys).

Locate Your Item

03

1. Find Item Locator when It is Nearby

- Open Find My™ app and select the "Items" tab.
- Tap on your Item Locator from the list.
- Tap "Play Sound" to make your Item Locator beep.
- Tap "Stop Sound" to stop the beeps once you find your item.

2. Find Item Locator's Last Known Location

- Open Find My™ app and select the "Items" tab.
- Tap on your Item Locator from the list.
- Your Item Locator's last known location will appear on the map as the email you chose during set up.
- To navigate to that last known location, tap "Directions" to open the Maps™ app.

Find Item When Out of Range

04

1. Enabling "Notify When Left Behind"

- Open Find My™ app and select the "Items" tab.
- Tap on your Item Locator from the list.
- Under "Notifications", enable the "Notify When Left Behind" toggle.
- You will receive a notification when you leave your Item Locator behind and it's no longer in range of your device.

2. Enabling "Notify When Found"

- Under "Notifications", enable the "Notify When Found" toggle.
- When your Item Locator is seen by another Find My™ enabled device, you will receive a notification of its updated location.
- **Note:** "Notify When Found" can only be activated when your Item Locator is out of range.

When Your Item is Lost

05

1. Enabling "Lost Mode"

- Open Find My™ app and select the "Items" tab.
- Tap on your Item Locator from the list.
- Under "Lost Mode", tap "Enable".
- A screen detailing Lost Mode will pop up. Tap "Turn On".
- Enter your phone number or email address as your "Next".
- You may enter a message that will be shared with the person that finds your item.
- Tap "Activate" to enable "Lost Mode".
- **Note:** When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.
- **Note:** When "Lost Mode" is enabled, your Item Locator is locked and cannot be paired to a new device.

Resetting Your Item Locator

06

1. Remove the Item Locator from Find My™ app

- Open Find My™ app and select the "Items" tab.
- Tap on your Item Locator from the list.
- Please ensure "Lost Mode" is disabled.
- Scroll to the bottom of the screen and tap "Remove Item".
- A summary will appear. Tap "Remove" to confirm.

2. Factory Reset Your Item Locator:

- After successfully removing the Item Locator from Find My™ app, press the Item Locator's function button four times rapidly. You will hear a beep each time you press it and then hold it a fifth time until you hear a ringing chime.
- The Item Locator is now reset and ready to be paired to a new device.

But Wait... There's More

07

1. Replace the Battery:

- Use your fingernails at the small gap on the side of your Item Locator to carefully open the case.
- Replace the battery with a new CR2032 battery (placing it positive side up first, being up).
- Carefully close the Item Locator by aligning the top holes on both sides.



2. Unwanted Tracking Detection:

- If your iPhone detects that an unknown Item Locator is traveling with you, it will send you a notification. A sound will stop playing as you will be able to find it. These alerts are only activated when an Item Locator is not connected to its owner's phone, so your personal Item Locator will not trigger a sound if they are with you.

The Fine Print

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes not expressly approved by the party responsible for compliance could void the user's authority to operate this device. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction. Federal Communications Commission (FCC) Radiation Exposure Statement: Power is so low that no RF exposure calculation is needed.

The Fine Print

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.