


正面

100mm



Warnings

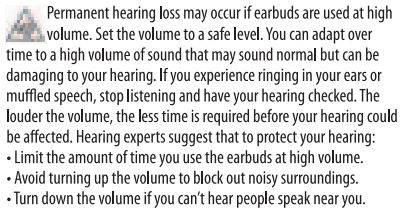

- **CAUTION:** Risk of fire and chemical burns. Do not open, crush, heat above 113°F, or incinerate. Batteries may explode if damaged. Follow manufacturer's instructions.
- Only recharge your battery with the provided approved cable designated for the product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose the battery as household waste or in a fire as it may explode.
- The battery in your product can not be removed or replaced by the user. Any attempt to do so is unsafe and may result in damage of the product.

Important: Use of earbuds while operating a vehicle, motorcycle, watercraft or bicycle is not recommended and is illegal in some areas. Check and obey applicable laws and regulations on the use of earbuds while your operating a vehicle. Be careful and attentive while driving. Stop listening to your audio device if you find it disruptive or distracting while operating any of vehicle or performing another activity that requires your full attention.

- Never expose your earbuds to high temperatures, extreme cold or submerge in water.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- In order to avoid the risk of electric shock, never attempt to open your earbuds or repair them, consult a certified professional.
- Your earbuds are not to be used by children without adult supervision.
- Do not clean the earbuds with harmful chemicals or detergents.

- Your product is powered by a rechargeable battery. The optimal performance of a new battery is achieved only after two or three complete charge and discharge cycles. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery.
- Always try to keep the battery between 32°F and 113°F. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged.

The diagram illustrates the components of the Earbud Charging Case and the Earbuds. It includes three views: an open case showing the interior, a closed case showing the bottom, and a side view of an earbud.

- 1** Earbud Charging Case
- 2** Left Earbud
- 3** Case Power Indicator
- 4** Earbud Charging Contacts
- 5** Right Earbud
- 6** Earbud Multi-Function Button
- 7** Microphone/Indicator Light
- 8** Micro-USB Charging Port

Note 4: The earbuds will attempt to automatically connect to the last device it was paired with when you remove the earbuds from the charging case. If you want to pair it with a new device, unpair the earbuds from the present device then follow the steps outlined above for the new device.

- The Bluetooth setting on your device may have been turned off. Turn on the Bluetooth function and search for the earbuds.
- The earbuds may have been connected to another device. Disconnect (unpair) the earbuds from the previous device before connecting them to your device.
- The earbuds may not have been recognized by your device. Turn off the earbuds then turn them back on. Search your Bluetooth settings on your device and connect the earbuds.
- The earbuds may be too far away from the device to connect. Make sure there are no obstacles between the devices and reconnect the earbuds.

a. The earbud's batteries need to be charged using the charging case.

"The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SRP Companies is under license. Other trademarks and trade names are those of their respective owners."

Function*	Operation
Answer a Call	Short press " " button once
End a Call	Short press " " button once
Reject a Call	Long press " " button for about 2 seconds
Last Number Redial	Quickly press " " button 3 times

* Note: Not all functions work with all devices or programs.

Function*	Operation
Pause	Short press " " button once
Play	Short press " " button once
Next Track	Press and hold the Right " " button for about 2 seconds until you hear a tone
Previous Track	Press and hold the Left " " button for about 2 seconds until you hear a tone

* Note: Not all functions work with all devices or programs.

Function*	Operation
Siri or Google Assistant	Quickly press “

* Note: Not all functions work with all devices or programs.

Micro-USB Cable (supplied)

Micro-USB Cable (supplied)

Wall Charger (not supplied)

Note 1: It takes approximately 2 hours to fully recharge the case.
Note 2: The earbud case must be connected to a power source to view the case's power indicator light.

Case's Power Indicator

1. Case's power indicator not lit.
 - Micro-USB cable is not fully inserted.
 - Make sure the micro-USB cable is receiving power from connected charger.
2. Case's power indicator is blue when an earbud is inserted.
 - Micro-USB cable is not fully inserted.
 - Make sure the micro-USB cable is receiving power from connected charger.

Diagram illustrating the location of the Earbud's Power Indicator, which is a small circular light on the side of the earbud.

2. Earbud is placed into the earbud case and earbud's power indicator light does not come on.

- Earbud case needs to be recharged.

Frequency Response: 20Hz-20KHz
Sensitivity: 102db $\pm$ 5db
Driver Unit: Diameter: 6.5mm, height: 4.9mm
Battery in Charging Case: 300mAh
Battery in Earbud: 50mAh
Earbud Battery Charge Method: Earbud Case
Battery Charge Time: Earphone: 1-1.5 hours. Charging Station: 1-2.0 hours
Battery Life Earphone: 2-1.5 hours
Supplied Accessories: Earbud Case and 25cm Micro-USB Cable
Bluetooth® Technology: 5.0 with A2DP Audio Processing
Effective Range: Straight-line distance 10m under no obstacle
Certification Type: FCC, Bluetooth
Specifications are subject to change without notice.

