 


REMOVE CAMERA FROM WATERPROOF CASE

1. To open the backdoor of the case, hold the camera so that you are looking at the screen. Push the backdoor latch to the right while pulling the latch towards you. Remove the camera from the case.

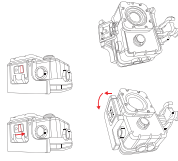

REMOVE BATTERY

2. Make sure the battery is completely charged before initial use. To charge the battery, use the USB cord provided in the package and plug into a power source while

CHARGE THE BATTERY

3. Make sure the battery is completely charged before initial use. To charge the battery, use the USB cord provided in the package and plug into a power source while

connected to the camera with the battery installed. The red LED light will illuminate while charging, and the battery symbol on the screen will show a full charge. ***Note: The battery will automatically record for approximately 70 minutes on a fully charged battery.

STORAGE


4. Find the MicroSDHC slot on the side of the camera. Insert your MicroSDHC card into the slot, and press until it clicks. Make sure the card is inserted correctly to avoid damage to the card or card reader. ***Note: MicroSDHC card sold separately. MicroSDHC Class 10/UHS-1 or higher required, up to 32GB.

POWER ON

5. Power on the camera by pressing and holding the button located on the front of the camera marked "mode".



BUCKLE MOUNTING SYSTEM

6. Most of the ROX included accessories utilize the buckle mounting system. (See above adhesive mount to a clean surface at room temperature.)

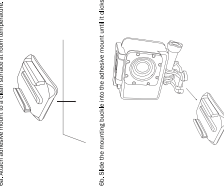

FIN-STYLE MOUNTING SYSTEM

7. The ROX camera also utilizes the fin-style mounting system. Just unscrew the mounting screws from the back of the camera, insert the fin into the hole, and push the camera into place. Then use the mounting screw to secure the camera again to stop the recording.

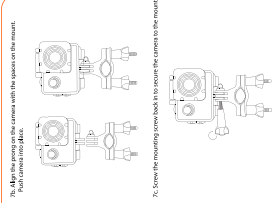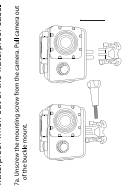

RECORD

8. Toggle between video, photo, and playback modes by pressing the Power/Mode button on the top of the camera. Press the button marked "On" on the top of the camera. Press the button again to stop the recording.

WASPCam ROX APP

9. The WASPCam ROX App lets you view and share video without the need to connect to a computer. Download the WASPCam ROX app from the App Store or Google Play Store. Turn Wi-Fi on the camera by holding the up button on the side of the camera. Connect the camera to the Wi-Fi network and connect to the camera with the WASP SSD and Password shown on the camera screen.

***Make sure Wi-Fi is turned on the camera screen before you are connecting to the camera.

FCC Statement

This device complies with FCC rules for Class B digital devices. The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC rules, which provides a reasonable protection against harmful interference in a residential installation. This equipment does not cause harmful interference, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. This interference can be avoided by turning the equipment off and on, the user is advised to take the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause occasional degradation of performance.

This device complies with Industry Canada's IC Statement.

(1) This device may not cause interference, and (2) this device must accept any interference that may cause occasional degradation of performance.

The term "IC" before the certification registration number only signifies that the Industry Canada has approved the technical specifications of the applicable Industry Canada technical specifications.

Le présent appareil ne cause pas d'interférence radio et accepte toute interférence radio qu'il pourrait recevoir.

Canada applicable aux appareils radio exempts de licence. L'appareil ne doit pas produire de brouillage.

(2) L'utilisateur de l'appareil doit accepter tout brouillage radio subi, y compris celui qui provient d'appareils fonctionnant en conformité avec les normes de l'industrie Canada.