



DUAL 6.5" 2-WAY P.A. SPEAKER
model 4001967

USER MANUAL



1. Packing contents
- 1x speaker
 - 1x remote control
 - 1x user manual
 - 1x Type-C cable (3mts)

MODEL	4001967
Type	Active with battery
AC input	5V Micro USB charge port
Size	Dual 6.5
Impedance	8ohm
Voice coil	1"(25mm)
Magnet	100Z
Sensitivity	87dB (+/-3dB)
Frequency response	50Hz-18KHz
Tweeter	25mm
Power (PMPO)	5000W
Battery capacity	7.4V, 4000mAh
Function	USB, TF, Bluetooth, TWS & FM

3. Amplifier



- "Mic1/Mic2": 6.35mm input for wired microphones
- "Aux": 3.5mm AUXIN input
- "TF" for TF card slot, music can be played by inserting TF card in this port
- "USB": it is a USB port. Music can be played by inserting a USB disk into this port
- "OFF/ON": power on/off switch
- Indicator light: when the Type-C charge cable is used to charge the audio through the Type-C port, the charging indicator is red. When the battery is full, the charging indicator is green
- Type-C port: charge by this Type-C port
- "Mic vol": adjust mic vol
- "Volume" adjust master volume of FM, musc & Bluetooth
- "Echo" adjust ECHO effect

Pause button: when playing music, press this button to pause playing. When in FM mode, press this key to search for FM channels.

Cycle button: in the music playing mode, this button can switch the cycle mode among the three modes of ONE, all and random play.

EQ button: in the music playing mode, you can switch between normal, classical, pop, rock, jazz & rock modes by pressing this button

Mic PRI button: press this button to set the microphone priority mode.

TWS button: Enter the Bluetooth mode first, then press the TWS button, the master screen flashes, and when the slave one does not flash, the pairing is successful. Bluetooth devices can be connected through the master speaker to play music synchronously between the two devices

Del button: in "TWS"mode, the paired device can be deleted by pressing this button

Previous song button: in the music playing mode, you can switch to the previous song by pressing this button; in FM mode, short press this button to switch the previous channel.


Next song button: in the music playing mode, you can switch to the next song by pressing this button; in FM mode, you can switch to the next channel by pressing this key

Mode button: press this button to switch between "aux", "Bluetooth"and "FM"

Light button: short press to control the blue backlight of "volume" potentiometer and the red light of two subwoofers at the same time

613SS

4. Remote control

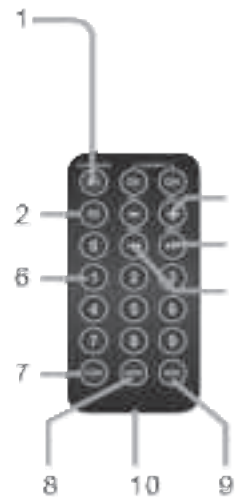

- 1. Press to play a song or pause while playing a song .
- 2. In play mode press to set one equalizer mode.
- 3. Vol+ /Vol-
- 4. Previous:Press once to jump previous song , press and hold to rewind.
- 5. Next /:Press once to jump next song,press and hold to fast-froward .
- 6. Keys :Use this key to select the number of a desired track.
- 7. Pick song :Allows you to select the song want to listen to so direct ,for example: if you want to hear the song no.11, first press the number 11 then press this button.
- 8. ENTER : Choose repeat mode.
- 9. MODEL :Select an operating modality ,the options are TF/USB and AUX.
- 10. Battery compartment (CR2025)

5. Caution

- Avoid exposing the speaker box to moisture. If they are set up outdoors, Be sure they are under cover.
- Do not use or store the equipment near wet or damp places. It may cause A malfunction or shock hazard.
- If the power cord is broken, it must be replaced by the manufacturer Or service agent or qualified personnel to avoid risks.
- To reduce the risk of fire or electric shock, do not expose this equipment to Rain or moisture.
- Clean only with a soft, dry cloth.

CAUTION:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the device and receiver.
--Connect the device into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment