

# **TRI-MODE TDMA PHONE**




 


## **MODEL: TDM-3100**

PRELIMINARY

Rev : 1.11  
Dat : February 27, 2001  
e



# Contents

1. SAFETY INFORMATION .....	7
2. PREPARING YOUR PHONE FOR USE .....	11
2.1 Install the battery .....	11
2.2 Remove the battery .....	11
2.3 Charge the battery .....	11
3. HIGHLIGHTS OF FEATURES .....	12
4. ABOUT THE PHONE .....	13
4.1 Name and function .....	13
4.2 Key functions .....	14
4.2.1  Selection keys .....	14
4.2.2  Key .....	14
4.2.3  Key .....	14
4.2.4  Number keys .....	14
4.2.5  Scroll keys .....	14
4.2.6  Volume keys .....	14
4.2.7 Using the selection keys .....	14
4.2.8 Using the scroll keys .....	14
4.3 About display indicators and icons .....	14
4.3.1 Start screen .....	15
4.3.2 Scroll bar .....	15
4.4 Display messages .....	15
4.4.1 No service .....	15
4.4.2 Dialing .....	15
4.4.3 Call Receive .....	15
4.4.4 Wait for service .....	15
5. BASIC OPERATIONS .....	16

5.1	Switch the phone ON or OFF	16
5.2	Make a call	16
5.3	Answering a call	16
5.4	Adjusting the earpiece volume	16
5.5	Redial the last-dialed number	17
5.6	Use caller ID	17
5.7	Keep calls private	17
6.	USE PHONE MENUS	18
6.1	Navigate menus	18
6.1.1	Scroll through menus	18
6.1.2	Use a shortcut	18
6.1.3	Exit menu levels	18
6.2	List of shortcuts	18
7.	ENTER LETTERS AND NUMBERS	21
7.1	Enter letters	21
7.1.1	Exit name	21
7.1.2	Change from capital (uppercase) letters	21
7.1.3	Use punctuation and special characters	21
7.2	Enter number	22
7.2.1	List of special characters	22
8.	USE THE PHONE BOOK	23
8.1	About the phone book	23
8.2	Use phone book menus	23
8.3	Add names and numbers	23
8.4	Change a stored telephone number	24
8.5	Recall and redial numbers	24
8.6	Erase stored names and numbers	24
9.	USE VOICE MAIL	25

9.1	Set up your voice mailbox	25
10.	WORK WITH THE CALL LOG	26
10.1	Call the call log	26
10.1.1	Check missed calls	26
10.1.2	Check previously dialed calls	27
10.1.3	Check received calls	27
10.2	Check call timers	27
11.	USE ADVANCED CALLING FEATURE	28
11.1	Set in-call options	28
11.2	Use call waiting	28
11.2.1	Store the call waiting feature code	28
11.2.2	Activate call waiting	28
11.2.3	Manage calls	29
11.3	Use call forwarding	29
11.3.1	Store the call forwarding feature code	29
11.3.2	Activate call forwarding	29
11.4	Redial automatically	30
11.5	Use a calling card	30
11.5.1	Save calling card information	30
11.5.2	Choose a calling card to use	31
11.5.3	Make a calling card call	31
12.	Customize your phone	32
12.1	What is a profile?	32
12.2	Customize a profile	32
12.2.1	Set the ringer volume	32
12.2.2	Set the ring tone	33
12.2.3	Set the message alert tone	33
12.2.4	Set ring style	33
12.2.5	Set a vibration	34
12.2.6	Set warning and game tones	34
12.2.7	Set keypad volume	35

12.2.8	Set your phone to answer automatically	35
12.3	Rename profiles	35
12.4	Restore defaults settings	36
12.5	Set the display language	36
12.6	Set and display the clock	36
12.6.1	Set the clock	36
12.7	Add a welcome note	36
13.	Security	38
13.1	Lock the keypad	38
13.1.1	Active keyguard	38
13.1.2	Deactivate keyguard	38
13.2	Restrict calls	38
13.2.1	Restrict incoming calls	38
13.2.2	Restrict outgoing calls	39
14.	Set network services features	40
14.1	Set up how your phone selects a system	40
14.2	Roaming	40
15.	SEND AND RECEIVE TEXT MESSAGES	42
15.1	About writing messages	42
15.1.1	Write with standard text input	42
15.2	Write and send a new text message	42
15.2.1	Save a message in the saved folder	43
15.3	Receive a text message	43
15.3.1	Read a text message	43
15.4	When your phone's memory is full	43
15.5	Delete a message	43
16.	Send and receive e-mail messages	45
16.1	Send an e-mail message	45
17.	USE YOUR PERSONAL ASSISTANT	46

17.1	Use the calendar .....	46
17.1.1	View the calendar .....	46
17.1.2	Add a calendar note .....	46
17.1.3	View the day's notes .....	47
17.2	Alarm clock .....	47
17.2.1	Set the alarm clock .....	47
17.2.2	Turn off the alarm clock when it tings .....	48
17.2.3	Turn off the alarm clock altogether .....	48
17.3	Calculator .....	48
17.3.1	Use the calculator .....	48
18.	GAMES .....	50
19.	TECHNICAL INFORMATION .....	51

# 1. SAFETY INFORMATION

## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

**WARNING!** Please do not use your Audiovox wireless telephone if you may be distracted from another activity (such as driving a motor vehicle or walking across the street) and create a safety hazard to yourself and others. Use your wireless telephone responsibly. Be alert to your surroundings whenever you operate your wireless telephone.

For the safe and efficient operation of your phone, observe the following guidelines:

### EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

**ANSI C95.1 (1992)\***  
**NCRP Report 86 (1986)\***  
**ICNIRP (1996)\***

\*American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1)

The design of your phone complies with the FCC guidelines ( and those standards).

**CAUTION!** To comply FCC radio-frequency exposure requirements, this phone must worn with the belt clip provided with the device. Use of accessories/configurations not approved by the company may result in non-compliance with FCC RF exposure limit, therefore should be avoided.

### ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized

antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

## **PHONE OPERATION**

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

## **TIPS ON EFFICIENT OPERATION:**

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

## **DRIVING**

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving—driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions so require.

## **ELECTRONIC DEVICES**

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON
- Should not carry the phone in a breast pocket



- Should use the ear opposite the pacemaker to minimize the potential for interference
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

### **Hearing Aids**

Some digital wireless phone may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### **Posted Facilities**

Turn your phone OFF in any facility where posted notices so require.

## **AIRCRAFT**

FCC regulations prohibit using your phone while in the air.

Switch OFF your phone before boarding an aircraft.

## **BLASTING AREAS**

To avoid interfering with blasting operations, turn your phone OFF when in a

"blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

## **POTENTIALLY EXPLOSIVE ATMOSPHERES**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## **FOR VEHICLES EQUIPPED WITH AN AIR BAG**

An air bag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## 2. PREPARING YOUR PHONE FOR USE

### 2.1 Install the battery

Simply place the battery in the grooves on the back of the phone. Then slide the battery upward until clicks.

### 2.2 Remove the battery

**Note:** Switch the phone off before removing the battery!

- Press and hold the button at the top of the battery.
- Slide the battery toward the bottom of the phone.
- Lift the battery off the phone.

### 2.3 Charge the battery

- Connect the lead from the charger to the bottom of the phone.
- Connect the charger to an AC wall outlet. The battery indicator bar starts to scroll.

**Note:** If the battery is totally empty, it may take a few minutes before the charging indication appears on the screen.

**Tip:** The phone can be used while charging if the phone is switched on.

**Note:** Disconnect your phone from the charger if the phone becomes hot during a call.

- The battery is fully charged when the battery indicator bar stops scrolling, and the Battery full text is briefly displayed if the phone is switched on. Charging time depends on the charger and battery used.
- Disconnect the charger from the AC outlet and the phone.

### 3. HIGHLIGHTS OF FEATURES

- Easy to read graphical display
- Phone book (up to 200 names and numbers)
- Easy to use keypad layout
- Side keys for ringer mute and volume control
- 3 Ring tones and 5 Ring style selections
- Adjustable ring volume
- Vibrating alert (optional)
- Quick access to the last 10 numbers dialed
- Caller ID (last 50 numbers)
- Games
- Auto redial
- Calculator
- Clock with Alarm
- Dialed, received, missed calls
- Call restriction
- Keypad lock
- Call timer
- Profile settings
- Security PIN code
- Short message service
- Voice mail capability
- 2 different NAM
- Multi-Languages (English, French, Spanish and Portuguese)
- Earphone / microphone jack

## 4. ABOUT THE PHONE

This phone operates in digital mode within the 800 and 1900MHz frequency bands and operates in analog mode within the 800 MHz range.

### 4.1 Name and function



## 4.2 Key functions

### 4.2.1 Selection keys

- Press to perform the function indicated by the text on the screen above the key.



### 4.2.2 Key

- Press to make a call to name / number shown on the screen.
- Press to answer a call.
- Press once to enter the list of last dialed numbers.

### 4.2.3 Key

- Press and hold the key to switch the phone on or off.
- Press to end a call.
- Press to temporarily mute a call.
- Press once to exit a function and to return to the start screen.

### 4.2.4 ~ Number keys

- Used for entering numbers and letters.
- Press and hold  to call the voice mailbox.
- Press  to toggle between upper case, lower case and numeric modes.

### 4.2.5 Scroll keys

- Press to move through the phone's menu or phone book.


### 4.2.6 Volume keys

- Press to increase the earpiece volume during a call.
- Press to decrease the earpiece volume during a call.



### 4.2.7 Using the selection keys

The functions of the selection keys depend on the guiding texts shown above the keys.

For example, when there is the text **MENU** above the left selection key , pressing this key enters the menu functions.

Similarly, pressing the right selection key  under text **NAMES** has access to phone book functions.

### 4.2.8 Using the scroll keys

The phone has two scroll keys,  and , located just below the screen. The scroll keys have up and down arrows on them, press these to move through the phone's menus and phone book.

## 4.3 About display indicators and icons


The display indicators and icons inform about the operation of the phone.

### 4.3.1 Start screen

The start screen displays when the phone is turned on. Several features can be used only when the phone is at the Start Screen.

### 4.3.2 Scroll bar

 When you access the phone's menu, there is a scroll bar at the far right of the screen. This bar indicates user's location in the menu: each "tab" on the bar represents a different menu item.

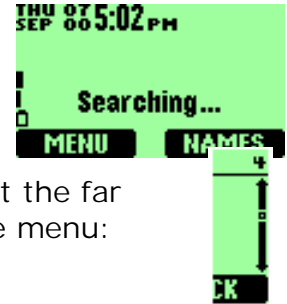

## 4.4 Display messages

### 4.4.1 No service

If the phone is out side the wireless service area, **No Service** will display on the display.

No calls can be made or received, including emergency calls.

### 4.4.2 Dialing

The phone is dialing the number shown in the display.

### 4.4.3 Call Receive


The phone is receiving a call.

### 4.4.4 Wait for service

The phone is waiting for service.

## 5. BASIC OPERATIONS



### 5.1 Switch the phone ON or OFF

- Press and hold the  key for two seconds to switch on the phone until the phone sounds a beep.

***Note:** If the phone has the vibrate alert option activated, the phone will also briefly vibrate.*

- To turn the phone off, press and hold  key until the phone sounds a beep and turns off.



### 5.2 Make a call

- 1 Hold the phone as you would any other telephone, with the earpiece over your ear and the microphone near your mouth.
- 2 Deactivate the keyguard, if it is on.
- 3 Enter the phone number-including the area code-and press .
- 4 Press  to end the call or to cancel the call attempt.

***Note:** It is normal for the phone to become hot during use. If the phone becomes too hot, it automatically drops the current call and returns to the "start screen". Until the phone cools, user will be unable to receive or make calls.*

### 5.3 Answering a call

To answer a phone call:

- 1 Press any key to answer the call.  to answer the call
- 2 Press  to end the call.

### 5.4 Adjusting the earpiece volume

You can adjust the earpiece volume (while in a call or at any time) by pressing the volume keys on the upper left side of the phone.


- Press the key up to increase the volume.
- Press down to decrease the volume.



## 5.5 Redial the last-dialed number

To redial the last-dialed number on your phone:

Stored numbers may be up to recently dialed numbers. Stored numbers may be up to 28 digits long.

1 If not there, return to the Start screen by pressing . Otherwise proceed to step •.

2 Press  two times.

## 5.6 Use caller ID

Caller ID is a network service that identifies incoming calls. Contact your service provider to find out how to get this feature.

When Caller ID is active, your phone shows the caller's phone number during an incoming call, as long as this number is a part of your service provider's wireless network.

The wireless network lets you know if it doesn't recognize the calling number. The wireless network will also let you know if the calling party has blocked the Caller ID feature.

If you have stored the name and number of the calling party in your phone book and that number is supported by the wireless network, the caller's name might also appear.

## 5.7 Keep calls private

The Voice Privacy feature encrypts the voice channel so that people cannot eavesdrop on your phone conversations.

Voice Privacy is a network service, so you must contact your service provider to obtain access to the feature.

To turn on Voice Privacy:

1 Press **MENU** **4** > **5** > **1** (Σεττινγς > Νετωορκ σερωιχε > ζοιχε πρωαχψ).

2 Press **ON**.



Repeat the steps above except, in step , press **OFF**.

# 6. USE PHONE MENUS

## 6.1 Navigate menus

A menu is a list of choices you can make. Your phone has 10 main menus. Each main menu contains numerous submenus that allow you to use the phone book, change the ringing tone, and so on. You can use menus and submenus two ways: by scrolling or by using shortcuts.


### 6.1.1 Scroll through menus

- 1 From the Start screen, press **Menu**, and then scroll through the menus using the  and  keys.
- 2 Press **Options**, **SELECT**, **ENTER**, or **OK**, using the selection keys, at the option you want.
- 3 Use the scroll and selection keys to navigate the submenus and to return to the Start screen.

### 6.1.2 Use a shortcut

To get to options directly, without scrolling through lists, you can use a shortcut.

### 6.1.3 Exit menu levels

- To return the previous menu level, press **BACK** or **EXIT**.
- To return to the Start screen, press .

No menu setting changes are saved.

## 6.2 List of shortcuts

Your phone's menu may differ from the following list, depending on the network services to which you have subscribed and the accessories you are using. If you have any questions, call your service provider.

1. Phone book
  1. **Details**
  2. **New**
  3. **Delete**
  4. **Speed Dial**
2. Call Log
  1. **Missed**
  2. **Received**
  3. **Dialed**
  4. **Timers**
    1. **Last Call**

- 2. Received
  - 3. Dialed
  - 4. Lifetime
- 3. Messages
  - 1. Inbox
  - 2. Outbox
  - 3. New Text Msg
  - 4. Use Template
  - 5. Write E-mail
  - 6. Voice Mail
    - 1. Call Voicemail
    - 2. Voicemail Num
- 4. Setting
  - 1. Call Settings
    - 1. Emergency Key 9
    - 2. Calling Card
    - 3. One-Touch Dial
    - 4. Auto Redial
  - 2. Phone Settings
    - 1. Date and Time
    - 2. Set Alarm Clock
    - 3. Languages
    - 4. Welcome
    - 5. Backlight
    - 6. Restore Defaults
    - 7. Minute Reminder
  - 3. Answer Settings
    - 1. Auto Answer
    - 2. Any Key Answer
  - 4. Network Services
    - 1. Voice Privacy
    - 2. Call Forwarding
    - 3. Call Waiting
    - 4. Caller ID
    - 5. Feature Settings
    - 6. NAM Selection
  - 5. Security Settings
    - 1. Call Restriction
    - 2. Access Codes
- 5. Profiles
  - 1. General
    - 1. Select
    - 2. Customize (the following submenus appear in all profiles)
      - 1. Volume
      - 2. Ring Tone
      - 3. Message Tone
      - 4. Ring Style
      - 5. Vibration
      - 6. Warn&GameTon
      - 7. Keypad Volume
    - 3. Rename
  - 2. Meeting
  - 3. Outdoor
  - 4. Silent
  - 5. Custom
  - 6. Car

- 6. System
  - 1. **Automatic**
  - 2. **Manual**
  - 3. **New Search**
- 7. Calendar
- 8. Calculator
- 9. Games
  - 1. **Breakout**
  - 2. **Snake**
- 0. Keyguard

## 7. ENTER LETTERS AND NUMBERS

You can enter letters, as well as numbers, when storing information into your phone by using your phone's keypad. To enter letters, press the key associated with the letter you wish to enter until it appears on the screen (numbers also appear).

### 7.1 Enter letters

When you want to add new names or when you view names in the phone book, your phone automatically switches to the ABC mode and displays the **ABX** icon.





- Press a key once or several times to enter the letter(s) you want.  
For example, press the 2 key three times to enter the letter C.

Key	Characters	Key	Characters
1	1 , . ' @ * #	7	P Q R S 7
2	A B C 2	8	T U V 8
3	D E F 3	9	W X Y Z 9
4	G H I 4	0	Enters an empty space, 0
5	J K L 5	*	(symbols and special characters)
6	M N O 6	#	Change letter case


#### 7.1.1 Exit name

To edit a name in the phone book:

- Use the  scroll key to move the cursor to the left.
- Use the  scroll key to move the cursor to the right.
- Press **CLEAR** to correct any mistakes.

#### 7.1.2 Change from capital (uppercase) letters



To switch between capital letters(uppercase) and lowercase letters:


- Press the <#> key.
- The **ABX** icon switches to **abx**, indicating that you are using lowercase.
- To switch back to uppercase, press the  key again.

#### 7.1.3 Use punctuation and special characters

 
When in ABC mode, you can enter special characters. To do so, press the  key. The following special characters appear:

. , ? ! : ; - + # \* ( ) ' " \_ @ & \$ % / < > =

- Press  or  to move to the character that you want to use and press **SELECT**.

**Tip:** If you want to access a special character that appears toward the end of this list, press  for quicker access.

## 7.2 Enter number

You use the 123 mode to enter numbers. When you're in 123 mode, the screen shows the  icon.

Note: You cannot enter special characters in 123 mode from the special characters list.

### 7.2.1 List of special characters

- \* Use as bypass key.
- + Use to precede an international telephone number.

## 8. USE THE PHONE BOOK

 
### 8.1 About the phone book

Your phone includes a phone book that can store up to 200 names and associated phone numbers. Stored numbers can be up to 21 digits long. Stored names can be up to 12 characters long.

#### Make entries unique:

You cannot store identical names in your phone.

Example: You can't have one entry for *John Jones* with a home number and another entry for *John Jones* with a work number. You need to store the names as, for example, *John Jones Work* and *John Jones Home*.

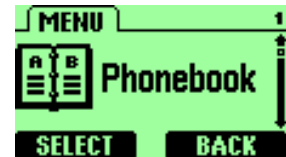

### 8.2 Use phone book menus

The phone book has several menus from which you can choose. These menus appear when you press Names. Use the scroll keys to move to the menu you want to use.

- **Δεtails** Allows you to view details name and numbers.
- **Νεw** Allows you to enter new name and numbers.
- **Σπεεd Διαλ** Allows you to assign up to seven one-touch dial locations.
- **Ερσe** Allows you to erase only one name and number at a time.

### 8.3 Add names and numbers

4 Press **NAMES**.

5 Press **OPTIONS**.

6 Scroll to **Νεw** and press **SELECT**.

7 Using the keypad, enter the name. Use the <#> key to switch between upper and lowercase letters.

8 Press **ENTER**.

9 Enter the phone number and press **ENTER**.

Shortcut:

You can also enter numbers by using a shortcut from the Start screen.

1 Enter a phone number and press **SAVE**.

2 Enter a name at **NAME**.

3 Press **ENTER**.

## 8.4 Change a stored telephone number

You can change a number without changing its associated name.

1 Press **Names**.

2 Scroll to the name you want and press **OPTIONS**.

3 Scroll to **Δετοίλο**, then press **SELECT** to view the number.

4 Press **OPTIONS**.

5 If **Edit** is not highlighted, scroll to it and press **SELECT**.

6 Press **SELECT**.

The associated number appears.



7 Press **CLEAR** to erase one number at a time, or press and hold **CLEAR** to erase all the numbers on the screen.


8 Enter the new number

9 Press **ENTER** to save the new number.

## 8.5 Recall and redial numbers

To recall and dial a number:

1 At the Start screen, press  or  to display the names and associated numbers that are stored in your phone book.

2 Scroll to the appropriate name and press  to dial the associated number.

## 8.6 Erase stored names and numbers

**Note:** You cannot undo Erase functions, so be careful!

1 Recall the stored name.

2 Press **Options**.

3 Scroll to **Δεlete**, then press **SELECT**.

The **XONΦIPM** message appears.

4 Press **OK** to erase this name and associated number.



## 9. USE VOICE MAIL

Voice mail is a network services feature. Colleagues who miss you when they call leave a voice message, which you can retrieve later.

### 9.1 Set up your voice mailbox

As part of your network's voice mail feature, your service provider gives you a voice mailbox phone number. Save this number in your phone to make getting our voice messages quick and convenient.

- 1 Press **MENU 3 > 7 (Messages > Voice mail Num)**.
- 2 Enter your mailbox phone number.

# 10.WORK WITH THE CALL LOG

The call log keeps track of:

- Missed calls
- Numbers from which you've received calls
- Numbers you've dialed
- The amount of time you've spent on calls



## 10.1 Call the call log

Press **MENU 2** to access **Χαλλ Λογ**, then press **SELECT**.

The following submenus are available:

Missed

Received

Dialed

Timers

To select any of these options, press the **SELECT** key while the option is displayed on the screen. The **Μισσεδ**, **Διαλεδ**, and **Ρεχειθεδ** menu include the following options (available when you press the **OPTIONS** key):

- **Χαλλ Νυμβερ** Allows you to view a number when an associated name appears on the screen.
- **Σαωε Νυμβερ** Allows you to save the displayed number into your phone book.
- **Δελετε** Allows you to delete the displayed number from the call log.

### 10.1.1 Check missed calls




Your phone stores up to the last 23 numbers associated with calls you have missed. When you miss a call(s), the message Missed calls appears on your phone's screen, along with the number of calls missed.

You are notified of missed calls only if your phone was turned on in the service area from which the missed call originated.

To check missed calls:




- 1 Press **SELECT**.

The phone shows the numbers of the calls you missed.

- 2 Either scroll through the list using the  or  keys until you reach a number that you want to dial and press , or press **BACK** to return to the Start screen.




If you prefer, you can press **MENU 2 > 1** (Χαλλ λογ > Μισσεδ), then scroll through the list of numbers.

**Note:** If you chose the **Φορωαρδ ιφ νοτ ανσωερεδ** if not answered option in **Χαλλ Φορωαρδινγ**, then your phone treats these forwarded calls as missed calls.

You can also access previously dialed numbers by pressing  and then quickly pressing  or  to scroll through the list.

### 10.1.2 Check previously dialed calls




Your phone stores up to the last 10 numbers associated with calls that you have dialed. To check this list of numbers:

- 1 Press **MENU 2 > 3** (Χαλλ λογ > Διαλεδ).
- 2 Use  or  to scroll through the dialed numbers list.
- 3 When you reach the number you want to dial, press .





### 10.1.3 Check received calls

Your phone stores up to the last 10 numbers associated with calls that you have answered. To check this list of numbers:

- 1 Press **MENU 2 > 2** (Χαλλ λογ > Ρεχειωεδ).
- 2 Use  or  to scroll through the list of received numbers.
- 3 When you reach the number you want to dial, press .

## 10.2 Check call timers

Your phone tracks the amount of time you spend on each call. To obtain information about time spent on phone calls:

- 1 Press **MENU 2 > 4** (Χαλλ λογ > Τιμερσ).
- 2 Use  or  to scroll through the options described in the following list:

- **Λαστ χαλλ** Shows the call duration of the last made call.
- **Ρεχειωεδ** Shows the duration of all incoming calls since you reset the timers.
- **Λιφετιμε** Shows the duration of all calls for the life of your phone. This option cannot be reset.

 


# 11.USEADVANCED CALLING FEATURE

## 11.1 Set in-call options

Your phone allows you to use a number of features during a call. These features are known as in-call options.

**Note:** Many in-call options are network services features. To use these options, you must contact your service provider.

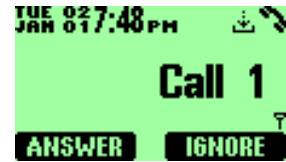

You cannot use all these options at all times. This section tells you when you can use a certain option.

1 To access an option during a call, press **OPTIONS**.

2 Choose from some or all of the following options:

- **Δροπ** Allows you to end the call.
- **Μαίν Μενυ** Allows you to access the **MENU**.

## 11.2 Use call waiting

If you have call waiting, your phone beeps during a call to let you know that someone else is calling you.

Depending on your caller ID setup, the phone might also display the number of the incoming call.

**Note:** Call waiting may not be available in all wireless systems. Contact your service provider for details and availability.

Before you can use call waiting, you must first store its feature code. Then you must activate the call waiting feature.

### 11.2.1 Store the call waiting feature code

- 1 Press **MENU 4 > 4 > 5** (**Σεττινγς > Νετωορκ σερωιχες > Φεατυρε σεττινγ**).

The **Φεατυρε χοδε** box appears.

- 2 Enter the feature code your service provider gave to you and press **OK**.
- 3 Scroll to **Χαλλ ωαιτινγ** and press **SELECT**.
- 4 Make sure that **Αχτιωατε** is highlighted and press **OK**.

### 11.2.2 Activate call waiting

- 1 Press **MENU 4 > 4 > 3** (**Σεττινγς > Νετωορκ σερωιχες > Χαλλ**




ωαιτινγ).

- 2 Use  or  to scroll to **Αχτιώατε** and press **SELECT**.

Your phone calls the network to confirm the feature code you entered. After the network confirms the feature code, call waiting is activated.

### 11.2.3 Manage calls

Call waiting works with both local and long distance calls.

- To answer an incoming call, press .
- To switch from one call to another, press .
- To end both calls, press .

## 11.3 Use call forwarding



Whit call forwarding, you can forward incoming calls to another number. This way, if you are unable to receive calls on your phone, all calls going to that phone can be forwarded to another phone. You never have to miss an important call.

**Note:** The call forwarding feature might not be available in all wireless.

### 11.3.1 Store the call forwarding feature code

- 1 Press **MENU 4 > 4 > 5** (**Σεττινγς > Νετωορκ σερωιχες > Χαλλ φορωαρδινγ**).

The Feature code field appears.

- 2 Enter the feature code your service provider gave you and press **OK**.
- 3 Use  or  to scroll to **Χαλλ φορωαρδινγ** and press **SELECT**.

### 11.3.2 Activate call forwarding

- 1 Press **MENU 4 > 4 > 2** (**Σεττινγς > Νετωορκ σερωιχες > Χαλλ φορωαρδινγ**).

- 2 Scroll to the desired call forwarding option, as described in the following table, and press **SELECT**.

- |                          |   |
|--------------------------|---|
| ■ <b>Αλλ Χαλλς</b>       | Forwards all incoming calls.  |
| ■ <b>Ιφ Βυσψ</b>         | Forwards calls only when you're one your phone and do not have voice mail.  |
| ■ <b>Ιφ Νοτ Ανσωερεδ</b> | Forwards calls if you don't answer. This option is handy if you want to give your phone to someone for a short period of time, but you don't want them to answer the phone. |
| ■ <b>Χανγελ Αλλ Φωδ</b>  | Cancels all forwarding options that are currently active.   |

3 Highlight **Αχτιώστε** and press **SELECT**.


4 At the **Νομβερ** field, enter the number to which you want your calls forwarded.

5 Press **ENTER**.

Your phone calls the network to confirm the feature code that you entered in **MENU 4 > 4 > 5**. After the network confirms the feature code, call forwarding is activated.

## 11.4 Radial automatically

Automatic redial enables your phone to continue trying to call a number that was busy due to wireless network problems.

When you call a number and get a busy signal because of network problems, your phone redials this number up to 3 times. If you want to stop this process prior to the last attempt, press . This stops the automatic redialing.

Before you can use the Automatic Redial feature, you must activate it.

1 Press **MENU 4 > 1 > 4 > (Σεττινγς > Χάλλ Σεττινγς > Αυτό Ρεδιάλ)**.

2 Press **ON**.

## 11.5 Use a calling card

You can use a calling card when you dial long distance calls. First you must store your calling card information in the phone. Your phone can store information about a maximum of four calling cards.

### 11.5.1 Save calling card information



1 Press **MENU 4 > 1 > 2 (Σεττινγς > Χάλλ Σεττινγς > Χάλλινγ καρδ)**.

2 Scroll to the **A**, **B**, **X**, or **Δ** calling card and press Options.

3 Scroll to **Εδιτ** and press **OK**.

4 Enter your **Σεχυριτυν χοδε** and press **OK**.

5 Press **SELECT**.

6 Use  or  to scroll through the list of dialing sequences, as described in the following table.

Dialing sequence	Use for cards that require you to	Associated cards
Access no. + phone no. + card no	Dial 1-800 access number, then phone number, then card number (+ PIN if required).	MCI, Sprit Canada, Unitel



Access no. + card no. + phone no.	Dial 1-800 access number, then card number (+ PIN if required), then phone number	Network MCI, WorldPhone MCI, AT&T
Prefix + phone no. + card no.	Dial the prefix (any numbers that must precede the phone number) and phone number you want to dial, then card number ) + PIN, if required).	GTE, PacBell, AT&T, Stentor

Calling cards shown here are frequently used with the dialing sequences listed in the first column. However, this information might vary and it is subject to change at the phone companies' discretion.

- 7 Press **SELECT**.


## 11.5.2 Choose a calling card to use

If you have more than one calling card, you'll need to choose one before making a call.

- 1 Press **MENU 4 > 1 > 2** (Σεττινγς > Χαλλ Σεττινγς > Χαλλινγ χαρδ).
- 2 Scroll to the desired card and press **OPTIONS**.
- 3 Press  or  to highlight **SELECT** and press **OK**.  
The **Σεχυριτην χοδε** field appears.
- 4 Enter your security code and press **OK**.  
The message **Χαρδ ρεαδιν φορ υσε** appears.

## 11.5.3 Make a calling card call

To make a calling card call:

- 1 Enter the phone number, including any prefix (such as 0 or 1) your calling card might require when you make a calling card call. See your calling card for instructions.
- 2 Press and hold  until your phone displays the message **Card call**, then **Wait for tone and press OK**, and then **Wait for tone and press OK** again.
- 3 When you hear the tone from your calling card service, press **OK**.

**Note:** This procedure might not apply to all the calling card options that are programmed into your phone. Check the back of your calling card for more information, or contact your long distance company.

# 12. Customize your phone

## 12.1 What is a profile?

A profile is a “set of settings” you can use to customize the way your phone works. You can set your own preferences for these items:

ζολυμε  
Ρινγ Τονε  
Μεσσαγε Τονε  
Ρινγ Στυλε  
ξιβρατιον  
Ωαρν&ΓαμεΤον  
Κεψπαδ ζολυμε



Your phone comes with seven profiles:

Γενεραλ  
Μεετινγ  
Ουτδοορ  
Σιλεντ  
Χυστομ  
Χαρ

You can customize any of the profiles. If at any time you want to return to the original settings, you can do so.

## 12.2 Customize a profile

- 1 Press **MENU 5** (Προφίλες).
- 2 Scroll to the desired profile in the list.
- 3 Press **OPTIONS** to view the options for the selected profile.
- 4 Select one of the following options, then press **OK**.



Σελεχτ	Activates the currently highlighted profile.
Χυστομιζε	Enables you to customize a profile by changing the current settings. Press <b>SELECT</b> to choose from several lists.
Ρενομε	Enables you to rename the profile.



### 12.2.1 Set the ringer volume

You can set the default ringing volume for incoming voice calls and message





 
alert tones.



- 1 Press **MENU 5** (Προφίλες).
- 2 Use  or  to scroll to the profile for which you want to set the **ξολυμε**, and press **OPTIONS**.
- 3 Highlight **Χυστομιζε** and press **OK**.
- 4 Scroll to **ξολυμε** and press **SELECT**.

### 12.2.2 Set the ring tone

You can set your phone's ring tone to a specific sound- or tune-for incoming voice calls.

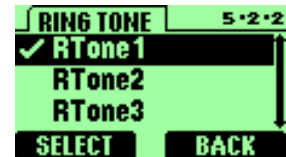
**Note:** If you have already chosen a ringing option of either Silent or Beep once, the ring tones are already turned off.







 - 1 Press **MENU 5** (Προφίλες).
- 2 Use  or  to scroll to the profile for which you want to set the ringing tones.
- 3 Press **OPTIONS**.
- 4 Highlight **Χυστομιζε** and press **OK**.
- 5 Scroll to **Ring Tone** and press **SELECT**.
- 6 Scroll through the options, and, when you hear the tone you want to use, press **SELECT**.
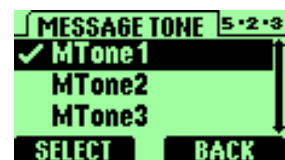
### 12.2.3 Set the message alert tone

You can set your phone to use a certain tone to indicate an incoming text message.



- 1 Press **MENU 5** (Προφίλες).
- 2 Use  or  to scroll to the profile for which you want to set the message alert tone, and press **OPTIONS**.
- 3 Highlight **Χυστομιζε** and press **SELECT**.
- 4 Scroll to **Message Tone**, then press **SELECT**.
- 5 Use  or  to scroll through your choices.

The phone plays samples of each choice as you scroll to it.



- 6 When you find the tone you want, press **SELECT**.

### 12.2.4 Set ring style

You can choose the tone that your phone uses to notify you of an incoming call. This setting does not affect any incoming text message alert tones.

- 1 Press **MENU 5** (Προφίλες).



Your phone lists each profile.

- 2 Use  or  to scroll to the desired profile in the list for which you want to set the **Ρινγ Στῆλε**, and press **OPTIONS**.
- 3 Highlight **Χυστομιζε** and press **OK**.
- 4 Scroll to **Ρινγ Στῆλε** and press **SELECT**.
- 5 Scroll to one of the **Ρινγ Στῆλε**, as described below, and press **SELECT**.

<b>Ρινγ</b>	The phone rings until it is answered.
<b>Ρινγ Ασθενδινγ</b>	Ringing volume increases (gets louder) if the phone is not answered.
<b>Ονε Ρινγ</b>	The phone rings once to indicate an incoming call.
<b>Ονε Βεεπ</b>	The phone beeps once to indicate an incoming call.
<b>Σιλεντ</b>	The phone makes no sound.

### 12.2.5 Set a vibration

Instead of choosing to have our phone ring, you can have it vibrate to indicate an incoming call.



- 1 Press **MENU 5** (Προφίλες).
- 2 Use  or  to scroll to the profile for which you want to set the vibration, and press **OPTIONS**.
- 3 Highlight **Χυστομιζε** and press **SELECT**.
- 4 Scroll to **ξιβρατιον** and press **SELECT** again.
- 5 Press the **SELECT** key to switch the **ON** or **OFF**.

The phone does not vibrate when it is connected to or placed in any charging device.

### 12.2.6 Set warning and game tones

You can set warning tones and the tones used for the games in your phone.

Warning tones include the sounds your phone makes during error conditions, during confirmations, when a battery is low, and when you need to recharge the battery.





- 1 Press **MENU 5** (Προφίλες).
- 2 Use  or  to scroll to the profile for which you want to set the warning tone, and press **OPTIONS**.

- 3 Highlight **Χυστομιζε** and press **SELECT**.
- 4 Scroll to **Ωαρν&ΓάμεΤον**, then press **SELECT**.
- 5 Press the **SELECT** key to switch the **ON** or **OFF**.

If you do not want to use warning or game tones, you can turn them off by switching to **OFF**.

### 12.2.7 Set keypad volume



Keypad volume set the volume of the tone you hear when you press your phone's keys.

- 1 Press **MENU 5 (Προφίλες)**.
- 2 Use  or  to scroll to the profile for which you want to set the keypad volume, and press **OPTIONS**.
- 3 Highlight **Χυστομιζε** and press **SELECT**.
- 4 Scroll to **Κεψπαδ ζολυμε** and press **SELECT**.
- 5 Use  or  to scroll to one of the levels and press **SELECT**.



If you chose the **Σιλεντ** profile in step •, the keypad volume are turned off.

### 12.2.8 Set your phone to answer automatically

You can set your phone to answer incoming voice calls after one ring. This feature can be used only when your phone is connected to a headset or to an approved handsfree car kit that is equipped with the ignition sense option, with the ignition on.

- 1 Press **MENU 4 > 3 > 1 (Σεττινγς > Ανσώερ Σεττινγς > Αυτο Ανσώερ)**.
- 2 Scroll to **Αυτο Ανσώερ** and press **SELECT**.
- 3 Use  or  to scroll to the phone setting for which you want to set your phone to answer automatically, and press **SELECT**.

## 12.3 Rename profiles

- 1 Press **MENU 5 (Προφίλες)**.
- 2 Use  or  to scroll to the desired profile and press **OPTIONS**.
- 3 Scroll to **Ρενομέ** and press **SELECT**.
- 4 Enter the new name and press **OK** again.

## 12.4 Restore defaults settings

You can change the default settings for your phone. Later, you can return them to the original settings when needed.

Note: The memory, timers, language selection, security code, and lock code are not reset. However, any profiles you have modified are reset when you restore our settings.

- 1 Press **MENU 4 > 2 > 6** (Σεττινγς > Πηονε Σεττινγς > Ρεστορε Δεφαυλτς).
- 2 Press **OK**.

## 12.5 Set the display language

You can set your phone to display a certain language.

- 1 Press **MENU 4 > 2 > 3** (Σεττινγς > Πηονε Σεττινγς > Λαγγουαγε).



- 2 Use  or  to scroll to the language you want to use and press **OK**.

You can choose from **Εγγλιση**, **Μεξιχο Σπανιση**, **Χαναδα Φρενχη** and **Βραζιλ Πορτυγεσε**.



## 12.6 Set and display the clock

Your phone has an internal clock that you can set to appear on the phone's screen. The clock is connected to an alarm clock.



### 12.6.1 Set the clock

To set the clock to the appropriate time:

- 1 Press **MENU 4 > 2 > 1** (Σεττινγς > Πηονε Σεττινγς > Δατε ανδ Τime).
- 2 Use  or  to scroll to **Σετ Τime** and press **SELECT**.

The **Time** field appears.

- 3 Enter the time using a **xx:xx** format and press **OK**.

For example, to set your clock to 9:30, enter **09:30**.

- 4 Use  or  to scroll to **AM** or **PM** and press **SELECT**.

## 12.7 Add a welcome note



You can set your phone to display a welcome note each



time you switch on your phone. This note could say, for example: *Hello*. It could include your name, a reminder, or more. The maximum length of this note 20 characters.

1 Press **MENU** **4** > **2** > **4** (Σεττινγς > Πηone Σεττινγς > Ωελχομε).

2 Enter the text of the welcome note.

As you enter characters, they appear to the left of the cursor. Press **CLEAR** to delete characters to the left of the cursor. Press  or  to move the cursor right or left.

3 Press **ENTER**.

# 13.Security

Your phone is equipped with a versatile security system that prevents the unauthorized use of the phone.

You cannot activate or use certain phone features without having first successfully entered your phone's security code.

 
When entering our security code, a \* appears on the screen each time you press a number key. This prevents others from seeing your code.

If you incorrectly enter a security code five times in a row, your phone won't accept any entries for the next 5 minutes. However, if you realize that you've entered the code incorrectly before pressing **OK**, you can use **CLEAR** to erase the code, digit by digit, beginning with the last digit.

When this guide describes an action that requires the entry of your security code, each step necessary to this action is provided.

## 13.1 Lock the keypad

When you lock the keypad, you prevent accidental key presses•for example, when your phone is in a pocket or purse. This feature is called keyguard.

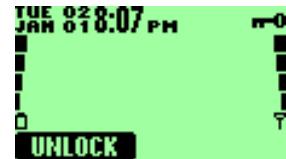

### 13.1.1 Active keyguard

There are three different ways to activate the keyguard:

At the Start screen:

- Press **MENU 0** (Κεψγοαρδ).

### 13.1.2 Deactivate keyguard

- 1 Press **UNLOCK**.

- 2 Press **(\*)**.



## 13.2 Restrict calls

You can restrict incoming and outgoing calls. To restrict outgoing calls, you create a list of restrictions and apply the appropriate restriction.



Before you define restrictions for outgoing calls, only one restriction option is available:

### 13.2.1 Restrict incoming calls

To restrict incoming calls:

- 1 Press **MENU 4 > 5 > 1** (Σεττινγς > Σεχυριτη Σεττινγς > Χαλλ Πεστριχτιον).
- 2 Use  or  to scroll to **Ινχομινγ** and press **SELECT**.
- 3 Highlight **Αχτιωατε** and press **SELECT**.
- 4 Enter your security code and press **ENTER**.

### 13.2.2 Restrict outgoing calls

- 1 Press **MENU 4 > 5 > 1** (Σεττινγς > Σεχυριτη Σεττινγς > Χαλλ Πεστριχτιον).
- 2 Use  or  to scroll to **Ουτγοινγ** and press **SELECT**.
- 3 Highlight **Αχτιωατε** and press **SELECT**.
- 4 Enter your security code and press **ENTER**.

# 14.Set network services features

The following network services can be obtained from your service provider:

- Voice privacy
- Call waiting
- Call forwarding

When you subscribe to any of these services, your service provider gives you a feature code that activates each service. Deactivation codes are used to deactivate each service.

After you store the appropriate code in your phone, the code is sent to the network to verify that you're using the correct feature code. The voice privacy feature does not require you to store a feature code before using it.

After you store a feature code, the respective service appears as a menu option on your phone's screen. You can use these menus to activate and deactivate the network services.



## 14.1 Set up how your phone selects a system

Your phone is capable of working in residential, private, and public systems (such as your home system). You can choose how your phone selects a network to use.

- 1 Press **MENU 6**.

You see the following three options:

- **Αυτοματιχ**: Your phone automatically searches for available networks and chooses the appropriate one. Every time you turn on your phone, it resets to **Αυτοματιχ**.
- **Μανυαλ**: The phone searches for networks and then displays a listing of all of the possible networks on your phone's screen. Next to each network, one of the following appears: **Απαιλαβλε** or **Νοτ απαιλαβλε**. If a network is designated as **Νοτ απαιλαβλε**, you cannot use it.
- **Νεω Σεαρχη**: Your phone begins a new search for both private and residential systems. When it finds the best system available, your phone displays it on its screen. You can then select this system or start another search by pressing **Νεξτ**.

- 2 Use  or  to scroll through the choices, and press **SELECT** when you see the one you want.

## 14.2 Roaming

The term roaming is used to indicate when your phone is not in its home area. Calls made or received while you are roaming are usually more expensive than calls made in your home area.



While roaming in some systems outside your home area, your phone may not be recognized by the host system, which is the system in which you're traveling. You may not be able to place a call.

Contact your service provider for more specific information on how roaming works with your phone and for information about coverage limitations.

# 15.SEND AND RECEIVE TEXT MESSAGES

With the text message network service, you can send and receive short text message. You can also send and receive messages that contain a person's name and/or number (a "business card").



To get your messages, other phones must have text message capability. Or, you can ask the service provider to convert the message to other formats, such as e-mail.

The maximum length of a received text message is 160 characters. Your phone has space for up to 80 text messages, depending on the length of each message.

Note: The maximum length of a text message differs, depending on the capabilities of the network from which it originated. Also, text messages may appear different at different times because messages can originate in networks other than your own.

Contact your service provider for more information about this feature.

## 15.1 About writing messages

### 15.1.1 Write with standard text input

Standard text input is the default mode for text entry. The ABC icon ABC appears as visual confirmation.

- 1 Find the key that is below the letter you want to enter.
- 2 Press it as many times as needed for letter to appear on the screen.

For example, to enter the name *John*:


Press		J
Press		O
Press		H
Press		N

## 15.2 Write and send a new text message

- 1 Press **MENU** **3** > **3** (Μεσσωγες > Νεω Τεξτ Μωγ).
- 2 Enter a message of up to 160 characters.
- 3 When you've finished writing, press **ENTER**.

- 4 Enter or recall the recipient's phone number, then **ENTER**.

When the message is successfully sent, **Μεσάγγελιο στέλνεται** appears.

If you need to exit while writing the message, press  at any time.

### 15.2.1 Save a message in the saved folder

When writing a text message, it's a good idea to save it in the saved folder. Then if there is a message delivery problem, you can easily resend the message.

- 1 While writing the message, press **ENTER**.
- 2 Scroll to **SAVE**, then press **SELECT**.

## 15.3 Receive a text message

When you receive a text message, the phone sounds a message alert tone and the text message icon appears, along with one of the following messages:


- **Νέο Μεσάγγιο**: Indicates that you have an unread message or page. If you have more than one message or page, the appropriate number is listed before this message

### 15.3.1 Read a text message

- 1 Press **READ**.
- 2 Scroll to the message, then press **OPTIONS**.
- 3 Scroll to the Details, and press **SELECT**.
- 4 Press **OPTIONS** for a list of choices you have while reading the message.
- 5 Press **SELECT** when the option you want is highlighted.

## 15.4 When your phone's memory is full

When your phone's message memory is full, one or more messages of the lowest priority are automatically deleted. These messages are usually deleted from your phone's outbox.

If after deleting messages the memory is still full, your phone shows the message icon  appear.

## 15.5 Delete a message

- 1 While reading a message, press **OPTIONS**.
- 2 Scroll to **Delete**, then press **SELECT**.

Your phone asks you to confirm that you want to delete the message.

3 Press **OK**.

# 16. Send and receive e-mail messages

You can use your phone to send and receive e-mail messages. This means you no longer need to be at your computer to send or receive messages.

## 16.1 Send an e-mail message

- 1 At the Start screen, press **MENU** and then, at **Μεσολάγος**, press **SELECT**. Scroll to **Ωρίτε Ε-μπαίλ**, and press **SELECT**.
- 2 Enter the e-mail address.  
If you enter the e-mail address, press **ENTER** when you've finished.  
The **Συβφεχτ:** opens.
- 3 Enter a subject and press **ENTER**.
- 4 When the message contents screen appears, enter your message.
- 5 When you've finished the message, press **ENTER**, select **Send and Discard** or **Send and Save**, and press **ENTER**.

A status message tells you the mail is being sent.

Other options for a completed message:

- **Σάρε** Save the message in the saved folder until you send it.

# 17.USE YOUR PERSONAL ASSISTANT

Your phone can be your personal assistant. It can wake you up in the morning and remind you of meetings, birthdays, and tasks. You can check the current time, calculate a tip at dinner, and convert currencies.

With a calendar, clock, alarm clock, and phone book, you have everything you need to keep track of your life.

## 17.1 Use the calendar

The calendar application allows you to enter appointments and reminders into the phone.

Your phone must be switched on for the calendar to work. Do not switch on the phone, however, where wireless phone use is prohibited or where the use of the phone could cause interference or danger.



### 17.1.1 View the calendar

- 1 Press **MENU** > **7** (Χαλενδάρ).

Today's day and date appear.

### 17.1.2 Add a calendar note

This option enables you to add a note. You can also set an alarm for any calendar note.

- 1 Go to the day you want, then press **SELECT**.

The list of note appears.

- 2 Press **ADD**.

The **NOTE** field appears.

- 3 Enter the information and press **ENTER**.

The current date appears.

- If you do not want to change the date, just press **OK**.

The **Time** field appears.

- If you want to change the date for this note, do so and press **OK**.

- 4 Enter the time when you need to make this call using the hh:mm format and press **OK**. Select **AM** or **PM** and press **SELECT**.

- 5 Select either **Νο Αλάρμ** or **Σετ Αλάρμ** and press **SELECT**.

- If you don't want to set an alarm, select **Νο Αλάρμ**.

- If you select **Σετ Αλάρμ**, the alarm date field appears.
- 6 Enter the date on which you want the alarm to sound and press **OK**.  
The alarm time field appears.
  - 7 Enter the time at which you want the alarm to sound using the hh:mm format and press **OK**.
  - 8 Select either **AM** or **PM** and press **SELECT**.

### 17.1.3 View the day's notes

You can review notes you've written for certain days.

- 1 To review notes for a certain day, open the calendar and scroll to the day you want.
- 2 Press **SELECT**, scroll to note list and press **SELECT**.

The following options are available:

- Details
- Add Entry
- Edit Entry
- Delete Entry
- Delete All For Day
- Delete All Entries

## 17.2 Alarm clock

You can set the alarm clock to ring at any time. The alarm clock's volume is determined by the current ringing volume and tone settings.

If you have selected the **Σιλέντ** or **One Beep** ringing tone, then your alarm clock quietly beeps once.



### 17.2.1 Set the alarm clock

- 1 Press **MENU 4 > 2 > 2** (**Σεττινγς > Πήγνε σεττινγς > Σετ Αλάρμ Χλόγκ**).

The Set alarm clock message appears.

- 2 Enter the time for which you want to set the alarm using the hh:mm format and press **OK**.

Any existing numbers are replaced with the newly entered numbers.

- 3 Select either **AM** or **PM** and press **SELECT**.

## 17.2.2 Turn off the alarm clock when it tings

- When the alarm clock rings:
- Press **STOP** to turn it off.

## 17.2.3 Turn off the alarm clock altogether

 
If you decide that you don't want the alarm to ever go off, you can turn it completely off.

- 1 Press **MENU** **4** > **2** > **2** (**Σεττινγς** > **Πηονε σεττινγς** > **Σετ Αλαρμ Χλογκ**).
- 2 Press **OFF**.

If you have selected the **Σιλεντ** or **Μεετινγ** profile, your alarm beeps only once. The best profile to use when using the alarm clock is **Γενεράλ** or **Ουτδοορ**, unless these profiles have been modified from their original settings.

# 17.3 Calculator

Your phone's calculator adds, subtracts, multiplies, divides, and converts currencies.

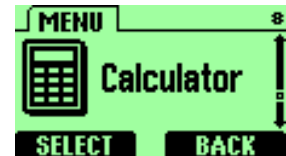

## 17.3.1 Use the calculator

- Press **MENU** **8** (**Χαλχυλατορ**).
- Enter the first number in the calculation.

If you need to enter a number with a decimal point, press **#** to indicate it.



- Then, based on the type of calculation that you need to perform, use one of the following actions:

If you want to...	Then...
<b>Αδδ</b>	Press * (for + symbol)
<b>Συβτραχτ</b>	Press ** twice (for – symbol)
<b>Μυλτιπλψ</b>	Press *** (for * symbol)
<b>Διψιδε</b>	Press **** (for / symbol)

Or, you can press Options, then use  or  to scroll to: **Εθυαλσ**, **Αδδ**,



Συβτραχτ, Μυλτιπλψ, Διϑιδε, or Εξιτ. Then press **SELECT**.

- Enter the second number in the calculation and press **Options**.
- Use  or  to scroll to **Εθυαλσ** and press **SELECT**.

**Note:** Repeat steps • and • as many times as necessary.

Press **Clear** to erase any mistakes.



# 18.GAMES

Your phone includes some exciting games that you can play whenever the phone is turned on:

Βρεακούτ

Σνόκε



- 1 Press **MENU 9** (Γάμεσ) to display the listing of these games.
- 2 Use  or  to scroll to the game you want to play and press **SELECT**.

# 19. TECHNICAL INFORMATION

<b>Weight</b>	157g with 900 mAh NiMH Battery
<b>Size (H x W x D)</b>	130.6 x 47.2 x 29.6 mm
<b>Wireless Networks</b>	TDMA800 TDMA1900 AMPS
<b>Frequency Range</b>	Lowband 824.04-848.97 MHz (TX) 869.04-893.97 MHz (RX) Highband 1850.04 – 1909.92 MHz (TX) 1930.08 – 1989.96 MHz (RX)
<b>Transmitter Output Power</b>	Up to 600mW
<b>Battery Voltage</b>	3.6V nominal
<b>Number of Channels</b>	832 lowband 1997 highband
<b>Number of NAMs</b>	2
<b>Memory Locations</b>	200
<b>Memory Capacity</b>	Alpha: 15 digits per location Numeric: 32 digits per location