


# Instructions for use

## Operation method

Power on/off 

Long press for 3 seconds, red and blue alternate flashing to enter Wireless mode

Answer phone calls 

When calling (blue light flashing), click the power button once to answer

End call 

During a call, click the power button 1 to end the call

Play music 

Click the power button 1 in standby mode

Pause music 

Click on the power button 1 during music playback to pause playback

Music Size 

Long press+increase volume, long press - decrease volume

Music Up and Down 

Press once+Previous track Press once - Next track

Press the **M** key

Enter FM mode, TF card mode, Wireless mode

## Product parameters

Version: Wireless 5.1+EDR

transmission distance:  $\geq 10\text{M}$

Horn: 40mm

Impedance:  $32\ \Omega$

Battery capacity: 200mAh

Material: ABS

Call time: 6-7 hours

Charging time:  $\geq 2$  hours

Signal to noise ratio:  $\geq 85\text{dB}$

Sensitivity:  $113 \pm 3\text{dB}$

Frequency response range: 20Hz -20KHz

#### FCC Caution:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.