



如何给耳机充电 1.把耳机放入充电仓内,耳机就会自动关机然后开始充电,充电仓 2. 耳机充满电后, 耳机指示红灯就会灭掉。

- 机放回充电仓耳机就会开始充电并自动关机。当耳机从充电仓里取
- ---配对/连接-播放音乐。

电脑/手提电脑配对的方法

- 打开电脑设置-设备-蓝牙和其他设备-开启蓝牙--添加蓝牙或其他设备 -搜索蓝牙设备-YYK-520-配对/连接-播放音乐。
- 注意:如果电脑没有蓝牙,请插入蓝牙适配器,下载蓝牙驱动后再 正常使用。

与echo do配对

打开alexa app-设置-添加新设备-蓝牙-配对新设备-搜索设备 -YYK-520 -配对/连接-播放音乐。

如何重置?

耳机在羊机状态下、ΩN/ΩFF键长按8秒、将耳机放 λ 充由仓、耳机会自动 关机并开始充电。取出耳机后,耳机会自动开机,重置就完成。

显示屏亮起,显示充电仓当前电量,说明充电仓正在给耳机正在充电。

给充电仓充电

支持蓝牙

通信距离

喇叭阻抗

待机时间

通话时间

音乐播放时间

耳机电池容量

充电仓电池容量

耳机充电时间

产品重量

充电仓充电时间

频带

- 1,请使用手机适配器给充电仓充电,可以使用电脑Type-c线或者其他 Type-c接口的充电器进行充电。
- 2 东由分数字显示屏指示,说明正在给充由分充由。充满由为100%。

A2DP AVRCP HEP HSP EDR

水下

2.402GHz-2.480GH

13Ω±10%

8-10小时

8-10小时

约1.5小时

71g

生活防水(出汗、下雨、洗脸、淋浴等,水里游泳等除外)

*请注意手机的蓝牙信号不能在水中传输

距离≤10m信号可以正常到达 距离>10m信号中断

关于手机传输距离如下图所示

注意 🔨

- 1.请不要拆卸/重新组装产品,以免发生故障或火灾。 2.请避免接触腐蚀性液体,以免损坏产品。
- 3.不要放在-10摄氏度以下或者60摄氏度上的极端温度下。 4.远离小孩或宠物。
- 5.不让耳机接触尖锐物品,否则容易刮花。
- 6.请不要在雷雨天气使用避免损坏或发生电击。 7.1个月以上不使用的话,为了安全运行,请定期充电,保养。
- 8.因为蓝牙耳机信号不能在水中传输,游泳潜水将会导致信号断开

为什么我搜索不到蓝牙?为什么不能连接蓝牙?

- 1 萨耳的跖变导10m 请确保没有障碍物 毛机季更靠近甘机 2 加有甘他手机或者设备连接过该耳机, 请先解除配对
- 3.请重新启动蓝牙设备,然后尝试重设耳机

为什么耳机没有声音?或者音乐会断开?

- · 请检查手机网络是否正常, 网速是不是比较慢, 音乐是不是正在 ·请检查手机是否同时连接了两个音频设备,双击多功能按钮,
- 可以退出连续
- · 蓝牙的距离是10m, 请确保没有障碍物, 手机需要靠近耳机 · 周围环境的干扰或老磁场大强将全影响蓝牙信号传输 ·打开手机萨牙界面, 占击接触配对, 删除配对记录, 搜索萨牙, 再次配对

·你可以重启手机或者重置耳机

Attention 🛆

为什么耳机会自动关机?

请确保耳机有足够电量。另外耳机将自动断开蓝牙连接10min。 将耳机重新放入充电仓,拿起耳机将自动开机。

为什么不能给充电仓充电?

- 1 请确保充由线或老手机充由器是良好状态日正确连接。 2 右可能接触不良 田毛指按百机 并终日机的农中轴占 空个连接到玄由令
- 3.耳机的充电触点可能脏,多尘或出汗。放回充电盒充电时,请 田洒結武者布惣拭。 4 耳机请擦干汗水放同杂电盒杂电, 耳机指示灯亭起
- 5.如果听到"Battery Low"的提示音,请为耳机充电。当充电盒LED 灯显示编号达到"10"时,请为充电盒充电。请注意不要使耳机和充 电盒中的电量耗尽。可能会缩短内置锂电池的使用寿命。


← 安全预防


京质量的耳机,为了延长使田寿命,请参考以下说明。 1.请让本品远离高温、高湿、腐蚀环境。


- 2.请防止本品被撞击,跌落,弯曲,浸泡等。
- 3.请不要拆耳机或者充电座。
- 4.请不要让本品一直过度充电,这样会降低的的使用寿命。 5.如果它引起任何不适感或者疼痛,请停止使用本品。
- 6.使用由受监管的制造商认证的DC 5V-1A适配器。 反复充电和放电耳机会导致电池性能随时间降低,这对所有可充 电电子产品来说都是正常的。

产品包装内有

- 1 莜葉甘和1个 2.充电座1个 3Type-c充电线1条
- 4.另外的耳帽2个 5.说明书1本

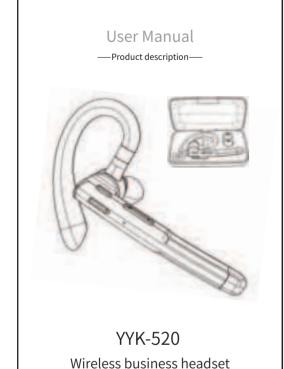

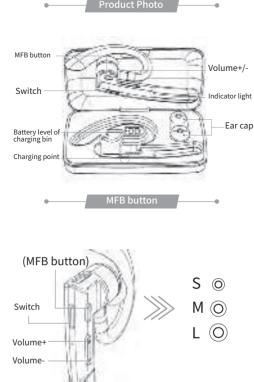


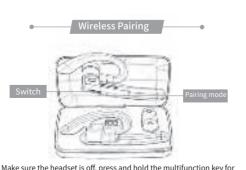


about 3 seconds until the blue light comes on once, Then the red and blue lights flash alternately (at this time it enters the pairing state)



(or other Wireless devices), and search or scan,At this time, the nobile phone will search all the Wireless devices nearby, and click the Headset Name: YYK-520, and enter the password 0000 (most mobile phones do not need a password at present) After successful pairing and connection, the headset indicator light goe off, indicating that the pairing connection is successful! At this time, you can make mobile phone calls and listen to songs

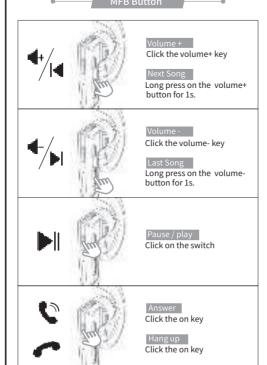

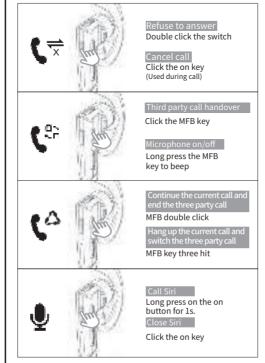

ON/OFF switch

1.In the first time use, take the earbuds from the charging bin and pee off the protective film. Once put into the charging him, the earluds will turn off and initiate recharging automatically. When taken out from the charging bin, the earbuds will turn on automatically. 2.After use, put the earbuds into the charging bin, and it will turn off automatically

How to pair

- 1. Take the earbuds out of the charging bin and it will start work automatically.
- 2. The red and blue lights will flash alternatively (entering pairing mode) 3. Access the Settings of mobile phone/tablet -- Wireless -- Search -- YYK-520 -- Pair/Connect -- Play music.

Pair with PC/Laptop

- Turn on the computer Settings-Devices-Wireless and Other Devices - Initiate Wireless - Add Wireless or Other Devices - Search Wireless - YYK-520 - Pair/Connect - Play music.
- Notes: If the computer has not Wireless function, please insert a Wireless adaptor, and download a Wireless driver for normal functioning.

Activate Alexa App - Settings - Add New Devices - Wireless - Pairing New Devices - Search Devices - YYK-520 - Pair/Connect - Play music.

How to reset?

into the charging compartment, and the headset will automatically turn off and start charging. After taking out the headset, the headset will turn on automatically, and the reset is completed.

When the headset is off, press the on / off key for 8 seconds. Put the headset

- 1. put the headset in the charging bin, the headset will be automatically turned of The display lights up to show the current power of the charging chamber, indicating
- that the charging chamber is charging the headset. 2. When the headset is fully charged, the red light of the headset indicator will be of

How to recharge the charging bin

1.Please use a mobile phone adapter to recharge the charging bin. You may charge via a Type-C cable connected to a computer, or other charger with a Type-C interfa 2.The digital display of the charging bin will indicate the recharging process, and

/ersion	V5.1
Vireless support	A2DP.AVRCP.HFP.HSP.EDR
Communication range	≥10m
requency band	2.402GHz-2.480GHz
lectrical impedance	13Ω±10%
standby time	180h
Call time	8-10h
Music playing time	8-10h
arbuds battery capacity	60mAh
lost battery capacity	500mAh
Charging bin recharging time	About 1.5h
Charging time of headset	About 1.5h

Waterproof in daily activities (including sweating, raining, face-washing and showering, except swimming in water, etc.) Note that the Wireless signal of mobile pho





transmitted normally

Range>10m, signal

1. Please avoid disassemble/reassemble the product in case of failure or fire

Please avoid exposure to extreme temperatures below 10°C, or above 60°C.
 Please keep beyond the reach of kids or pets.

6.Please avoid use in thundering and raining days to prevent damage or

5. Please mind contact with sharp objects to avoid scratch.

Why cannot I detect Wireless?

Why Wireless pairing failure?

phone close to the earbuds.

and with proper connection.

the indicator lights will turn on.

the charging points to the charging bin.

please disconnect first.

2. Please keep away from corrosive liquids to prevent the product from damage.

7. In the case of non-use for above a month, please charge regularly for mainten

1.The Wireless rang is 10m; please ensure no obstacles and place the mobile

1. Please ensure the charging cable or mobile phone charger is in a good state

3. The earbud charging points might be stained with dust or sweat. When place the

4.Please wipe the sweat on the earbuds before putting into the charging bin, and

2.To ensure proper connection, press the earbuds to fully connect

into the charging bin for recharging, please clean with alcohol or cloth.

2. If the earbuds are connected to other mobile phone or devices.

Please reboot the Wireless device and reset the earbuds.

Why do the earbuds produce no sound?

Or, why does the music playing stop?

8.As the Wireless signal cannot transmit in water, it is not suitable for swimming

Please ensure sufficient battery level. In addition, the earbuds will automatically The transmission distance of the mobile phone is shown in the following chart disconnect Wireless for 10mins. Place the earbuds back to the charging bin and they will restart after recollecting. Range≤10m, signal Why cannot I recharge the charging bin?

1.Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.

Why do the earbuds turn off automatically?

- 2.To ensure proper connection, press the earbuds to fully connect the
- charging points to the charging bin.

 3.The earbud charging points might be stained with dust or sweat. When place them into the charging bin for recharging, please clean with alcohol or cloth.

 4. Please wipe the sweat on the earbuds before putting into the charging bin, and the indicator lights will turn on.
- 5.Once the prompt tone "Battery Low" appears, please recharge the earbuds. When the number displayed by the LED lights on the charging bin reaches "10", please recharge the charging bin. Please pay attention to not using up the battery of the arbuds and charging bin, as it may shorten the service life of the built-in lithiur

Safety Precautio

To guarantee the service life of the quality earbuds, please refer to the instructions as follows:

1.Please keep away from high temperature, high humidity and 2. Please avoid bumping, falling, bending, soaking, and etc...

3. Please do not disassemble the earbuds or charging bin.
4. Please do not overcharge for a long time, which will shorten the service life. 5.In the case of feeling any discomfort or pain, please stop using the product. 6.Please use certified DC 5V-1A adaptor from manufacturer under the supervisio

of regulatory authorities. Repeated charging and discharging will impair the batter performance over time, which is normal for all rechargeable electronic products

1. Earbuds * 1 4. Earbuds cap * 2 2. Charger * 1 5. User Manual * 1

3. Type-C charging cable * 1



FCC Warning

15.19 Labeling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)
This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
15.21 Information to user.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.
Note: This equipment has been tested and found to comply with

the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference

will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the separation

between the equipment and

-Connect the equipment into

an outlet on a circuit different

receiver.

from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.
FCC RF Radiation Exposure Statement:

1.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

2.This equipment complies with RF radiation exposure

limits set forth for an

uncontrolled environment.

This equipment should be

minimum distance 5mm

installed and operated with

between the radiator and your body.