

尺寸：70*95mm

材质：80g书写纸

双面印刷

红线为分割线（不打印显示）



MINISO

PRODUCT MANUAL

Wireless Earbud X25


PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE
PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly	5
02 Product Introduction	9
03 Touch Operation	12
04 Charging Case operation	21
05 Item list	33
06 Warranty Statement	36

Welcome to MINISO


Clip on wireless earphones

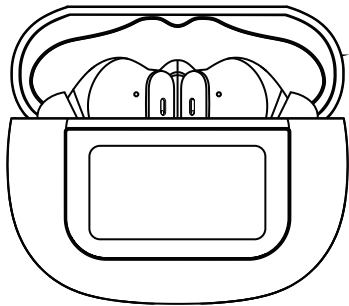



Take out and pair it

When using for the first time, take out the left and right earphones at the same time.
When the ice blue light of the earphones flash, the earphones will enter the automatic pairing mode.

How to wear headphones correctly

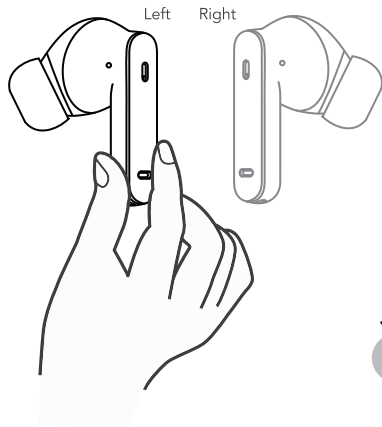

1

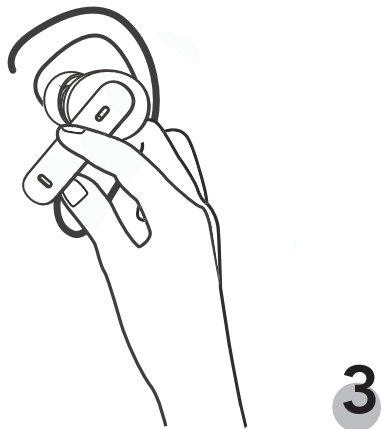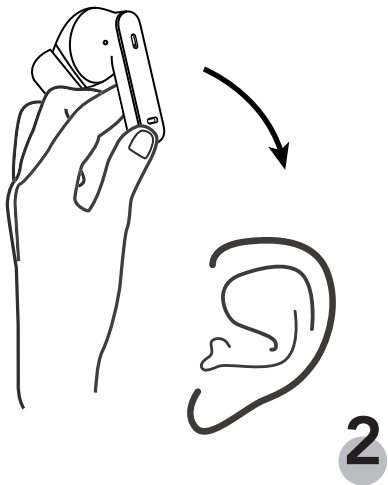




4


Product Description

Multi function key
touch position

Bluetooth LED
Display light

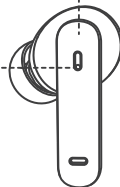

Charging Contacts

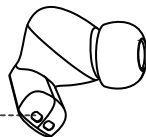

Specification of Product

Model of Product: X25

Version: V5.4

Effective Distance: Approx. 10m

Speaker Diameter: $\phi 10\text{mm}$

Impedance: 32Ω

Frequency Respinse: 20Hz-20KHz

Microphone Sensitivity: $-42\text{dB}\pm 3\text{dB}$

Earphone Input: $5\text{V}\cdots 30\text{mA}$

Charging Case Input: $5\text{V}\cdots 350\text{mA}$

Charging Case Output: $5\text{V}\cdots 60\text{mA}$


Earphone Battery Capacity: 30mAh

Charging Case Battery Capacity: 350mAh


Duration: Approx. 3.5 H (Earphone)

Earphone Charging Time: Approx. 1.5 H

Charging Time of the Charging Case: Approx. 1.5 H

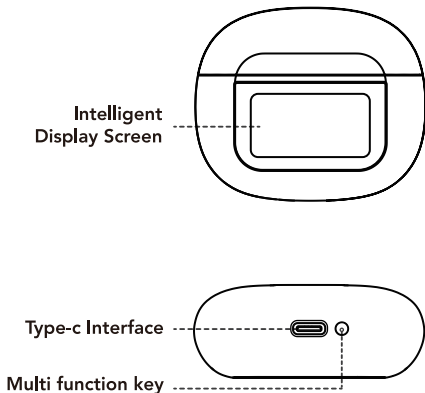

Connect with Bluetooth device

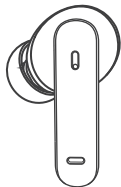


Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-X25". Click the pairing name to pair.




Indicator Light Description



- When the headset is turned on: the ice blue light flash
- When the headset is turned off: the ice blue quickly flashes and then goes out
- Pairing status: ice blue light flash
- Connection successful: no light

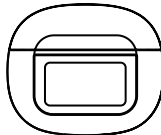

- Headphone Charging: The charging case display screen shows the battery level, and when fully charged, the charging case screen shows 100%
- Charging of the Charging case: The charging case display screen shows the battery level, and when fully charged, the charging case screen shows 100%
*Note: After the charging status is displayed on the display screen of the Charging Case, it will automatically turn off after about 30 seconds of inactivity. Sliding can enter the display screen.

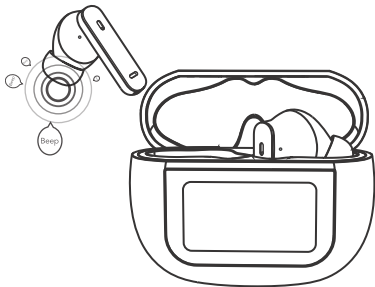

Power On

Power On Automatic power on: The earphones are in the charging case. Open the charging case cover, the Earphone will be powered on, with the prompt sound of "Du".

Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".


Power Off

Auto power off: Put the Earphone in the charging case, close the charging case cover, the Earphone will be powered off, with the prompt sound of "Du".

Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device, it will automatically power off after 3 minutes, with the prompt sound of "Du".

Once Press

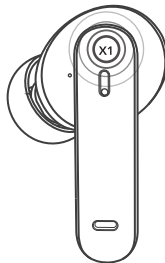

Music mode




Play/Pause

Phone mode



Call Answer/End

Double Press

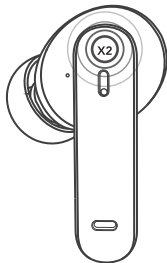

Music mode




Double press the right ear:
Volume up



Double press the left ear:
Volume decreases

Long Press

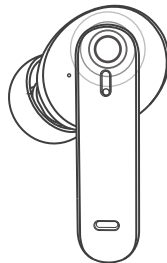

Wake up voice assistant




When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode



Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press

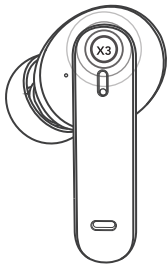

Music mode




Triple press on the left ear:
Previous song



Triple press on the right ear:
next song

Clear Bluetooth pairing history


When both ears cannot be paired, you need to clear **all** connected devices and click the left and right earphones 5 times at the same time.

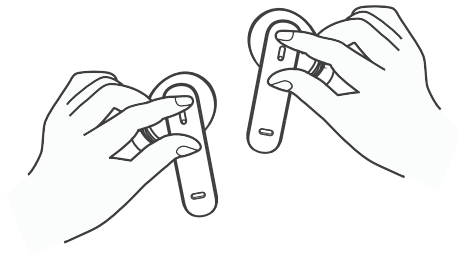

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

Switch between Penetrating, ANC and General Mode (single/dual ear operation)

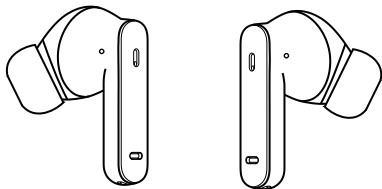


Switching modes

ANC  

Press and hold the multifunctional button on the right ear for 2 seconds to enter Penetrating mode, long press again for 2 seconds to enter ANC mode, and long press again for 2 seconds to enter General mode

Note 1: When using one earphone, you cannot switch between mode.
Note 2: Power on defaults to General mode.

Charging Case operation

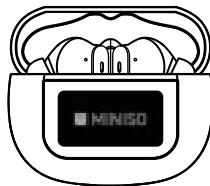

Lighting up the display screen

Method 1: Open the Charging Case cover and the display screen will automatically light up.

Method 2: When the screen is off, click on the display screen to turn it on.

Method 3: Press the multifunctional button of the Charging Case once to light up the screen.

Turn off display screen

Automatic shutdown: After turning on the screen for 30 seconds without operation, the display screen will automatically turn off.

Manual closing: Close the Charging Case cover and the display screen will turn off.

Multi function button off: Press the Charging Case multifunctional button once to turn off the display screen.

Note 1: First time use, please activate power on
Operation method: Please press the multifunctional button at the bottom of the charging case to activate and turn on the device.
Tip: This product defaults to shutdown mode when it leaves the factory, First use requires activation and startup.

Icon Introduction



Bluetooth status

White small icons status: The Charging Case is not connected to the headphones.

White Large icons status: The Charging Case is connected to the earphones, but the earphones are not connected to the phone.

Blue status: The Charging Case is connected to the headphones, and the headphones are connected to the phone.

Battery status



Charging status indicator icon for the Charging Case

Blue: Charging in progress

White: Normal battery level, not charging



Headphone charging status indicator icon

Blue: The earphones are charging in the Charging Case

White: Normal battery level, not charging

Lock screen interface



Unlock: Slide to the right to unlock the screen

Music interface



Previous Song



Play/Pause



Next Song

Equalizer interface



Switch between different EQ sound effects:
Classic, Country, Pop, Jazz, Rock

Ambient interface



ANC

ANC Mode

Q1

Penetrating mode

Q2

General Mode

Spatial Audio interface



Movie Mode



Music mode



Game Mode

Volume adjustment interface



Reduce volume,
minimum music is 0



Increase volume,
maximum volume is 16

Brightness setting interface



Click the left button to decrease the screen brightness;
Click the button on the right to increase screen brightness;
Low brightness, medium brightness, high brightness,
three gear options available

Wallpaper switching interface



Click to switch between different lock screen wallpapers,
the current screen is the selected lock screen wallpaper

Find Earbuds interface



Click the L/R button, and the number ③ screen will appear

③



Click to cancel and exit this function,
Click to start, the number ④ screen will appear,
and the headphone speaker will start emitting sound

④



Click the stop button to stop sounding

Camera function

Needs to be connected to a Bluetooth device such as a cell phone

- 1.This function is only available for taking photos with the built-in camera of the phone. Other shooting software may not be able to use it.
- 2.This feature may have compatibility issues with some phones, and some phones may not be able to use it.
- 3.If there are situations where it cannot be used, please ignore this feature.



Open the phone camera, click the button, and the phone will start taking photos

Note: When not in shooting mode, clicking this photo button will increase the volume

Stop Timer interface



Switch the Stop Timer that needs to be set:
5 minutes, 10 minutes, 15 minutes, 20 minutes,
25 minutes, 30 minutes, 60 minutes

Touch to wake interface



Touch mode wake-up switch interface:

After turning off touch mode wake-up, press the button to wake up the display screen and proceed with the operation,
This function prevents the human body from touching the display screen to wake up and cause battery loss

Light interface



OPEN

Click the button to turn on the flashlight,
the entire screen turns white and the brightness of the screen increases

Language switching interface



◀ ▶
Click to switch languages from different countries

Forced pairing



Press and hold for 5 seconds: enter the forced pairing mode, so that the left and right headset re-pairing, this operation requires the charging case open cover, the headset is in the charging case, and the headset and the charging case bluetooth connection to the case of the operation

restart the system



Long press 10 seconds: restart the system (display the boot screen), when the system is dead and can not be operated, this operation can be carried out

Incoming call interface



✕
Hang up the phone

 
☎
Answer phone calls

Low battery reminder



Low battery level in the Charging Case reflects:
timely charging to prevent battery over discharge

Multi function button operation for charging case




Multi function key


Press once: light up or extinguish the screen, the first time to use
the activation of the boot

Press and hold for 5 seconds: enter the forced pairing mode, so that the
left and right headset re-pairing, this operation requires the charging case
open cover, the headset is in the charging case, and the headset and
the charging compartment bluetooth connection to the case of the operation
Long press 10 seconds: restart the system (display the boot screen),
when the system is dead and can not be operated, this operation
can be carried out


Item list

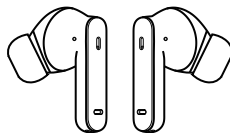


Headphones *1

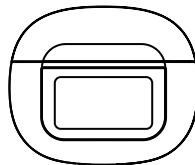

Charging case *1

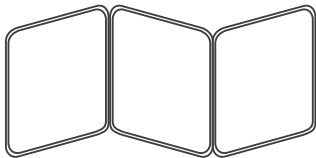

Instruction *1

 

Charging cable *1



Ear cap *6

FCC ID: 2BHJR-X25

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference **will** not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company name: REP America LLC
 Address: 1942 Broadway St. STE 314C, Boulder,
 CO 80302, United States
 Contact Person: Ben Xu
 Email: d.zeng@rep-europe.de
 ContactPhone: (719) 201-3314

Warranty statement

MINISO product warranty card

Product number			SN number	
User info	name		Purchase date	
	telephone			
	address			
	Invoice number			
Sales unit information	name	(stamp)		
	address			
	telephone			

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

After-sales email: 7@hifi-earphone.com



Warranty Policy

Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period(a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

① Electromagnetic interference:

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

② Safety matters:

Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

● Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.


● This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.

● After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

● During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

● When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause The battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

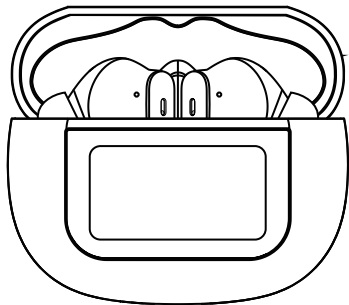

Copyright©2024 MINISO Group affiliated
companies and its licensors. All rights reserved

Creating sound
to live with