

When folded, please make sure that this title page is visible and not folded inside.

FRONT PAGE

SAFETY AND CARE INSTRUCTIONS

Read all the instructions before using the product and them store them for future reference. Failure to follow these safety instructions, could lead to fire, electrical shock, personal injury, property damage, or damage to the product.

- This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local / state guidelines.
- Do not expose to rain, moisture, or other liquid. Do use near water such as swimming pools, bathtubs, or sinks. If it becomes wet, immediately unplug the product from a power source. Do not handle the unit, USB cord or wall charger with wet hands.
- Do not charge, or use, the product if it has been submerged in water, or if water has got inside the product.
- Do not expose to heat sources, the sun, or leave in a hot vehicle. Do not dispose of in a fire.
- Do not expose the product to extremely high or low temperatures. Use this product in a location with a temperature of 32°F - 95°F. Prolonged exposure to extreme heat or cold reduces battery longevity. Exposure to fire or temperatures above 170°F could cause serious damage and explosion.
- Do not disassemble, there are no serviceable parts inside. Do not drop. Do not use if damaged or modified or if you see any bulging, swelling, leakage or other abnormality. Never insert objects other than the specified cables into the product. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Charge using the correct wall charger, and make sure that the charger is inserted all the way into the electrical outlet. Disconnect the charger once the product is fully charged.
- This product is not a toy. Keep out of reach of children or those that require supervision.
- Do not use abrasive cleaning solvents to clean the unit.

Note: Lithium-ion batteries will self-discharge over time, and it is normal for battery performance to decline after several years of usage. To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long a lithium-ion battery will no longer have the ability to be recharged.

5

FCC STATEMENT

FCC STATEMENT
Any changes or modifications not expressly approved by the party responsible for compliance could void this user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Left bud:FCC ID:2AHAS-XBE90139L
Right bud:FCC ID:2AHAS-XBE90139R


6

ONE YEAR LIMITED WARRANTY


Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property. For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com



XTREMECABLES

Made in China for
Jem Accessories. Edison, N.J. 08817




7

XTREME
SOUND




TRUE WIRELESS STEREO
TRANSPARENT
EARBUDS

With LED display charging case



XBE9-0139
User Manual V1.0 0924
855.999.8041 | WWW.XTREMECABLES.COM


Scan to Extend
Your Warranty

BACK PAGE

PRODUCT DESCRIPTION


Thank you for purchasing the TWS Transparent Earbuds. Please read this manual carefully to understand how to use and maintain your earbuds effectively.

FEATURES
Flaunting a see-through design that showcases the inner workings, these earbuds combine style with functionality. Enjoy the flexibility of using a single bud for calls and staying connected to your surroundings, or utilize both earbuds for immersive sound. Never get caught without a charge - the large LED display on the charging case keeps you informed, showcasing the battery percentage. This lets you power up your earbuds on the go, making sure your music never has to stop.

- TWS Series, use earbuds individually or simultaneously
- Supports HSP, HFP, A2DP, and AVRCP profiles
- Up to 2 hours of playtime on a single charge
- Charging case with LED display
- Easy-to-use touch controls

1

GETTING TO KNOW YOUR PRODUCT

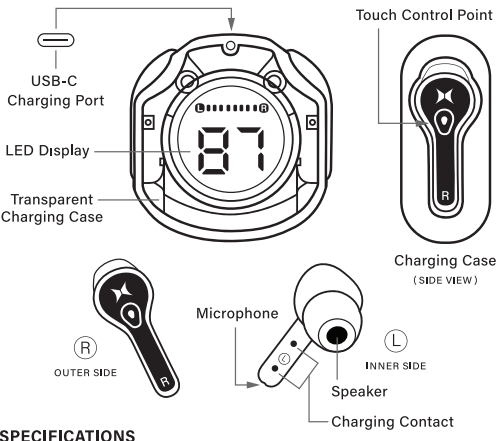

Labels: USB-C Charging Port, LED Display, Transparent Charging Case, Touch Control Point, Charging Case (SIDE VIEW), OUTER SIDE, INNER SIDE, Microphone, Speaker, Charging Contact.

SPECIFICATIONS

- Supports: HSP, HFP, A2DP, AVRCP
- Wireless Distance: 33 feet
- Playtime: 2 hours (at 100% volume)
- Standby Time: 240 hours
- Battery Capacity:
 - Earbuds 30mAh each
 - Charging Case 230mAh
- Charging Specification: 5V/1A
- Charging Time: 1 hour
- Material: ABS
- Dimensions:
 - Earbuds: 2.3 x 0.5 x 1.5 inches
 - Charging Case: 2.63 x 1.84 x 1.57 inches
- Net Weight:
 - Earbuds: 3.6g each
 - Charging Case: 30.4g

2

OPERATION

NOTE: Before first use, charge the earbuds in the case for at least 1 hour.

Charging
Earbuds: Place the earbuds in the charging case. The LEDs will light up and alternate while charging.

Charging Case: Connect the included charging cable to the case and plug it into an appropriate power source. The LED display right digit will blink, indicating charging status. The battery percentage will show numerical numbers up to 99%. When fully charged, the case will indicate "OK".

To power on, remove the earbuds from the charging case. They will automatically turn on and pair with each other.

To power off, place the earbuds back in the charging case or hold the Touch Control Point button for 5 seconds.

Bluetooth Pairing

- Ensure the earbuds are powered on.
- Open the Bluetooth settings on your device and search for new devices.
- Select "Xtreme XBE9-0139" from the list of available devices.
- Once paired, a confirmation tone will sound.

Touch Controls
Play/Pause: Tap either earbud once.
Next Track: Hold right earbud for 2 seconds.
Previous Track: Hold left earbud for 2 seconds.
Volume Down: Double tap the left earbud.
Volume Up: Double tap the right earbud.
Answer/End Call: Tap either earbud once.
Reject Call: Long-press either earbud for 2 seconds.
Activate Voice Assistant: Triple tap either earbud for 3 seconds.

Low Battery Indicator: When the earbuds have low battery, play a low battery warning sound

3

TROUBLESHOOTING

If you are unable to connect your earbuds to your Bluetooth device, please try the following steps:

1. Ensure your earbuds are turned on and fully charged
2. Make sure your your phone or Bluetooth playback device's Bluetooth setting is on
3. Please charge the earbuds and Bluetooth device
4. Restart your Bluetooth device

Tips

- Performance can be affected by the environment or when the earphones become discharged
- Interruption can be caused by obstacles between the earphones and the Bluetooth device, by wi-fi or other high frequency signals, or if the earphones are brought out of range of the Bluetooth device (approx. 33 ft)
- To maintain healthy battery performance, charge the charging case (and earphones) periodically, if not in use

4

PDF
BAR