

80g双胶186C+K 风琴折
双色印刷 75x95mm 英文

正面

Model: MS62106

MONSTER™

Bluetooth Speaker

WEARABLE BLUETOOTH SPEAKER

QUICK START GUIDE

Please read this Quick Start Guide carefully and keep it for future use.

Product Overview

•Wireless Speaker x1
•USB-C Cable x1
•User Manual x1

1

2

3

4

5

1. Volume Up/Next Song

Long press: Quickly turn up the volume

Short press: Turn up the volume

Double click: Next song

2. Power On/Off

Long press: Turn on/off

Short press: Pause/play/answer/hang up

Double click: TWS connect/disconnect/reject

3. Volume Down/Previous Song

Long press: Quickly turn down the volume

Short press: Turn down the volume

Double click: Previous song

4. USB-C

5. LED

LED Indicator Guide

	Description	Voice/Tone	Status
	○White LED light	Opening tone	Power on
	●White LED off	Goodbye	Power off
Bluetooth	※White LED flashing	Discovering	Not connected
	○White LED light	Your device is connected	Connected
Battery low	※Red LED flashing	Battery low	-
Charging	Charging, red light on. When full, the red light goes off	-	-

Instructions: ○LED light on ●LED light off ※LED light flashing

反面

Charging

USB-C charging port

*Before first using the speaker, please keep the speaker fully charged.

Power/Charging

For better enjoyment, fully charge the speaker before use.
A USB-C charging cable (charge only) is included for a standard USB-compatible device.
Please use a 5V/1A or above power adapter (not included).
Caution: - Other incompatible charges may cause damages.
- Do not use it if the connector or device is wet or damaged.

Power On/Off

In shutdown mode, press and hold the power on/off button for 2 seconds, you will hear a power on tone.
To turn off the speaker, press and hold the power on/off button for 2 seconds, you will hear a power off tone.
Caution: If no Bluetooth device is connected, the speaker will turn off in 10 minutes.

Bluetooth Connection

• When first used and turned on, the speaker will automatically enter a pairing mode for connection.
• If the Bluetooth device is already connected, press the "➕" and "➖" button at the same time to disconnect the current connection and connect with other devices.
• The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device.
• When pairing, enable the Bluetooth function of the phone and search for " Monster Blaster Micro " to connect. When the connection is successful, you will hear a prompt tone, and the Bluetooth indicator will turn from blinking to long on.

Music Control

Press the "○" button to play or pause music.
Double click the "➕" button to go to the next song.
Double click the "➖" button to go to the previous song.

Volume Control

Short press the "➕" button to turn up the volume.
Long press the "➕" button to quickly turn up the volume.
Short press the "➖" button to turn down the volume.
Long press the "➖" button to quickly turn down the volume.

Call Mode

Answer a call: Short press the "○" button.
Reject a call: Double click the "○" button.
End the call: Short press the "○" button.

Connect Two Speakers, Stereo Mode (Same Model Only)

1. Turn on the two speakers first and do not connect Bluetooth devices (such as mobile phones).
2. Press the "○" button twice on any speaker to hear a prompt tone, and the two speakers will automatically pair. After successful pairing, the Bluetooth indicator light of the main speaker will flash, and the Bluetooth indicator light of the secondary speaker will remain on.
3. Enable the Bluetooth function on the phone, search for " Monster Blaster Micro " to connect. After successful connection, you will hear a prompt tone, the Bluetooth indicator light on the main speaker will become stays on, and the Bluetooth indicator light on the secondary speaker will remain stays on.

Reset Device

In the power on state, press the power button five times to reset the device.

Caution

•It is not recommended to replace the battery privately.
•The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

For service, warranty, or product information,
Please contact: customerservice@monster-china.com with your order ID.

PDF
A686

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.