

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

03/00

2000 Tandy Corporation.

All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

Cat. No. 60-4250

Flasher

Your RadioShack Flasher is built to handle the road, whether the road is the hallway in your house or sidewalk outside. Use the Flasher's transmitter to make it travel in any direction you choose. Built to 1/18 scale, it can reach speeds up to 450 feet per minute. The Flasher comes in two frequencies (27 MHz & 49 MHz) so you can race with your friend, provided you and your friend use different frequency. Check your Flasher's box to see which frequency of the truck you use.

Note:

You need six AA batteries (not supplied) to power the Flasher and one 9V battery (not supplied) to power its transmitter.

INSTALLING BATTERIES

WARNING : Dispose of old batteries promptly and properly; do not bury or burn them.

Cautions:

Use only fresh batteries of the required size and recommended type.

Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Never leave dead or weak batteries in the Flasher the transmitter.

If you will not be using the Flasher for several days, remove the batteries. Batteries can leak chemicals that can damage your truck's electronic parts.

In the Transmitter

The transmitter requires one 9V battery (not supplied) for power. For the best performance and longest playing life, we recommend RadioShack alkaline battery.

Follow these steps to install the transmitter's battery.

1. Slide ON/OFF on the transmitter to OFF
2. Slide the battery compartment cover in the direction of the arrow to remove it.
2. Put the battery in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover. Be sure it snaps in.

When the transmitter's range decreases, replace its battery.

In the Flasher

Your Flasher requires six AA alkaline batteries (not supplied) for power. For the best performance and longest playing life, we recommend RadioShack alkaline batteries.

Follow these steps to install the Flasher's batteries

1. Set ON/OFF switch on the bottom of the truck to OFF.
2. Slide OPEN/LOCK to OPEN.
3. Grasp the ribs on the battery compartment cover, then pull back & lift the cover to open it.
4. Put the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
5. Replace the battery compartment cover, then slide OPEN/LOCK to LOCK.

If your Flasher moves slowly or does not move at all, replace its batteries.

Caution:

If you will not be using the Flasher for several days, remove the batteries. Batteries can leak chemicals that can damage your truck's electronic parts.

DRIVING THE FLASHER

Warnings:

Never play with the Flasher in the street.

1. Set ON/OFF on the bottom of the Flasher to ON.
2. Set ON/OFF on the transmitter to ON.
3. Use the transmitter's control levers to control the movement and direction of the Flasher.

Left Control Lever

- Push forward to move forward
- Pull back to move backward
- Release to stop

Right Control Lever

- Push left to turn left
- Push right to turn right
- Release to go straight

Note:

The roll bar will light on when the truck goes forward, backward, turn left & right.

4. When you finish driving the Flasher, slide ON/OFF on both the truck and the transmitter to OFF.

WHEEL ALIGNMENT

If the Flasher does not drive in a straight line when you release the right control lever, adjust the wheel alignment control on the bottom of the Flasher. Rotate the control to the left if the truck is

pulling to the right, or to the right if the truck is pulling to the left.

CARE

The following suggestion will help you to take care of the Flasher so you can enjoy it for years.

Do not drive the truck through puddles or mud, on a wet floor, or in sand, rain or snow. These may damage it.

Do not expose the truck or transmitter to temperature extremes, and do not store them in direct sunlight or near a heat source.

Do not leave the truck or transmitter outside overnight. Night dampness can damage their electronic circuits.

To protect the truck's mechanisms from lint and hair, do not drive the truck on carpet.

Wipe the car and transmitter's internal components can cause a malfunction and might invalidate the truck's warranty and void your FCC authorization to operate it. If your truck is not performing as it should, take it and the transmitter to your local RadioShack store for assistance.

HELPFUL HINTS

Follow these hints to get the most enjoyment from the Flasher.

Running your truck continuously for long periods cause wear and tear on the motor. To keep heat levels down, when your truck's batteries run down, let the truck cool at least 10 minutes before installing new batteries.

If the Flasher slowly and you have installed fresh batteries, check the wheel mechanism and remove any lint, thread, hair, or dust you see.

If someone uses a CB nearby, it might interfere with control of the Flasher. If this happens, move the truck and its transmitter away from the CB.

You cannot operate your Flasher near devices with transmitters that use the same frequency (27 or 49 MHz). Check the Flasher's box to see which frequency of truck you use.

THE FCC WANTS YOU TO KNOW

The Flasher or its transmitter might cause TV or radio interference even when they are operating properly. To determine whether your Flasher or its transmitter is causing the interference, release the transmitter's control levers and turn off your Flasher. If the interference goes away, your Flasher or its transmitter is causing it. Try to eliminate the interference by:

Moving your Flasher and its transmitter away from the TV or radio

Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Flasher and its transmitter.

USER-REPLACEABLE PARTS

You can order replacement parts for your car at your local RadioShack store.