
Size: 222.75(W) x 100(H)mm

FRONT SIDE

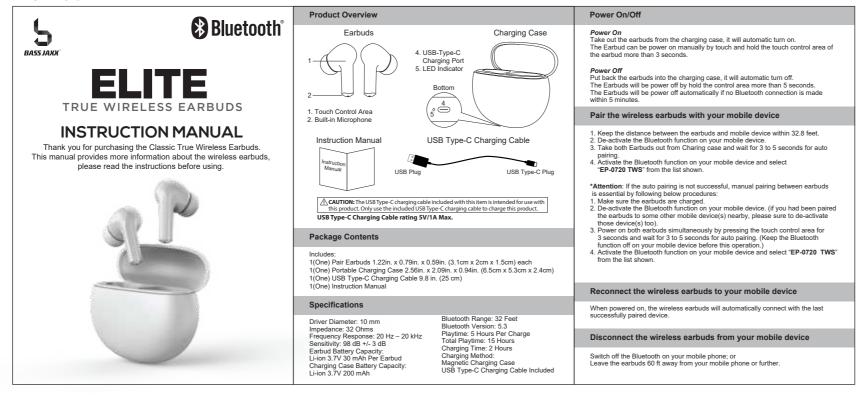

BACK SIDE

Answer / Reject a call	FAQ	FCC STATEMENT	
When receive a call, click touch control area once (on either earbud) to accept the call, or answer the call normally via your mobile phone. Touch and hold touch control area for 2 seconds to reject it.	If the wireless earbuds cannot be paired with your device, please try the following: Ensure that your earbuds are in pairing mode or reconnection mode Ensure that Bluetooth search function of your mobile device is activated.	This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may caus undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.	
End a call	If the wireless earbuds will not turn on:		
To end the call, just click touch control area once at any side of earbud.	Make sure the earbuds are fully charged.	NOTE: This equipment has been tested and found to comply	
Functions	Can I change the battery for the earbuds and the charging case? The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed. B digital device, pursuant to Part 15 of the FCC Rules. These limin provide reasonable protection against harmful interference in a resi This equipment generates, uses and can radiate radio frequency		in a residential installation quency energy and, if r
Pause / Play Music: Click touch control area once. Skip to next track of music: Double click the right side earbud touch control area. Back to previous track of music: Double click the left side earbud touch control area. Voice Assistant: Press and hold the touch control area for 2 seconds.	If the charging case cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works.	installed and used in accordance with instructions may cause harmful interference i radio communications. However, there is no guarantee that interference will not occ in a particular installation. If this equipment does cause harmful interference to radio television reception, which can be determined by turning the equipment off and on. Th user is encouraged to try to correct the interference by one or more of the followin	
Charging your Earbuds		measures: • Reorient or relocate the receiving antenna.	
 Open the charging case cover. Insert the earbuds into the charging case. The earbuds will start to charge automatically. The LED on Charging case will be on. Once fully charged, the LED will be off. 	▲ Safety instructions for the lithium battery and charging the product - The input voltage to the product is 5V 1A. - In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. - Only charge the product at ambient temperatures between 10°C/ 50°F and	Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to whic receiver is connected. Consult the dealer or experienced radio/ TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device has been evaluated to meet general RF exposure requirement.	
Recharge Charging Case	40°C/104°F. - Do not heat above 70°C/158°F, eq. Do not expose to sunlight or throw into fire.	can be used in portable exposure condition without restrictio	
A For your safety, please always use appropriate 5V input charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with the packaging. 2. Connect the USB Type-C plug to USB Type-C charging port on the charging case, then connect the USB plug to a wall adapter to begin charging. 3. The LED on the charging case will be flashing during charge. 4. Once fully charged, the LED will be stop flashing.	 Switch off the product after use. Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development. 	The Bluetooth [*] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.	
VOTE: You must select a qualified charger from a regular manufacturer.			EM# EP-0720
You must charge the charging case and earbuds if it has been not used for more than 6 months.		FCC ID: 2ADM5-EP-0720-R Distributed 701 Mar	d by 1616 Holdings, In rket Street, Suite 200 delphia, PA 19106
USB Plug USB Type-C Plug		Keep All Relevant Information Ma For Future Reference Ma	ade in China

