

49TX5

0102

RACIN' RIDER RC™ CYCLE

Ages: 3 years and up

Please save sales receipt for proof of purchase.

**BATTERY WARNINGS:**

- Keep these instructions for future reference.
  - Cycle requires 4 "AA" (LR6) batteries and its controller requires one 9-volt battery. Alkaline batteries are recommended. (Rechargeable batteries may be substituted.)
  - Illus. 1-2 - Install batteries correctly. If batteries are installed backwards, this product will not work.
  - To avoid battery leakage:
    1. Follow the toy and battery manufacturer's installation instructions.
    2. Do not mix old and new batteries. Do not mix standard (carbon-zinc), alkaline, or rechargeable (nickel-cadmium or nickel-metalhydride) batteries. Do not mix different brands of batteries. Only batteries of the same or equivalent type as recommended are to be used.
    3. Remove dead or exhausted batteries from product. Dispose of dead batteries properly; do not burn or bury them.
    4. Make sure cover is properly installed on unit at all times.
  - Do not attempt to recharge non-rechargeable batteries.
  - Charging of rechargeable batteries should be done under adult supervision with batteries removed from product.
  - Supply terminals are not to be short circuited.
  - Do not take cycle or transmitter apart.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- For best performance, always use new "AA" or 9-volt alkaline batteries.

**NOTE:** If the unit stops working or doesn't work as it should, remove the batteries for a few minutes and then re-insert them. If there is still a problem, install new batteries.

**OPERATION****CONTROLLER (Illus. 3)**

On/off switch is located next to the battery compartment on the bottom of the controller.

**CYCLE (Illus. 4)**

Press on/off switch (located on the back of the cycle) once to activate it. **NOTE:** Cycle automatically shuts off after approximately 1 minute and 45 seconds when not in use. To reactivate cycle, push the power button twice.

**CARE & USE**

- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.
- Do not operate cycle near devices with transmitters that use the same frequency as your cycle (27 MHz or 49 MHz). Check product box for frequency.

49 TX6

- Use of a CB nearby may interfere with the control of your cycle. Move cycle away from the CB.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the distance between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.

- Consult the dealer or an experienced radio/TV technician for help.

- If you will not be using the cycle for a few days, remove the batteries. Batteries can leak chemicals that can damage the cycle's electronic parts.

- Do not use cycle on a wet floor, on sand or in mud, rain or snow. Water can damage the cycle and controller.

- Do not expose cycle and controller to extreme temperatures. Store cycle and controller in normal temperature conditions.

- Clean cycle and transmitter with a damp cloth only; do not use harsh chemicals, solvents or strong detergents.

#### CONSUMER SERVICE

#### TOLL-FREE NUMBER

##### United States:

1-800-321-0183

Monday - Friday

The Little Tikes Company

P.O. Box 2277

2180 Barlow Road

Hudson, Ohio 44236-0877

##### United Kingdom:

0800-521558

Monday - Friday

8 a.m.-5 p.m.

Little Tikes Division -

Crosby House, Meadowbank

Furlong Road, Bourne End

Bucks SL8 5AJ England

497X7

Printed in China.  
D.R. ©2001 The Little Tikes Company

620102090