

PDF

Model:DV-690WM

<<< Preface >>>

Thank you for choosing this HDC869 1080P FHD Wi-Fi Dash Camera. Please read this user manual carefully before using the device.

The device includes features like as HDR, Loop Recording, 155° Wide View Angle, Night Vision, Time-lapse recording, Parking Monitor, and G-Sensor, as well as the ability to connect to a smartphone through Wi-Fi for live view, video browsing, and device settings.

This manual should be kept for installation, operation, and specification checks. Upgrades, updates, and other reasons for change may cause specifications to change, resulting in a change in type

Before use:

■Remove the lens protective film to avoid affecting the recording effect and after the dash cam been properly mounted.

■Download and install the "Car_DVR" APP from APP Store (iOS devices) or Google Play (Android devices) to your smartphone.

■Make sure that the TF card is inserted at the correct direction, otherwise it may cause damage to the recorder or TF memory card

■CLass10 or above High-speed TF card (or or or or is strongly recommended to be used for this dash cam. Low-speed TF cards might result in video data loss, video file damage, camera system slowness, and other unexpected issues.

When using the TF Card for the first time, format the TF card by the dash cam (via APP control)

■If there is an emergency and you need to retrieve the contents of the TF card, please do it within 5 to 10 minutes following the incident. The video may be overwritten or not saved fully if it is saved too early or too late.

<<< Appearance & Function Keys >>>



Function Keys:

Power Button: Press to stop / start the video recording,

Press and hold for 3s to turn off the camera.

Photo Button: Press to take a photo,

Press and hold for 3s to lock the current video file.

Press and hold for 6s to load the default settings.

(The Wi-Fi Passcode will be reset to "12345678")

Reset: Push the Reset key with a pointed end, to reset the dash cam

hardware. (In case the recording system stuck sometime.)

LED Indicator:

There has 2 LEDs (Blue and Red)

Blue --- Blue On --- Power On

- --- Blue Off --- Power Off
- Red --- Slow Flashing--- Video Recording On
 - --- Constants On --- Video Recording Off

For iOS devices: Please search the "Car_DVR" From APP Store or scan the QR code below and download it for free.

For Android devices: Please search "Car_DVR" from Google Play and download it for free or scan the below QR code to download it quickly.



For iOS device

For Android device

APP Operation Quick Guide:

■Connect to the Dash Cam via Wi-Fi.

Power on the Dash Cam, Search the Wi-Fi name that start with "CAR_DVR _ ****"

from the smartphone, input default password: 1234567890.

Click to running the "CAR_DVR" APP on the smartphone:

-Main UI



- Live View



- Camera Setting

Back	Setting		
Video Resolutio	n 1080P30		
Flicker Frequenc	ay 60hz	•	
Looping Video	1Min		
Sound Record			- ON/OFF
Sound Indicator			- ON/OFF
GST	Middle	•	- Off/Low/Middle/High
Parking mode	Off	*	Off/Low/Middle/High
video Time Lapa	e Off	-	- Off/1Second
Exposure			Exposure Setting
White Balance	Auto		- Auto
Syric Time		>	- Time and Date Syncing from Smartpho
Reset Camera		>	Set to Default Setting
Format SD Card		>	- Format SD Card
Firmware Versio	in CARDVR 002		
APP Version 2.0	7		

Paraphrase:

Looping Video --- The cam recorder will record the video following the set length and save each period's video file to the TF card then repeat the loop recording and file saving process. When the TF card is nearly full, the recorder will write the most recent files and cover previous unlocked ones.

GST --- G-sensor Sensitivity Tier (High means more sensitive)

High sensitive will cause that more locked files on the TF card. Highly sensitive will cause that more locked files on the TF card. It is recommended to format the TF card monthly, to erase the older locked files, and keep enough memory space.

Parking mode --- G-sensor Sensitivity Tier during the parking period (ACC OFF)

(High means more sensitive) B+ of power cord connect to car battery DC/+12V is required for parking mode.

Video Time Lapse --- The recorder save snapshot per second during the parking period (ACC OFF), and keep work up to 12 hours then power off.

B+ of power cord connect to car battery DC/+12V is required for Time Lapse function.

Parking mode and time-lapse video function is 2 choose 1.

Format SD Card --- All the data on the card will be erase.

When using the card for the first time, it is recommended that you format it. To keep the recorder running smoothly, format the card on a monthly basis.

-Recorded files Transfer to Smartphone:



(1): Click the icon (2): Edit (3): Select video or photos (4): Save or delete

-Saved Local files management:



1: Click the icon 2: Edit 3: Select video or photo 4: Open, Share or delete

<<< Wiring Diagram >>>



(Red) ACC	Connect to the ACC DC +12V Power	
(Black) Gand	Connect to the vehicle metal body	
(Yellow) B+	Connect to the battery constant DC+ 12V power. (Required for	
	Parking mode / Time lapse functions)	

Installation Demo



<<< Specification >>>

Image Processor: H.264; 1080P@30fps Image Sensor: 2M Pixels COMS sensor **Lens:** 155°Wide-Angle High-Definition Camera, F1.8 Video Recorder: Normal recording, time-lapse recording and Collision locked Video resolution: 1080P@30fps, 720P@30fps Video format: .TS (H.264) Photo resolution: 2M Pixels TF card capacity: Class10, up to 128GB card supported. Wi-Fi: Built-in 2.4G Wi-Fi module Gravity Sensor: Built-in three-axis collision acceleration sensor **Microphone:** Built-in, Set On/Off via APP Supported **Sound notice:** Support APP to turn on/off Working temperature: $-20^{\circ}C \sim +70^{\circ}C (-4F \sim 158F)$

Files storage path on the TF card as follows (for PC browsing):

Event	"Event": Folder of Locked video files (during the collision or parking monitor)
- Normal	"Normal": Folder of regular video recorder files, time-lapse video included
- Photo	"Photo": Folder of Snapshots

What In the box:

- DV-690WM dash cam x 1pc; Mounting Pad x 1pc;
- Power Harness (10 ft) x 1pc; User Manual x 1pc;- Pry bars x 1pc

<<< Common troubleshooting >>>

1. Camera can't turn on (blue LED off)?

①Check the B+ and ACC wiring are correct, and make sure that the car is in ignition state.

②Check the 8pin power cord connector between the dash cam and the extension power cord.

2.The recorder has no video recording (Red LED no flashing), or the video has frame skipping or freezing?

- ① The TF card not been detected. Eject and the re-insert the TF card into the card slot. Then format the TF card via smartphone.
- ② Make sure to use C10 or above high-speed card.

3. There has no live-video on the APP of smartphone?

- (1) The permission requirements when turn on the app for the first time must be set as "agreed", otherwise the app cannot be used normally, and it needs to be uninstalled and reinstalled to obtain the permission again.
- ② Make sure to connect to the correct Wi-Fi, that name start with "CAR-DVR****", otherwise disconnect the WIFI and reconnect to the recorder WIFI
- ③ Ensure that the smart phone does not automatically cut off the WIFI connection to the recorder.
- ④ The dash camera is power on.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.