

## Before Using this Product

### ■ Attaching the Necklace String

The indicated part on the picture is separated. Thread the necklace string through the necklace hole after separating the indicated part. And join the separated part together to use.



### ■ Mode Switching

The player mode is switched between Music, Voice and FM.

1. Press the FUNC [ ] button while the player is stopped.
2. Whenever you press the FUNC [ ] button once shortly, the mode will be switched to Music, Voice and FM.

#### Note

- ▶ Music Mode : Plays back MP3 and WMA file.
- ▶ Voice Mode : Plays back voice recording file and FM recording file.
- ▶ FM Mode : Listens to the FM broadcasting or records it.

### ■ Navigation Function

Searches music easily with the tree structure navigation function like PC.

- Enter: Press the PLAY/STOP [ ] button longer once while playing or stopped.
- Move to the lower folder : Press the [ ] button.
- Move to the upper folder: Press the [ ] button.
- Enter the folder: Press the +/- [ ] button.
- Playback the file: Press the MENU [ ] or PLAY/STOP [ ] button shortly once.

MP3  
PLAYER

## Music Mode

### Basic Functions

#### ■ Play/Stop

Playback: Select the file to play back when the player is turned on, and press the PLAY/STOP [ ] button once shortly.

Stop: Press the PLAY/STOP [ ] button once shortly.



#### ■ Volume Control

Press the +/- [ ] button shortly to increase the volume by 1 step, or hold the button to increase the volume continuously.



### Warning

- Do not increase the volume too high during playback using an earphone. Your hearing ability can be impaired.
- Turn the volume down first and increase to the one you want.

MP3  
PLAYER

## Music Mode

### File Move/Search/Select (FF/REW)

Moves, Searches for or selects the file.

- Move Forward or Backward : Press the ◀◀/▶▶ [ ] button to the arrow direction during playback.
- Search : Press the ◀◀/▶▶ [ ] button during playback and hold it to move forward or backward.
- Select Previous/Next File : Press the ◀◀/▶▶ [ ] button to the arrow direction once shortly when the player is stopped.

 
REW ◀ ▶ FF




### A-B Section Repeat

Plays back the selected sector repetitively.

- On: 1. Press the FUNC [ ] button once shortly during playback to set the A point.  
 2. Press the FUNC [ ] button shortly again to set the B point. Then, playback will be repeated between the point A and B.  
 Off: Press the FUNC [ ] button once shortly.



Setting A Point

 

Setting B Point

MP3  
PLAYER


## Music Mode
 
### Menu Setting

Sets the menu item.

- Enter menu : Press the MENU [ ] button once shortly in music mode.
- Menu navigation : Use the ◀◀/▶▶ [ ] button.
- Save settings : Press the MENU [ ] button once shortly.
- Release menu: Press the MENU [ ] button longer once.

### Menu Configuration

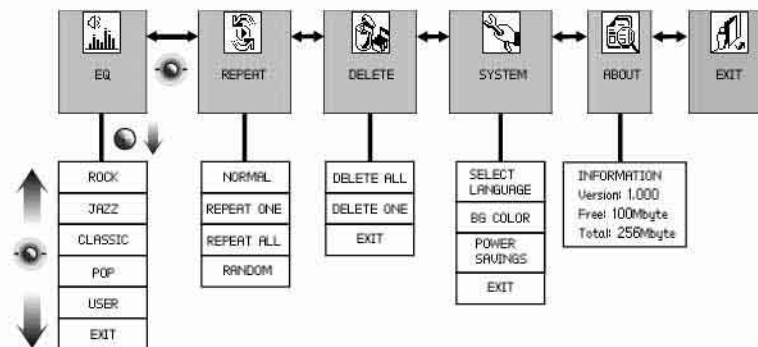


MP3  
PLAYER

## Music Mode

 
### ■ EQ (EQUALIZER)

You can change the tone according to the characteristics of the playback music.



### ■ USER EQ (User-defined EQ)

 
You can control the tone minutely according to the musical range.

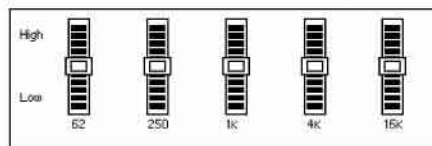

Use the ◀◀/▶▶ [ ] button to select a band (musical range: 62~ 14K) and use the +/- [ ] button to select a level (intensity: High/Low).

### ■ REPEAT

 Sets the repetition method in the music mode.



NORMAL: Plays back every selected music once.  
 REPEAT ONE: Plays back the selected music repetitively.  
 REPEAT ALL: Plays back all music repetitively.  
 RANDOM: Plays back all selected music at random.

MP3  
PLAYER

## Music Mode

### ■ DELETE

Removes the saved music file.



- DELETE ALL: Removes all saved files. Folders will remain even if files are  
 DELETE ONE: Removes the selected file only.

Are you sure  
 you want to  
 delete all file?  
 Yes No Exit

Are you sure you want  
 to delete the file  
 SONG.mp3  
 Yes No Exit

#### Note

 
▶ Only music files are deleted in Music mode.

EXIT: Returns to the main menu.

### ■ SYSTEM



SELECT LANGUAGE: Selects a language to display the title.

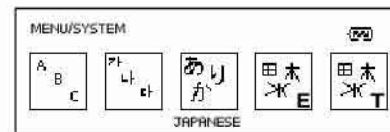

SIMP.CHINESE: Simplified Chinese  
 TRAD.CHINESE: Traditional Chinese

MP3  
PLAYER