

62mm

92mm



 
## CATALOGUE

- 01 How to wear headphones correctly 3
- 02 Product Introduction 8
- 03 Touch Operation 9
- 04 Item list 18
- 05 Warranty Statement 21


## Welcome to MINISO Wireless Earphones

### Take out and pair it

When using for the first time, please remove the left and right sides. Wear headphones at the same time. When the headphone indicator light flashes alternately in white and ice blue, the headphones will enter automatic pairing mode.

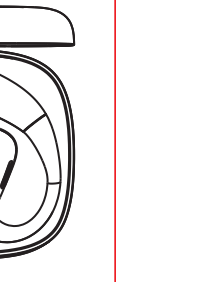


## How to wear headphones correctly

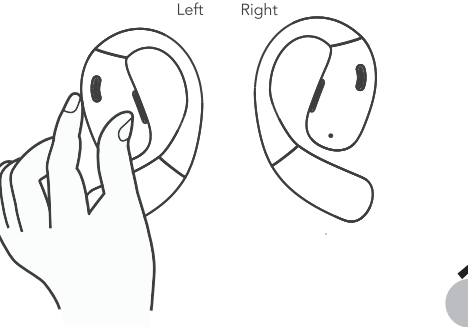 

1

 3

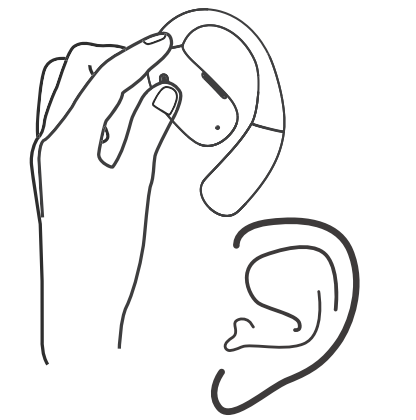

2


4



3

5

## Product Description

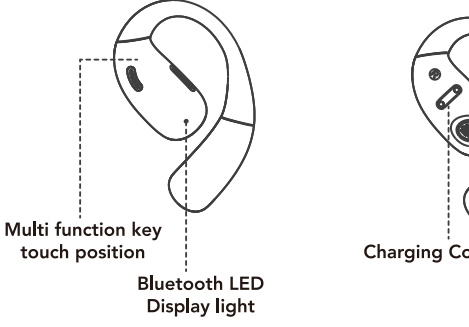 

Multi function key touch position

Bluetooth LED Display light

Charging Contacts

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

Charging Indicator

Type-c Interface

## Specification of Product

Model of Product: BM23  
Version: V5.4  
Effective Distance: Approx. 10m  
Speaker Diameter: φ14.2mm  
Impedance: 32Ω  
Frequency Response: 20Hz-20KHz  
Microphone Sensitivity: 42dB±3dB  
Earphone Input: 5V±30mA

Charging Case Input: 5V±250mA  
Charging Case Output: 5V±60mA  
Earphone Battery Capacity: 30mAh  
Charging Case Battery Capacity: 250mAh  
Duration: Approx. 4 H (Earphone)  
Earphone Charging Time: Approx. 1.5 H  
Charging Time of the Charging Case: Approx. 1 H

## Touch Operation

Connect with Bluetooth device

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-BM23". Click the pairing name to pair.

## Indicator Light Description

When the headset is turned on: The white light and ice blue light alternate flashing  
When the headset is turned off: The white light flashes rapidly 3 times and then goes off  
Pairing status: The main ear white light and ice blue light alternate flashing, and the auxiliary headphone light is off  
Connection successful: no light  
Headphone Charging: The Charging case indicator light is always white, and the headset white light is always on. After the headset is fully charged, the white light turns to ice blue and then goes out, and the charging case indicator light goes out at the same time.  
Charging of the Charging case: The ice blue light of the Charging case indicator light is always on.

## Power On

Automatic power on: The earphones are in the charging case, open the charging case cover, the Earphone will be powered on, with the prompt sound of "Du".  
Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

## Power Off

Auto power off: Put the Earphone in the charging case, close the charging case cover, the Earphone will be powered off, with the prompt sound of "Du".  
Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

## Once Press

Music mode  
Phone mode  
Play/Pause  
Call Answer/End

## Double Press

Music mode  
Double press the right ear: Volume up  
Double press the left ear: Volume decreases

## Long Press

Wake up voice assistant  
When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant.

## Triple Press

Phone mode  
Press and hold the left (or right) ear multi-function button for two seconds: call rejection

## Wireless pairing mode

1. When there is no pairing record for the left and right earphones the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.  
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep".

## Switch between game mode and music mode

Game mode  
Music mode  
Press and hold the multi-function button on the right ear for 2 seconds  
Press and hold again for 2 seconds

## Item list

Headphones \*1  
Charging case \*1  
Charging cable \*1

## FCC ID: 2BHJR-BM23

FCC Warning: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.  
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.  
RF warning for Portable device:  
The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.

## US REP

Company Name: MIBAMONT SOLUTIONS LLC  
Address: 34218 HOURGLASS ST, TEMECULA, CA 92592, United States  
Contact Name: Wenyi Wang  
Telephone No: (951) 401-3633  
Email: scotttv668@gmail.com

## Warranty statement

MINISO product warranty card

## The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;  
2. Altering of the warranty cards and product code do not match the product itself;  
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;  
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;  
5. Zippers and tower buckles are damaged due to excessive force;  
6. Off-line or tear caused by overloading;  
7. Any damage caused by sharp objects;  
8. Products with signs of burn damage or water logging;  
9. Damage caused by unauthorized dismantling and modification;  
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.  
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.  
The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.  
If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

## Warranty Policy

Disclaimer: This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.  
Warranty statement:  
The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve (12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period; a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen (13) months from the product production date.  
If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

## Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services mentioned in the device.  
① Electromagnetic Interference:  
Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.  
Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.  
② Safety matters:  
Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.  
Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

## Important safety tips

① Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.  
② This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-humidity environment. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, and replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type, battery usage.  
③ After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.  
④ During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out of sync, or disconnection. If this happens, please reconnect the headphones or stay away from interference.  
⑤ When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

## Enjoy the company of MINISO

Creating sound to live with