

# HKKO589 Bluetooth Speaker

## Instruction Manual (Read before proceeding)

### Power the Speaker

Plug the small connector of the included USB charging cable into the charging port on the back side of the speaker. Plug the other connector into a compatible 5V USB (minimum 1A) wall adapter (not included) and plug into an electrical outlet.

The LED indicator will turn RED while it connect to power, it will turn off when power fully charged.

### Charging the microphone

Please charge the microphone fully before first use.

To charge, Plug the small connector of the included USB charging cable into the charging port on the back side of the speaker. Plug the other connector into a compatible 5V USB (minimum 1A) wall adapter (not included) and plug into an electrical outlet.

The LED indicator will turn RED while it connect to power, it will turn off when power fully charged.



1: M button: Switch Bluetooth mode and TF card mode

2. + - Button:

Short Press to skip tracks

Long Press to adjust volume

3. Long press to power ON/OFF

Short press to Pause/Resume playback

4.

5. AUX OUT:



6. TF card slot

7. Charging port

8. LED indicator



### Powering ON/OFF the Speaker

- Press and hold the [  ] button on the top of unit to power on. A tone will be heard and the speaker will enter Bluetooth pairing mode.  
The speaker will automatically re-pair to any nearby previously paired devices.
- Press and hold the [  ] button again to power off

### Playing Music via Bluetooth

- Turn the unit on to activate the Bluetooth function.
- A tone will be heard and the speaker will enter Bluetooth pairing mode.
- Make sure the Bluetooth function on your device is turned on.
- Search the speaker named, " **XXX**".
- Once you have selected the speaker, your device will pair without a password. (If your device prompts for a password, enter the password "0000".)
- When paired successfully, **the LED indicator will be solid BLUE.**
- Start playing music on your device, **the LED indicator will flash BLUE slowly.** Make sure that you keep your device within a 33 feet range of your Bluetooth speaker.
- Adjust the volume of your device to a comfortable level.
- Turn off the unit when not in use.

### Playing music via TF card


- Insert the TF card (not included) into the slot on the back side of unit. A tone will be heard and the speaker will enter TF card music playback mode.
- The music will be played automatically.

Press the button [ M ] to switch between Bluetooth mode and TF card mode.



### Using the Audio Output

- You can connect the unit to a pair of headphones or speaker using the audio out put jack on the back side of the unit.
- Insert the connector of a 3.5mm Aux cable (not included) into the audio output jack. Insert the other end into the audio input jack of your audio device


### Adjusting Volume & Playback

- Press the [  ] button to pause playback. Press again to resume.
- Press the [+] and [-] button to skip to the next tracks
- Press and hold the [+] and [-] button to skip to adjust volume.



### Powering ON/OFF the microphones





- Press and hold the [  ] power button on the microphone to turn it on. The LED below the power button will light up blue. When powered ON, the microphone will automatically connect to the speaker, provide that the speaker is already on.
- When the speaker is out of range or not turned on, the LED light will start blinking BLUE. Once the speaker is back in range or turned on, the microphone will automatically re-connect.
- You can disconnect the connect between microphone and speaker by press the [  ] power button when


they were connected already. Press again to re-connected.

- Press and hold the [  ] power button again to turn off .

### Karaoke Mode

- To sign karaoke,make sure the speaker is paired to a Bluetooth enabled device or playing music from TF card.
- Turn on the microphone by press the [  ] on the microphone.
- Play a karaoke song of your choice from your Bluetooth enabled device
- If you karaoke track includes vocals, mute vocals by pressing the [  ] button.

Microphone Functions		
Control panel on the mic.	Long Press	Short Press
	On / Off	Disconnect / Reconnect
	Previous Song	Decrease Microphone Volume
	Next Song	Increase Microphone Volume
	Change the microphone sound effect	Turn Background Vocals On/Off

LED Indicator 

### Caution:

- This is not a toy. Please keep away from children.
- Please keep away from water / heat.
- Low power may cause poor connection even no working of Bluetooth.
- Do not overcharge the battery.
- Battery pack shall not be exposed to excessive heat such as sunshine, fire or the like.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction