 








## Setting the Time and Date



Set Time Screen

To set the Time and Date, perform the following steps.  
From the Function Menu:

- Press  or  to move the cursor to display **"SET TIME"**
- Press  to display the Set Time Screen
- Press  to move the cursor to the next digit
- Press  to adjust the current digit
- Repeat the two previous steps to adjust all time digits
- Press  to activate the current setting and exit to the Main Screen

# FUNCTION MENU

## Setting Alarm



Set Alarm Screen

To set an alarm, perform the following steps.  
From the Function Menu:

- Press ◀ or ▶ to move the cursor to display "**SET ALARM**".
- Press ▶ to display the Set Alarm screen
- Press ▶ to select the desired alarm type (Off, 1 time, Daily)
- Press ◀ or ▶ to move the cursor to the time adjust field
- Press ▶ to adjust the current digit
- Repeat the two previous steps to adjust all the time digits
- Press ⏻ button to activate the current setting and exit to the Main Screen

# FUNCTION MENU

## Setting Private Time










Set Private Time Screen

-  : Enable Icon
-  : Disable Icon

Private Time allows you to specify a time period during which the device receives message without an audible or vibrate alert.

To Set Private Time, perform the following steps.

From the Function Menu:

- Press  or  to move the cursor to display **"SET PRIVATE"**
- Press  to display the Set Private screen
- Press  or  to move the cursor
- Press  to adjust the current digit or to enable/ disable private time
- Repeat the two previous steps to adjust all the time digits
- After setting the ON time, repeat the previous steps to set the OFF time
- Press  button to activate the current setting and exit to the Main Screen

**Note:** While Private Time is active, the Reminder alert and Low Battery alert will not sound.

## Setting Message Alert



Set Message Alert Screen

You can set the following message alerts:

- Audible
- Chirp
- Vibe and Chirp
- Vibe
- Silent

In addition, you may select from 8 other alerts. To change the Message Alert, perform the following steps.  
From the Function Menu:

- Press or to move the cursor to display **"SET ALERT"**
- Press to display the Set Alert screen
- Press or to move the cursor to the alert you want to set
- Press to activate the alert setting and exit to the Main Screen




If the Personal alert type is silent all Info service page alerting is silent regardless of current setting.


**Note:** You may also press to exit to the Main Screen without changing the Message Alert.


# FUNCTION MENU

## Setting Audible ON/OFF

If the device alerting is audible it can be quickly toggled to vibrate.  
From the Function menu:

- Press  or  to move the cursor to display *"SET AUDIBLE ON/OFF"*
- Press  to toggle the Audible Setting

If the Audible On function is set (  ), the pager will alert.




If the Audible Off function is set (  ), the pager will be on vibrate mode. Audible Mode applies to all alerts, including reminder alert, alarm, etc.

Although the pager is audible off, alarm is audible only.

**Note:** If the Inbox alert has been set for Silent or Vibrate, setting the Audible ON/OFF Function will not change alerting behavior.

 
### Enabling Reminder Alert

When this feature is enabled and there are unread Inbox messages, the pager will alert the user with the current selected Inbox alert. The pager does not emit reminder alerts for Info Messages, or messages with no alert setting. To change the Reminder Alert Setting, perform the following steps. From the Function menu:

- Press  or  to move the cursor to display **"ENABLE/DISABLE REMINDER"**
- Press  to toggle the current setting and exit to the Main Screen

## FUNCTION MENU

### Low Battery Alert









When the Battery capacity falls below the operational level, a Low Battery indication message will be displayed and an alert chirp will sound every hour.

### Locking and Unlocking Messages

Up to 10 messages can be locked to prevent them from being deleted or from being replaced when the memory is full. To Lock or Unlock a message, perform the following steps.

From the Inbox Folder Status Screen:

- Press  or  to select the message you want to lock or unlock
- Press  and then press  or  to move the cursor to show **"LOCK"** or **"UNLOCK"**
- Press  to activate the setting




To lock or unlock a message while reading it, follow the last two steps above while the message is displayed.

**Note:** Info and Saved Messages cannot be locked.







## Deleting A Message

To delete a single message perform the following steps.  
From the Inbox/Info/Saved Folder Status Screen:

- Press  or  to select the message you want to delete
- Press  and then press  or  to move the cursor to show **"DELETE"**
- Press  to delete the message

## Deleting All Messages







To Delete all messages, perform the following steps.  
From the Inbox/Info/Saved Folder Status Screen:

- Press  and then press  or  to move the cursor to show **"DELETE ALL"**
- Press  to delete all messages

**Note:** Unread personal messages and Locked messages cannot be deleted by using the Delete All function. Using Delete All with the Info Folder, will only delete those messages in the current selected slot.

### Moving A Message to the Saved Folder

To move a message to the Saved Folder, perform the following steps.  
From the Inbox/Info Folder Screen:










- Press  or  to select the message you want to move
- Press  and then press  or  to move the cursor to show **"NOTEBOOK"**
- Press  to move the message

To Move a message while reading it, follow the last two steps above while the message is displayed.

**Note:** The term **"NOTEBOOK"** refers to the Saved Folder.

## Setting the Info Slot Message Alert Type

A different alert can be set for each Info slot.  
To set the Info Slot Alert, perform the following steps.  
From the Info Folder Status Screen:

- Press  or  to select the Info Slot you want to set the alert for
- Press  and then Press  or  to move the cursor to show **"SET ALERT"**
- Press  and then Press  or  to move the cursor to the desired alert type
- Press  to activate the alert setting

While reading a message, follow the last three steps.

**Note:** When Inbox Message alert is set to vibrate, all alerts revert to vibrate regardless of the current Info Slot alert type.

## **LIMITATION OF LIABILITY:**

Neither your Wireless Provider nor Sun Telecom International is responsible for data that may be damaged or lost at any time, including, without limitation data lost or damaged during the servicing of Sun Telecom International hardware. In as much as the wireless data service provided, we cannot guarantee or warrant that the wireless data service will always be available or will always function properly. For this and other reasons, the wireless data service should not be relied upon for the transmission of data relating to emergency or life-threatening or mission critical situations, and Sun Telecom International disclaims any liability on its behalf and on behalf of its Wireless Providers for events or damages resulting from such reliance or the failure of the wireless data service to perform or to be available for your use of the wireless data service, including, without limitation, the lack of service coverage in the area in which YOU wish to use the wireless solution. To the extent the third party providing the wireless data service provides any warranties or guarantees that may be passed on to YOU, such warranties and/or guarantees are automatically passed on to YOU without any further effort on your part or on the part of Sun Telecom International. Neither Sun Telecom International nor your wireless provider shall in any way be liable to you for any damages you suffer or incur (including, but not limited to, general, special, consequential or incidental damages including damages for loss of business profits, business interruption, loss of business information and the like and personal injury or wrongful death damages) arising from or in connection with the use or performance of our product, even if Sun Telecom International or your wireless solution provider are aware of the possibility of such damages. This limitation is intended to apply and does apply without regard to whether such damages are claimed, asserted or brought in an action or claim sounding in tort or contract, or on the warranty, or under any other law or form of action.

## **INFORMATION TO USER:**

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- ❑ Reorient/Relocate the receiving antenna.
- ❑ Increase the separation between the equipment and receiver.
- ❑ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❑ Consult the dealer or an experienced radio/TV technician for help.



*MEMO*

## **FCC COMPLIANCE STATEMENT :**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

VHF: 152.000 ~159.000 MHz / UHF: 454.000 ~463.000 MHz

**Caution :** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate this equipment.

**The party responsible for product compliance**

