



PRECAUTIONS ON CHARGING

[Notice on charging]

1. For quick charging with adaptor, connect the USB adaptor from optional or store.(3hours)
2. For quick charging with USB cable, Press power button longer after connecting with device.

※ Charging time would be longer or caused error, from PC which has unstable power resource.

(Re-start PC)

※ Purchase USB adaptor from store and charge the device from store.

※ Purchase USB adaptor from store and charge the device through USB cable. Charging time would be longer with PC which has unstable power resource.

※ Purchase USB adaptor from store and charge the device. If this problem occurred.

※ LED turns-off automatically and LED blinks while charging.

※ LCD stops blink when charging is completed LCD displays " FULL CHARGED ", when you turn-on the device.



Warning

- Keep the charger away from water to prevent the risk of fire and electric shock.



Cautions

- Do not use multiple power plugs simultaneously in the electric outlet.
- Fully charge the device before using it for the first time or after months of negligence.
- Do not charge the device continuously over 12 hours.
- Over charging and over discharging shortens the life of the rechargeable battery.
- The rechargeable battery is an expendable of which the durability reduces steadily.
- Keep the terminals (metal parts) of the rechargeable battery from contacting (shorting) any conductible objects like necklaces or coins. Fire or electric shock may be caused.
- Do not touch the charger with wet hands.



IDENTIFYING THE COMPONENTS

Main device



※ Charger is available as an optional extra.

- Available memory is less than the specified due to the internal firmware usage.

- The external appearances of the components are subject to change for the sake of enhanced performance of the product.

- MINISO's the external memories are available in 64MB, 128MB, 256 MB, 512MB, 1GB size. Check the supported memories when purchasing one. External memories are sold separately. (Refer to page 54).


NAME OF THE PARTS



9

DESCRIPTION ON LCD

Display Screen

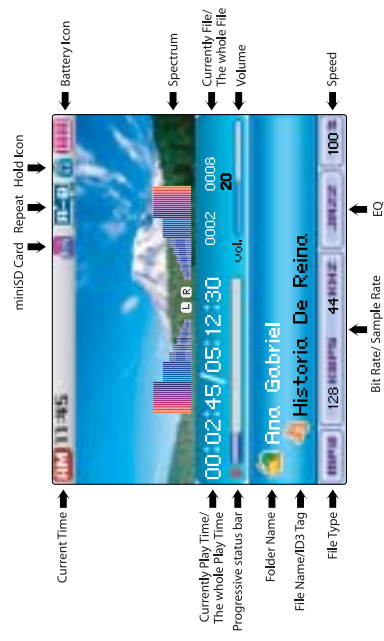


10



CONNECTING TO PC

Connecting to PC using USB cable

1. Connect the USB cable to the USB port of a computer.
2. Connect the other part of the USB cable to the USB connecting terminal on the bottom of the device.
 - Disconnecting the USB cable during USB driver install initialization or command execution may cause a PC error.
3. USB driver will be installed with a message finding a new device.
The install screen may not appear. Check the device manager to verify the installation.

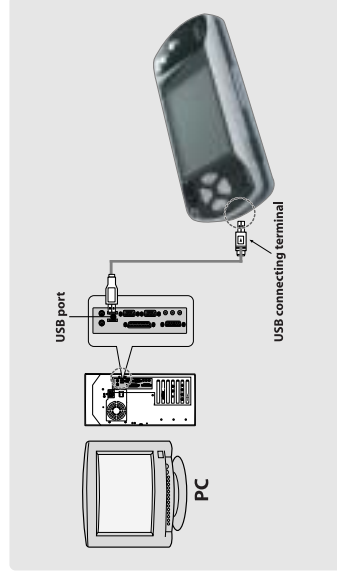

CONNECTING TO PC

For Windows 98 SE, make sure to install USB driver first before connecting the device to the computer.

[PC system requirement]

The PC system should meet the following requirement.

- Pentium 200 MHz or better
- Windows 98 SE/ME/2000/XP
- 50MB free hard disk space
- CD-ROM drive (2X or faster)
- USB port (2.0) support
- DirectX 9.0 or later
- Windows Media Player 9.0 or later

Installing Software

1. When the CD is inserted, the install screen automatically starts.
If it does not, click "SSF-805/810" from the CD to start the following screen.



2. Select the program you want to begin install.



BEFORE USING

Power On/Off

[Power On]

Press the power button a long while.

[Power Off]

Press the power button a long while again.



Press Longer

Adjusting the volume

Adjust the volume using [-/+] buttons on the body during playback.

- The volume can be adjusted between 00~40.



Volume - ◀ ▶ Volume +

Reset

In case of abnormal operation, press the [RESET] button with a pointed tip shortly and the system will be initialized.

- The saved files in the product are not deleted.



Press Shortly



MENU

1. Press the [MENU] button a long while and then the window is converted to menu mode.
2. Using [◀▶] button, choose the desired menu and press the [SELECT] button shortly then, the window will be converted to the target menu.
3. Press the [ESC] button and the menu mode will be released.



- Music : When playing back the music files
- Navigation : When browsing and choosing the music to playback
- Game : When playing a game
- FM Radio : When listening the FM radio
- Record : When recording and check the voice and Line in
- Video : When viewing the video files
- Text : When reading the text files
- Photo : When viewing the image files
- System setup : When setting up system items in the menu



Note

- In case any input is not entered for 10 seconds in the menu mode, it will be released.

Converting to audio play mode

In case of the modes other than audio play mode, press the [MENU] button a long while. Using [◀/▶] button, choose the audio play mode. When pressing the [SELECT] button shortly, it will be converted to audio play mode.

Press Longer



Music Play/Stop

Check the battery is charged and connect the earphone correctly.

[Play]

When pressing the [PLAY] button on the body shortly, the music/voice files will be played.

[Pause]

When pressing the [PLAY] button shortly again, it is paused. And any key is not operated, the power will be turned off automatically in 1 minute(can be adjusted by setup).

Caution

- In case the file name is displayed abnormally, move [System setting] → [Language] on the menu and change the language.
- WMA file should be a music file with Compress ratio 5Kbps ~ 192Kbps which could be made in the Windows Media Player(Ver 9.0).
- The power-off time can be set on the menu.

Finding the desired part on play(File browsing)

When pressing [◀/▶] button a long while in the middle of play, the play time will be go forward fast and the play will be operated normally when hands are off.
※ In case of learning key is set up, it will be moved to learning key setup time without before/after file playing. (Refer to page 44)

Finding the desired file on play

When pressing [▶] button shortly, the following track is played.
If [▶] button is pressed within 5 sec of playback the previous track is played.
If [▶] button is pressed after 5 sec of playback the current track plays from the beginning
※ In case of learning key is set up, it will be moved to learning key setup time without before/after file playing. (Refer to page 44)

Searching the desired part on stop

When pressing [◀/▶] button left or right on stop state, it will be moved to before/after track.

Note


- VBR(Variable Bit Rate) file : The file converting the compress ratio at any time according to sound types like sound high and low within the file.
- In case of VBR file, even if press the [◀] button in 5 seconds after play is started, it could not be moved to play the previous music.
- The MP1 format file could not be played when it is downloaded with only changing the extension to mp3.

MUSIC MODE

Section repetition start point

Press [A↔B] button shortly on the body at the start point desired to listen repeatedly in the middle of playing the music/sound files.

- [A] mark will be displayed on window.

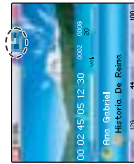

Section repetition stop point

Press [A↔B] button shortly on the body again at the stop point desired to stop the section repetition.

- [A↔B] mark will be displayed on window.
- The set up section is continued to play repeatedly.
- To release section repetition, press [A↔B] button again shortly.






Note
-Using [A↔B] button, if you move to previous/next track or fast browse, the section repetition will be released automatically.

MUSIC MODE

Using main functions on music mode

[Play mode]

1. Press [MENU] button a long while in the middle of music play/stop.
2. Move to music mode and move to play mode using [▲▼] button.
3. After moving to play mode, press [MENU] button shortly.

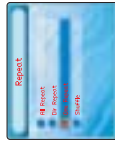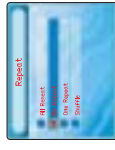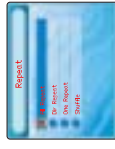

- All Repeat : In case of wanting to listen the saved all files repeatedly.
- Dir Repeat : When you want to repeatedly listen to files a folder.
- One Repeat : In case of wanting to listen only one file repeatedly.
- Shuffle : In case of wanting to listen the saved files in voluntary order.



NAVIGATION MODE

Searching and playing file

Using navigation function, the file can be searched and played easily.

1. Press [MENU] button shortly and move to navigation mode.
Or if press [MENU] button a long while and move to menu mode, it can be converted to navigation mode.

2. Choose the folder or file to play or search.

- [◀]: Move to upper folder
- [▶]: Move to sub folder
- [▲]: Move to file or folder within same directory
- [▼]: Move to file or folder within same directory

3. After choosing file to play or search and press [MENU/▶] (FF/PLAY) button.

- The selected file is played.



Note

- In case any input is not entered for 10 seconds in the navigation mode, it will be released.
- In case of a file playback from miniSD card, Enter the navigation mode using [MENU] button
⇒ Move to upper folder with [◀(REW)] button ⇒ Choose miniSD folder ⇒ Enter the folder with [▶(FF)] button ⇒ Press [MENU/▶] (FF/PLAY) button after choosing the desired file.



Caution

- Please insert or remove miniSD card when the power is off, otherwise improper errors could be occurred.



GAME MODE

When in the position other than the game mode, press [SELECT] button a long while.
Using [◀/▶] button, convert to the game mode and choose STAR FORCE.

Star Force Plus



[Game Method]

When choosing the game method on the main menu or temporary pause, game background scenario and general descriptions are displayed.



Note

- Please refer to homepage "www.cenix.co.kr" about detailed description of game.
- If you want another game, it can be downloaded at CENIX homepage free/charged.