Dell Latitude 5480

Quick Start Guide

Language: ENGLISH

Regulatory Model: P72G

Regulatory Type: P72G001

Warnings WARNING: A WARNING indicates a potential for property damage, personal injury, or death. CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem. NOTE: A NOTE indicates important information that helps you make better use of your computer.

Copyright © 2016 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned

Rev: A01

herein may be trademarks of their respective companies.

Setting up Your Computer

This section provides information about setting up your Dell computer.

Before Setting up Your Computer

When positioning your computer, ensure that you allow easy access to a power source, adequate ventilation, and a level surface to place your computer.

Restricting airflow around your computer may cause it to overheat. To prevent overheating ensure that you leave at least 10.2 cm (4 inches) at the back of the computer and a minimum of 5.1 cm (2 inches) on all other sides. You should never place your computer in an enclosed space, such as a cabinet or drawer when it is powered on.

WARNING: Do not block, push objects into, or allow dust to accumulate in the air vents. Do not store your Dell™ computer in a low-airflow environment, such as a closed briefcase, while it is powered on. Restricting the airflow can damage the computer or cause a fire. The computer turns on the fan when the computer gets hot. Fan noise is normal and does not indicate a problem with the fan or the computer.

CAUTION: Placing or stacking heavy or sharp objects on the computer may result in permanent damage to the computer.

Icons, Status Lights and Indicators

Icons are used to label all connectors and buttons on Dell computers. Check the following table for a description of those found on your computer.

\Box	Power/battery status light – Indicates the power state and battery status.
	AC adapter connector - Connects to the AC adapter to power the computer and charge the battery when the computer is not in use.
4	Battery status light – if the power status light does not provide information on battery charge status, this light provides information on charge status.
(A)	Wireless switch - used to either turn wireless communication on or offOr- used to scan the local area for available wireless signals.
22	Network connector – Connects your computer to a network or a broadband device if you are using a wired network.
	VGA connector – Connects to a monitor or projector.

•	USB 2.0 connector – Connects to USB devices, such
•	as a mouse, keyboard, printer, external drive, or MP3
	player.
	Eject the disc
\Box	Audio out/Headphone connector – Connects one pair
'9 9'	of headphones, or sends audio to a powered speaker or
0	sound system. Audio in/Microphone connector – Connects to a
lacksquare	microphone or input signal for use with audio programs.
—	Turn up the volume
-	
×	Mute the sound
)	Turn down the volume
) /II	Play or pause
>	Play the next track or chapter
I ◀◀	Play the previous track or chapter
IMCH	HDMI connector – connects to a monitor, projector, or
	television.
esATA	eSATA – connects to external devices such as hard
GSAIA	drives and media bays, this connector also supports
	standard USB devices.
EC	ExpressCard slot – Supports one 34 mm wide
	ExpressCard. The computer ships with a plastic blank
	installed in the slot.
	NOTE: Blanks protect unused slots from dust and other
	particles. Save the blank for use when no ExpressCard
	is installed in the slot; blanks from other computers may
	not fit your computer.
Connection and use of this communications equipment is permitted by the Nigerian Communications Commission	Nigeria statement
D	Display Port - connects to a monitor or projector
SD•MS/MMC	Provides a fast and convenient way to view and share
or	digital photos, music, videos, and documents stored on
SD/MMC - MS/Pro - xD	digital memory cards.

1304	1394 Firewire – used for high-speed data connections to
-37-1	external storage and digital media devices, such as still-
	and video cameras.
(*)	Line in – connects to audio devices such as receivers
	and MP3 players
€	Line out – connects to audio devices such as stereos
	and speakers
+	USB connector – connects to peripheral devices such as
4	printers, mice, and keyboards.
(C)	Wireless sync – used to synchronize connections with
	wireless input devices such as keyboards and mice (for
	select systems only).
Ð	DVI connector – used to connect monitors, projectors,
	and televisions.
9	HD activity light – lights when the hard drive is writing or
	reading data.

Removing and Replacing a Laptop Computer Battery

If your Dell laptop computer is shipped without the battery, install the battery before your proceed.

WARNING: Before you begin any of the procedures in this section, follow the safety instructions that shipped with your computer.

WARNING: Using an incompatible battery may increase the risk of fire or explosion. This computer should only use a battery purchased from Dell. Do not use batteries from other computers.

WARNING: Before removing the battery, shut down the computer, and remove external cables (including the AC adapter).

To install the battery

Slide the battery into the battery bay until it clicks into place.
 For some computers, this requires that the battery be inserted at a 45-degree angle.


To remove the battery

- 1. Turn off the computer and turn it over.
- Slide the battery release latch or latches to the unlock position until it clicks into place.
- 3. Slide the battery out.

Connecting the Power Supply

Computers With External AC Adapters (Notebooks and All-in-One Models)


Connect the AC adapter to the computer and then plug it into an electrical outlet or surge protector. Be sure to leave your AC adapter connected throughout the setup process to ensure consistent power for your operating system to complete all configurations, and to charge your battery.

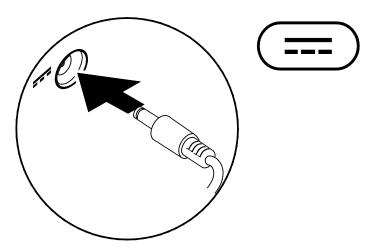

WARNING: The AC adapter works with electrical outlets worldwide. However, power connectors and power strips vary among countries. Using an incompatible cable or improperly connecting the cable to a power strip or electrical outlet may cause fire or permanent damage to your computer.

Connect the Network Cable (Optional)

To use a wired network connection, connect the network cable.

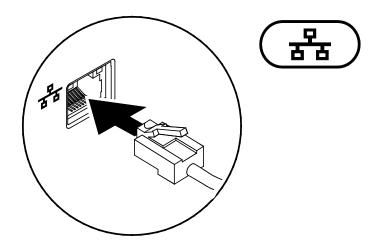

Press the Power Button on the Computer.



Specifications

This section provides information that you may need when setting up, updating drivers for, and upgrading your computer.

NOTE: Offerings may vary by region. For more information regarding the configuration of your computer, go to dell.com/support.

AC Adapter

Type 60 W

Input voltage 100-240 VAC

Input current (maximum) 1.7 A/2.50 A

Input frequency 50-60 Hz

Output current 3.34 A/4.62 A

Rated output voltage $19.5 \pm 1 \text{ VDC}$

Appendix

Information for NOM, or Official Mexican Standard (Only for Mexico)

The following information is provided in the device(s) described in this document in accordance with the requirements of the Official Mexican Standard (NOM):

Importer:

Dell México S.A. de C.V.

Paseo de la Reforma 2620 - Flat 11°

Col. Lomas Altas

11950 México, D.F.

For details, read the safety information that shipped with your computer.

India RoHS

"This product complies with RoHS requirements as prescribed by E-Waste (Management & Handling) Rules, by the Ministry of Environment & Forests, Government of India".



For additional safety best practices information, see the Regulatory Compliance Homepage at www.dell.com/regulatory_compliance.