

## **MEE audio**

*AirHooks*

Open Ear

Directional Audio Headphones

Quickstart Guide

### **AirHooks Setup Guide**

Scan the QR code or visit [meeaudio.com/AirHooksSupport](https://meeaudio.com/AirHooksSupport)

---

## **GETTING STARTED**

### **Package Contents**

AirHooks Open Ear Headphones

Quickstart Guide

USB Charging Cable

---

## **HOW TO WEAR**

[Picture] Line drawing of head wearing AirHooks

---

## **FUNCTIONALITY & CONTROLS**

POWER ON: Press and hold for 3 secs

POWER OFF: Press and hold for 5 secs

VOLUME UP: Double press

VOLUME DOWN: Triple press

PLAY/PAUSE: Single press

ANSWER/END CALL: Single press

MUTE/UNMUTE CALL: Press and hold for 2 secs

REJECT CALL: Double press

ACTIVATE SIRI/GOOGLE ASSISTANT/VOICE COMMAND: Press and hold for 2 secs. Note: upon release, you will hear two beeps confirming that voice command has been activated

RESET: While powered off, press and hold for 10 secs

---

## CHARGING

[Picture] charging cable being plugged into the AirHooks, other end being plugged into wall adapter or computer USB port

[Call out] Indicator light

Solid White = Charging

Solid Green = Fully Charged

---

## FIRST TIME USE

### Pairing

[Picture] Finger pressing power button

The AirHooks will automatically enter pairing mode when powered on for the first time

To power on, press and hold the power button for 3 seconds.

Pairing mode is indicated by the “Pairing” voice prompt and flashing alternating white and green light

[Picture] Pairing menu on iPhone showing “ MEE audio AirHooks”

Open the Bluetooth menu on your device and select “MEE audio AirHooks”

Once pairing is complete, the indicator light will stop flashing and you will hear the “Connected” voice prompt

---

## SUBSEQUENT USE

When powered on, the AirHooks will automatically reconnect to the last paired Bluetooth device and you will hear the “Connected” voice prompt

To reconnect manually, open the Bluetooth menu on your device and select “MEE audio AirHooks” from the Bluetooth device list.

---

## PAIRING ANOTHER DEVICE

To pair the AirHooks to a new Bluetooth device, first unpair the Airhooks from your original device using its Bluetooth menu or turn off Bluetooth functionality on the original device.

The AirHooks will automatically enter pairing mode if a previously paired device is not found.

Select “MEE audio AirHooks” in the Bluetooth menu of the new device you wish to pair to complete the pairing process.

---

## FACTORY RESET

A factory reset can be used to restore all features to their factory settings and delete all previous Bluetooth pairings from memory.

1. Power off the AirHooks by holding down the button for 5 seconds
2. While powered off, press and hold the button for 10 seconds until you hear two beeps, followed by the voice prompt “Disconnected”. Once the reset is complete, the AirHooks will automatically enter pairing mode.

---

## ADDITIONAL SUPPORT

View our video setup guide

Scan the QR code or enter the URL below into your web browser

**[meeaudio.com/AirHooksSupport](https://meeaudio.com/AirHooksSupport)**

**Questions? We're here to help!**

**Phone Support: 626-965-1008**  
Monday ~ Friday 9:00am to 5:00pm PST

**Email Support: [support@meeaudio.com](mailto:support@meeaudio.com)**  
All emails are responded to within 2 business days

---

---

## Warranty

MEE audio products purchased from authorized resellers are covered by a 1-year manufacturer warranty. For more information, contact your local MEE audio dealer or visit [MEEaudio.com/support](http://MEEaudio.com/support)

---

## WARNINGS

Using headphones at high volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety. Turn the volume all the way down after connecting your earphones, then gradually increase the volume until you reach a comfortable listening level. Do not use headphones while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

Keep the device and packaging out of reach of children.

This device is designed and manufactured to operate within its defined design limits. Misuse may result in electric shock or fire. Read and follow these instructions carefully.

\*If submersed in water, do not turn the device on until completely dried. Note: liquid submersion voids the warranty.

\*Danger of explosion or fire if batteries are damaged. Keep away from direct sunlight, naked flames, flammable gasses, or heat sources such as radiators or stoves

\*Battery performance will be severely decreased when stored in extreme temperatures: below -10°C/14°F or above 45°C/113°F including direct sunlight

\*Do not use around flammable gasses as fire or explosion may occur.

\*There are no user replaceable/reparable parts in the device. Disassembling it will void your warranty.

\*Only use attachments/accessories specified by the manufacturer

Changes or modifications to this unit not expressly approved by MEE audio could void the user's authority to operate the equipment.

## COMPLIANCE INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## FCC RULES

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **DISPOSAL AND RECYCLING**

Dispose of this product in accordance with all local laws and regulations. Because this product contains electronic components and a battery, it must be disposed of separately from household waste. Contact local authorities to learn about disposal and recycling options.

---

MEE audio and its logo are registered trademarks of S2E, Inc. All rights reserved.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MEE audio is under license. Other trademarks and trade names are those of their respective owners.

Siri® is a registered trademark of Apple Inc.

Google Assistant is a trademark of Google Inc.

Have a question? Email [support@meeaudio.com](mailto:support@meeaudio.com)