

MAGNAVOX

PORTABLE SPEAKER
with Color Changing Lights and
Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3780

FCC NOTICE:

FCC STATEMENT:

LOCATION OF CONTROLS:

POWER SOURCE:

NOTES:

OPERATION:

1. When charging, you can also play and listening music at the same time.
2. Your battery will last longer if you're following these simple guidelines for caring and storing:
A. Before first time use, recharge the unit approximately 5 hours until the unit is fully charged.
B. Charge and store the unit within the temperature range of 5°C-35°C (40°F-95°F).
C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until completely flat will damage battery. Battery life will be extended if you keep the battery fully charged.
D. Battery life naturally shortens slowly over time.
E. The rechargeable battery incorporated in this product is not user replaceable.

General Operation:
1. Recharge the built-in Li-ion battery as previously instructed.
2. Turn the Power On-Off/Volume Control Knob clockwise to power on the unit and set the volume level as desired. The Blue Indicator and Speaker Decorative Lights will illuminate.
3. Press the MODE Button repeatedly to switch to desired playback mode. The unit will sound a prompt with your selection (see list below).

Playback Modes:	Voice Prompt:
BT (Bluetooth)	Bluetooth ready for connection
USB	USB
TF (Micro SD) Card	Memory Card
AUX (In)	Aux in

Note:
If the AUX in plug, TF (Micro SD) Card and/or USB Device have NOT been inserted into the unit, the corresponding selection will not be available.

4. During playback, turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
5. Press and hold the M/O (Mode/Decorative Light On-Off) Button approximately 1 second to turn off the Decorative LED Lights on the Speaker; press and hold again to turn it back on.
6. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound is heard to shut off the unit.

BT Mode:
BT (Bluetooth) pairing:
For first time use or re-pairing the unit to a new BT Device, pair as follows:
1. Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the Blue Indicator on the front of unit will illuminate and blink.
2. Power on the external BT Device and enter to BT search mode. Start pairing following the on screen instructions from the external BT Device. When paired, the unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop blinking.
3. If pairing is complete you may now play music with your external BT Device.
4. During playback:
• Turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
• Press the M Button on the unit to pause, press again to resume normal playback.
• Press the H or M buttons repeatedly to skip tracks.
5. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound is heard to shut off the unit.

Notes:
• When the external BT Device searches for the unit, our model number "MMA3780" will appear on the display of external BT Device.
• If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:
1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the Blue Indicator on the front of unit will illuminate and blink.
3. Wait a few seconds until the unit is automatically paired to the external BT Device. The unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop blinking.
4. After pairing is complete you may now play music with your external BT Device.

USB:
To play the music from USB Device:
• You will hear an audible prompt say "USB".
1. In power off mode, connect the USB Device into the USB Port on the front of unit as illustrated below:



2. Power on the unit and enter to USB mode as previously instructed:
• You will hear an audible prompt say "USB".
• Music in the USB Device will be played back automatically.
3. During playback:
• Turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
• Press the M Button on the unit to pause, press again to resume normal playback.
• Press the H or M buttons repeatedly to skip tracks.
4. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound is heard to shut off the unit.

TF (Micro SD) Card:
To play the music in TF (Micro SD) Card:
1. In power off mode, insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the front of unit with contacts facing down as illustrated below:



2. Power on the unit and enter to TF (Micro SD) Card mode as previously instructed:
• You will hear an audible prompt say "Memory Card".
• Music in the card will be played back automatically.
3. During playback:
• Turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
• Press the M Button on the unit to pause, press again to resume normal playback.
• Press the H or M buttons repeatedly to skip tracks.
4. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound is heard to shut off the unit.

Notes:
• Up to 16 GB TF (Micro SD) Card/USB Device supported.
• When inserting the TF (Micro SD) Card/USB Device, make sure the direction you selected is correct. Never insert violently to avoid damaging the TF (Micro SD) Card/USB Device or the unit. If it doesn't, before replacing TF (Micro SD) Card/USB Device, make sure the unit has been powered off.
• You also need to download the desired music in MP3 format into the TF (Micro SD) Card/USB Device before insert into the unit.

AUX (In):
Listen from an external Audio Player such as MP3 Player, Discman, etc.
1. In power off mode, connect one end of the supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
2. Connect the other end of the cable to the AUX (In) Jack on the unit as illustrated below:



3. Power on the unit and enter to AUX (In) mode as previously instructed. You will hear an audible prompt say "Aux in".
4. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level).
5. During playback:
• Turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
• Press the M Button to mute the sound, press again to turn the sound back.
6. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound is heard to shut off the unit.

To sing with playing music:
To sing while music is playing:
1. Power on the unit and plays music in any mode as instructed earlier.
2. Connect the plug from the Microphone (not included) into the MIC (Microphone Input) Jack on the front of unit.
3. Turn the Power On-Off/Volume Control Knob to adjust the sound level of microphone and music.

Notes:
If feedback noise (high audio frequency noise) is hearing from the speaker, turn the Power On-Off/Volume Control Knob counterclockwise to reduce the microphone/music level or moving the Microphone away from the speaker.

TROUBLE SHOOTING GUIDE:

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Built-in battery drained The unit in power off mode	Recharge the battery as page 1-2 Turn the Power On-Off/Volume Control Knob clockwise until "Click" sound was heard to power on the unit.
No sound or sound weak	Volume of the unit was set to minimum position Volume level of paired/connected device is in low level	Increase the volume level by turn the Power On-Off/Volume Control Knob clockwise Raise the volume level of the paired/connected device
Sound distortion	Volume level too high Volume level of the paired/connected device too high	Reduce the volume level by turn the Power On-Off/Volume Control Knob counterclockwise Reduce the volume level of the paired/connected device
BT not functioning	The external BT device had NOT paired to the unit The external BT device too far from the unit	Pair the external BT device to the unit as page 2-3 Place the external BT device close to the unit.

GENERAL SPECIFICATIONS:

Power Source:	Built-in DC 3.7V, 1200mAh (4.44 Wh) rechargeable Li-ion Battery; recharge by DC 5V through the DC 5V (Micro USB) Port
Impedance of Speakers:	Loud speaker: 16Ω; 3Ω Tweeter: 3W, 4Ω
Audio Power:	7.5W (RMS)
BT Version:	5.0
BT Operation Distance:	Up to 32 Feet in open area

PACKAGE INCLUDES:

1 x Owner's Manual
1 x USB Connection Cable (For Charging only)
1 x Audio Connection Cable with 3.5 mm plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

LIMITED WARRANTY

Craig Electronics Inc. warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$10 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental; b) Damaged through misuse, negligence, or abuse; c) Modified or repaired by anyone other than an authorized Craig Electronics Inc. service center; d) Damaged because it is improperly connected to any other equipment.
Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer; b) Damage to equipment not properly connected to the product; c) Any cost incurred in shipping the product for repair; d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig Electronics Inc. be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc. and Craig Electronics Inc. is the warrantor in relation to this product. MAGNAVOX and SMART VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email: magnavox@craigelectronics.com

Printed in China MMA3780_WC_E0FK1_80US

3

4

5