



**J 6**

# **USER MANUAL**

DBTEL is a registered trademark of DBTEL Incorporated.

Copyright © 2004 DBTEL Incorporated. All rights reserved.

No part of this publication may be reproduced or distributed in any form or by any means, or stored in a database or retrieval system, without the prior written permission of the publisher.

DBTEL Incorporated reserves the right to make changes in technical and product specifications without prior notification.

Address: No.29, Tzu Chiang St, Tu-Cheng, Taipei, Taiwan.

Website: <http://www.dbtel.com.tw>

**Warning: Use only approved accessories and battery. Do not connect to any incompatible products; otherwise, it will invalidate the recognition or warranty applying to your mobile phone.**

The font type of the legend, graphics and icons in the user manual may differ from that shown on the handset.

Technical specifications and some certain features are subject to change in technology, design, software upgrade and availability.

## ***Notice***

To reduce exposure to electromagnetic radiation, use the handset properly.

SAR Radiation Limit: 1.6 W/Kg

Tested SAR Rating: 0.713 W/Kg

(CAUTION - It's required to provide at least 1.5 cm separation between the device and the user body.)

## ***Safety Information***

DBTEL handset is the first Specific Absorption Rate (SAR) compliance in Taiwan.

Compliance with International standard

SAR Radiation Limit: 1.6 W/Kg

Tested SAR Rating: 0.713 W/Kg

## ***Product Safety***

Product safety is always the first priority of DBTEL Incorporated. With the SAR Safety Certificate, we show our persistence in making customer safety the paramount importance.

## ***FCC requirements***

A declaration of conformity to the essential requirements.

Identification of the United States of America in which the equipment is intended to be used.

Identification of the public telecommunication network to which the equipment is intended to be connected.

“ Hereby, we <DBTEL Inc.>, declares that this **J6** is in compliance with the essential requirements and other relevant provisions of “FCC Part 2(Section 2

1093) & FCC OET Bulletin 65”.

# Contents

# FCC - SAR

European Union - SAR

## SAR (FCC)

This Model phone meets the FCC Requirements for exposure to radio waves.

Your Mobile Phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by the Council of the European Union. These limits are part of comprehensive guidelines and established permitted levels of RF energy for the general public. The guidelines were developed by independent scientific organizations through the evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standards for mobile phones employ a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by FCC is 1.6 W/kg.\* Tests for SAR have been conducted using normal operating conditions with the phone transmitting at the highest certified power in all tested frequency bands. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to the station antenna, the lower the power output.

Before a phone model is available for sale to the public, compliance with FCC must be shown. One of the essential requirements of this directive is the protection of the health and safety for the user and any other person. The highest SAR value for this model phone when tested for compliance against the standard is 0.713 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the FCC requirement for RF exposure.

*averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.*

*The SAR limit for mobile phones for public use is 1.6 watts/kilogram (W/kg)*

# For Your Safety

For Your Safety



## **Road safety**

Exercise proper control of the car at all times. Do not use handheld phones while driving; always use the hands free kit.



## **Special regulations**

Always switch off your mobile wherever use is prohibited, such as in hospitals, as it may cause interference with medical equipment.



## **Electronic devices**

Mobile phones may interfere with appliances such as computers, televisions and other radio equipments.



## **Other medical devices**

Mobile phones may interfere with signals of personal medical devices, such as pacemaker or hearing aid. Consult your doctor for advice before using the mobile.



## **Aircraft**

The use of mobile phones is prohibited in the air. Switch off your phone before boarding an aircraft.



## **Accessories and battery**

Use only approved accessories and batteries. Do not connect to any incompatible product. This will invalidate any warranty applying to your mobile phone and may be dangerous.



## **Disposal**

Your mobile phone and other accessories must be disposed of properly. It must not be thrown away in municipal waste! Please dispose of used mobile phones and other accessories in accordance with local regulations.



## **Potentially explosive atmospheres**

Switch off your phone when in or


near explosive areas, petrol stations and chemical plants.



## **Emergency calls**

Make sure your phone is switched on and in a service area with adequate signal strength.

When in idle mode, key in the emergency call number and press




 to be connected to the local emergency services.

Provide all the necessary information as accurately as possible. Do not hang up until you are told to do so.

## **Note**

If a PIN is set when switching on the mobile phone with SIM card inserted, you will be asked for the PIN code.

You can make an emergency call without entering the PIN code. Press

 
 followed by  or  to make emergency call.

# Your J6

Your J6

## Your phone

Your mobile phone is a radio transceiver. When the phone is turned on, it transmits and receives radio frequency (RF) signals. The side and opened view of the J6 handset are shown below:

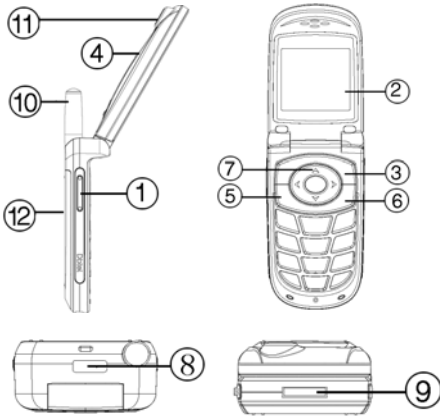

1. Side soft key
2. Main LCD display
3. Clear key / phone book access key
4. Sub LCD display
5. Call key
6. Power key/End call key
7. 4-way navigation key
8. Irda port
9. Earphone jack/ Charger port
10. Antenna
11. Built-in camera
12. Battery pack








## Specification

- Dimension (with battery pack)  
99 (L) × 43 (L) × 21 (D) mm
- Weight (with battery pack)  
90g

## Key description

The following tables provide you with a description of the keys on the keypad.

### Function key table

KEY	FUNCTIONS
	<b>Soft key</b> <ul style="list-style-type: none"> <li>Follow the prompt on the screen, press to access the following options: "Menu", "Option" or "Ok", etc.</li> <li>Press to access In-call menu during calls.</li> </ul>
	<b>Clear key/Phone Book access key</b> <ul style="list-style-type: none"> <li>Follow the prompt on the screen, press to access the following options: "Names", "Cancel", "End" or "Back", etc.</li> </ul>
	<b>4-way navigation key</b> <ul style="list-style-type: none"> <li>Press to scroll through the lists when accessing menus.</li> <li>Press to move the cursor left and right during the editing of words.</li> <li>When in idle mode, press to access the corresponding functions that have been assigned as a short cut key.</li> </ul>
	<b>Call key</b> <ul style="list-style-type: none"> <li>Press to place a call or answer an incoming call.</li> <li>When in idle mode, press to view the latest dialed, received and missed call list.</li> </ul> <p>Press  to call the selected number.</p>
	<b>Power key/End call key</b> <ul style="list-style-type: none"> <li>Press and hold to turn the phone on and off.</li> <li>During a call, press to end the active call.</li> <li>Press to return to idle mode from menu mode.</li> </ul>
	<b>Side soft key</b> <ul style="list-style-type: none"> <li>Press to adjust the volume of</li> </ul>

# Your J6

and



the earpiece or headset during a call.

- Press and hold to reject an incoming call with the handset cover opening or closing.
- Press once to switch the incoming call alert from ring tone to vibrator.
- Press and hold to activate the backlight of sub LCD display.

## Alphanumeric key table

Key	UPPER CASE (ABC)	lower case (abc)
	Space 1 ( ) & £ \$ ¥ _	
	A B C 2 A Ä Å Æ Ç	a b c 2 à á â æ ç
	D E F 3 É Ê Ë Æ	d e f 3 é ê ë Æ
	G H I 4 Γ Ì	g h i 4 γ ì
	J K L 5 Δ	j k l 5 Δ
	M N O 6 Ñ Ò Ó Ø	m n o 6 ñ ò ó ø
	P Q R S 7 β Π Θ Σ	p q r s 7 β Π Θ Σ
	T U V 8 Ü Û	t u v 8 ü ù
	W X Y Z 9 Ω Ξ Ω/ Ψ	w x y z 9 Ω Ξ Ω/ Ψ
	. 0 " ' ? ! , ; : ; i ð	
	* + - / % # = < > @ \$	
	Press to change the style of input	

## Display indicators

A number of status indicators are shown at the top of the screen to tell you of the relevant settings of your handset. Some of the icons listed below may not be available at a given time and vary depending on your local network operator.

	<b>Idle display (sub display).</b> Shown when the phone is not in use.
	<b>Idle display (main display).</b> Shown when the phone is not in use.
	<b>Battery charge indicator.</b> The more bars that are shown, the more power is available in the battery.
	<b>Signal strength.</b> The more bars shown, the better the signal strength.
	<b>Roaming.</b> Shown when registered with a system other than the original one (Inter-system Roaming).
	<b>Short message.</b> Solid when there is an unread incoming message. Flashes when the memory is full.
	<b>Missed call.</b> Shown when there is an unanswered incoming call.
	<b>Alarm.</b> Shown when the alarm is set.
	<b>Call divert.</b> Shown when the divert call is activated.
	<b>GPRS.</b> Shown when the GPRS is supported.
	<b>MMS.</b> Shown when an MMS message has been received and not yet



# Your J6

downloaded.



**MMS.** Shown when an MMS message has been received and downloaded.

## Status indicators on sub display

When the handset cover is closed, the external display will show status indicators such as time, signal strength, battery level, caller ID, new message, missed call, alarm and etc. Some of the icons listed below may not be available at a given time.

### Backlight

When pressing a key or answering an incoming call, the backlight will automatically turn on for a few seconds. You may define the backlight duration with the options in “Backlight” of “LCD” in “Settings”.

# Installation

 
Installation

## Installation of the SIM card and the battery


### Note

- Keep the SIM card and batteries out of the reach of small children.
- Before proceeding, ensure that the phone is switched off.

1. Pull the battery cover catch on the back of the phone upwards with one hand and lift the battery cover with the other hand.

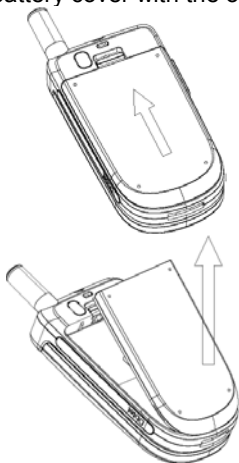

 2. Insert the SIM card into the SIM card holder, ensuring that the angled corner is on the lower left-hand side with the gold metallic contact surface facing downward.

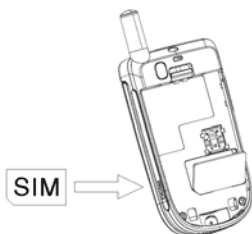

3. After inserting the SIM card, push the SIM card fasten tab to secure it in place.



4. Replace the battery with its catch pins inserted into the catch slots and push it downwards until it clicks into place.

## Removal of the SIM card and the battery

Repeat the same procedure described in the “Installation of the SIM card and the battery” to remove the SIM card and the battery.

### Note

You may access the following functions without inserting the SIM card: Alarm, Date Setting, Calculator, Game, JAVA™, Calendar and Wallpaper Setting.

# Battery Information

Battery Information

## Battery charging

### Note

Use only the approved battery and charger supplied by the phone manufacturer.

1. Plug the connector of the travel charger into the charger port at the bottom of the phone.



2. Plug the charger into the AC power supply socket and the battery indicator will start scrolling.
3. If the battery is completely flat, the battery will take a few minutes to charge after connecting it to the power supply.
4. When the battery is fully charged, the battery indicator will stop scrolling.

### Note

- You can use the phone, if switched on while it is charging.
- While charging, be sure that the charger is firmly connected to the charger port.
- When charging the battery for the first time, charge it for at least 12 hours.
- For optimum battery power performance, 5 hours of battery charging is recommended.
- Do not remove the battery while charging is in progress, otherwise it may cause damage to your phone.

## Battery specifications

Please refer to "Accessories" in "Reference Information" or the battery label.

## Notice on battery charging and discharging

1. Your phone is powered by a rechargeable battery.
2. Use only the specified charger supplied by the manufacturer for charging. Any other type of charger may be dangerous.
3. Please note that the new battery will only reach its best performance after being fully charged and discharged 2 or 3 times.
4. When the charger is not in use, disconnect it from the power supply. Do not leave the battery on continuous charge for more than one week, as overcharging will shorten the battery life. If a fully charged battery is left unused, it will slowly discharge itself over time.
5. An environment with extremely high or low temperatures will affect the battery charging. Optimum charging will be achieved in moderate temperatures.

## Low battery indicator

When the battery is low, with only a few minutes of calling time left, the handset will warn you with an alert tone.

## Use of battery

1. Never use a damaged or non-recommended charger or battery.
2. Keep the battery at a temperature between 10°C to 40°C (50°F to 104°F).
3. The effectiveness of your battery is particularly affected in temperatures below 0°C (32°F).

## Battery disposal


1. Do not dispose of the battery in a fire. This may cause a serious risk of explosion and/or release of highly toxic chemicals.
2. Ensure that the battery is disposed of or recycled properly.
3. The battery must not be disposed of in municipal waste.

# Quick & Easy

## Quick & Easy


This page provides some of the basic operations for using your phone. For more detailed information, refer to "User Manual".

### Before Use

1. Remove the battery and insert your SIM card, then re-install and charge the battery. For more details, please refer to "Installation".
2. Press and hold  to turn on your phone. Wait until the name of the network operator appears on the screen.

### Call Functions

#### **Making calls**

In idle mode, key in the area code, the phone number and press  to make a call.

#### **Answering calls**


Press  or  to answer a call.

Alternatively, simply open the phone cover to answer a call if the handset cover is closed (if "Flip Answer" is activated).



#### **Hands free conversation**



Press and hold  to use the hands free function for conversation.

#### **Terminating calls**


Press  or simply close the phone cover to end an active call.

#### **Refusing calls**

Press  or  or simply close the handset cover to refuse an incoming call.

Alternatively, press and hold  or  to reject the incoming call without opening the handset cover.

#### **Emergency calls**








In idle mode, key in the emergency call number and press  to contact the local emergency services center.

### PhoneBook Functions

#### **Add new**

Adding new numbers and names to

handset or SIM card.


1. In idle mode, key in the phone number and press .
2. Select either "Add Name", "Quick Save" or "Add To Exist Name" and press .
3. If "Quick Save" is selected, the entry will be stored in the handset without editing.
4. If "Add Name" is selected, perform the following steps:
  - (1) Key in the name and press .
  - (2) Select either "Save To SIM" or "Save To Handset" and press .
  - (3) If "Save To SIM" is selected, key in the location number to where the entry to be saved and press .
  - (4) If "Save To Handset" is selected, select the desired group and press  to continue setting the related information.
  - (5) Select "Handset", "Office" or "Home" to define the attribution of the entry.
5. If "Add To Exist Name" is selected, perform the following steps:
  - (1) Select the location of the new number and press .
  - (2) If the selected location exists a number, it will be replaced; if the selected location is blank, the new number will be saved there.

#### **Note**



If the selected entry exists in the SIM card, the old number will be replaced.

### Other Functions

#### **Clear screen**

Press and hold  to clear an entry that you are editing.

#### **Adjusting the earpiece volume**

You can adjust the earpiece volume by using  or  to increase or decrease the volume during a call.

### Backlight

#### **Backlight**

When pressing a key or answering an

 
# Quick & Easy

incoming call, the backlight will  
automatically turn on for a few seconds.


# Menu Map

Menu Map

## 1 照相机

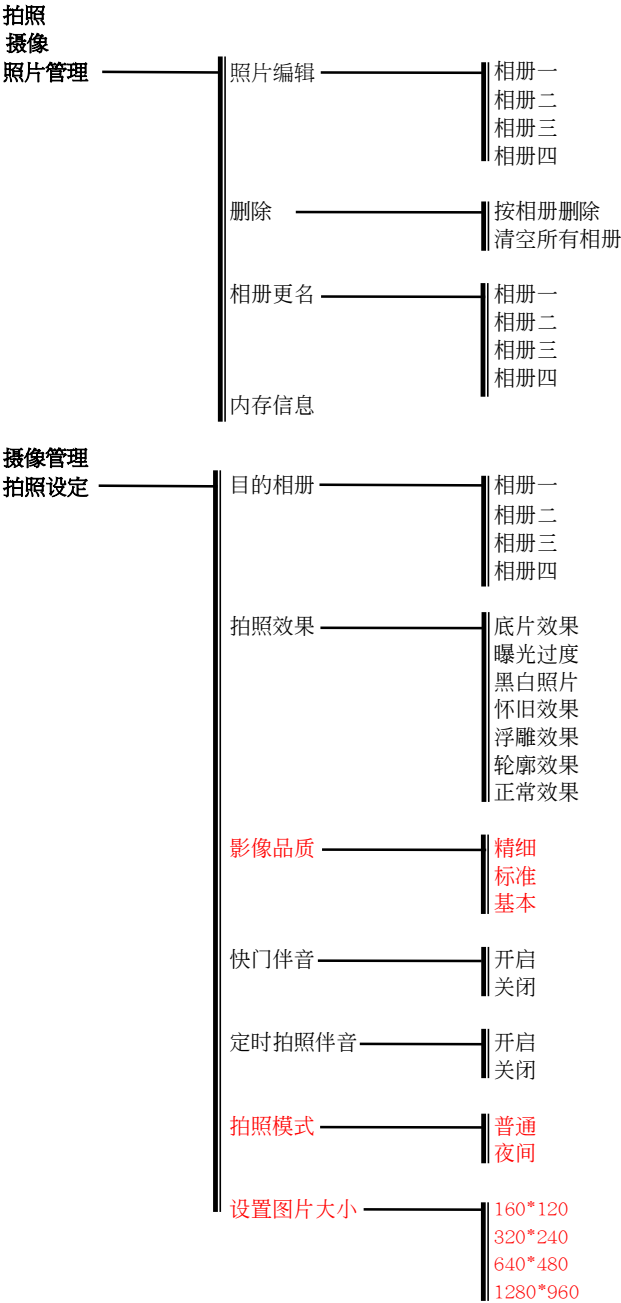


# Menu Map

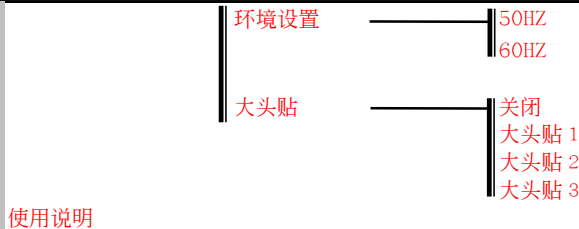 

## 2
 
## PhoneBook

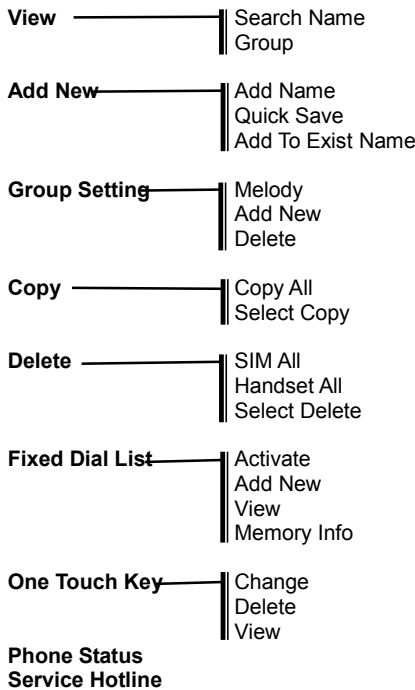

# Menu Map

## 3 Message



<b>SMS</b>	<ul style="list-style-type: none"><li>Create</li><li>Inbox</li><li>Outbox</li><li>Draftbox</li><li>Delete</li><li>Voice Mailbox</li><li>Broadcast</li><li>Phone Status</li></ul>
<b>MMS</b>	<ul style="list-style-type: none"><li>Create Message</li><li>Inbox</li><li>Outbox</li><li>Report</li><li>Delete</li></ul>
<b>Message settings</b>	<ul style="list-style-type: none"><li>SMS Settings</li><li>MMS Settings</li></ul>

## 4 Records

 


<b>Dialed <span>calls</span></b>	<ul style="list-style-type: none"><li>Call</li><li>Add Name</li><li>Quick Save</li><li>Add To Exist Name</li><li>Delete</li></ul>	
<b>Received Calls</b>	<ul style="list-style-type: none"><li>Add Name</li><li>Quick Save</li><li>Add To Exist Name</li><li>Delete</li></ul>	Call
<b>Missed Calls</b>	<ul style="list-style-type: none"><li>Call</li><li>Add Name</li><li>Quick Save</li><li>Add To Exist Name</li><li>Delete</li></ul>	
<b>Delete All</b>		
<b>Call Register</b>	<ul style="list-style-type: none"><li>Call Timer</li><li>Call Cost</li><li>Show Balance</li><li><span>Last call</span></li></ul>	




# Menu Map

## 5 Profiles

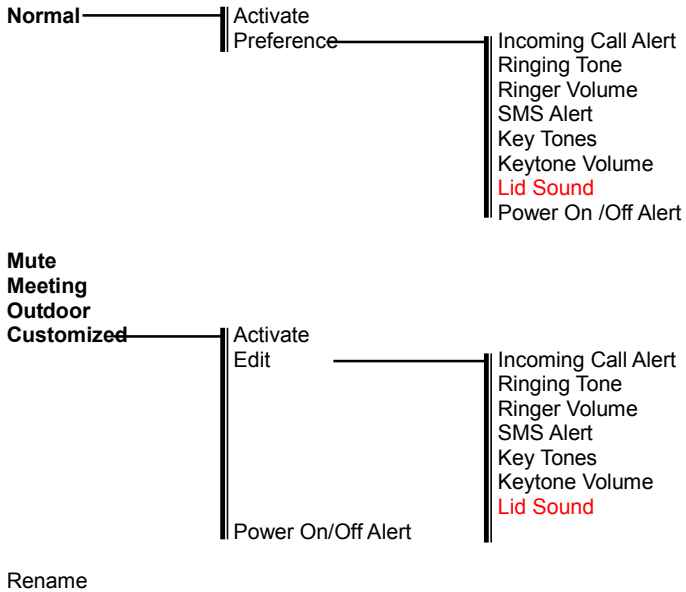

## 6 Clock

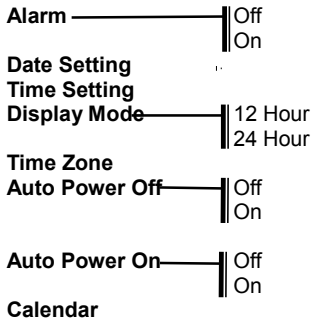 

# Menu Map

 
## 7 Settings



<b>Normal Settings</b>	Languages Input Method Earpiece Volume Headset <b>Handsfree</b> Any Key Answer Auto Answer Flip Answer <b>充电指示灯</b> Factory Settings
<b>LCD</b>	Wallpapers Background Color LCD Contrast Backlight
<b>Call Settings</b>	Own Number Sending Call Divert Call Barring Call Waiting
<b>Network Settings</b>	Preferred Select Mode
<b>Security Settings</b>	<b>PIN code</b> Change PIN2 Change Barring Code
<b>Time&amp;Cost Settings</b>	Calling Display Charge Rate Cost Limit
<b>Short Cut Key</b>	Up Key Down Key Left Key Right Key
<b>Irda Settings</b>	

# Menu Map

## 9 Extras

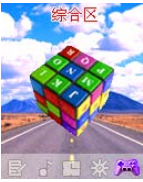


- My Collections**
  - My Pictures
  - My Melodies
  - Record
  - 来电肖像
- JAVA™**
  - JAVA™ List
  - Download Settings
  - Memory State
  - About JAVA™
- Game**
  - Tank War
  - RedCap
  - Blackjack
  - Gobang
  - Elf
  - Setting
- Notebook**
  - New Notepad
  - Select Time
  - Read All Notebook
  - Delete
  - Alarm Melody
- Calculator**

## 10 WAP



 - Homepage**
- Bookmarks**
  - i-hi 娱乐地带
  - 新浪
  - 雅虎
  - 乐在其中
  - 移动梦网
- Last Page**
- Navigation**
- WAP Settings**
  - 中国移动
  - 中国联通
  - Profile 3—Profiel 5
- History**
  - GSM Link
  - GPRS Data Flow
- Clear Cache**

## 11 STK

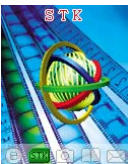


The availability depends on your network operator.

# Call Functions

## Call Functions

### Turning your phone ON and OFF

Press and hold  for 3 seconds and then release it.




#### Note

Always switch off your phone whenever it is forbidden to use it or when it may cause interference or danger.

### When PIN is requested

SIM cards are usually protected with a PIN code.

The PIN code usually comes with your SIM card provided by the network operator.




1. Key in your PIN code (note that the characters in your password are replaced with “\*”).
2. After you have entered the PIN code, press .
3. If you key in a wrong number, press  to remove the last digit. Press and hold  to clear the entire entry.
4. If the PIN code entered is incorrect, a warning message will be displayed to notify you of the remaining times for entering the PIN.

#### Note

If an incorrect PIN code is entered 3 times in succession, your phone will automatically lock-up the SIM card and a message will be displayed to inform you that the SIM card is blocked.

### Unlock the blocked SIM card

If your SIM card is locked, you will be asked to enter the PUK code to unlock your phone in order to continue using it. Perform the following steps to unlock the blocked SIM card:






1. Key in the PUK code, press .
2. Key in a new PIN code, press .
3. Key in the new PIN code again and press .

#### Note


The PUK (Personal Unblocking Key) code is used to release and change the blocked PIN code. If an incorrect PUK code is entered 10 times in succession, the SIM card will be blocked permanently. If the PUK code does not come with your SIM card or you have lost it, please check with your network service provider for the code.

# Call Functions





## Making calls

1. In idle mode, key in the area code and the phone number. Press  to delete the last digit. Press and hold  for 3 seconds to clear the whole number.
2. Press  to dial the number.
3. Press  or  to end an active call or stop dialling.


### Domestic calls

When in idle mode, key in **02154422999** and press  to make the phone call.




### International calls

1. When in idle mode, press and hold  until a “+” sign appears, then key in the country code, the area code and the phone number accordingly.
2. Press  to place the call.
3. Press  or  to end an active call or stop dialling.

#### ■ Example:

When in idle mode, key in **+886222682081** and press  to make the phone call.


### Making calls via the Phone Book

1. Press  to the PhoneBook directly.
2. Scroll to the desired entry with .
3. Press  to call the selected number.


### Redial calls missed, received and dialled

The last 10 phone calls dialed, answered or missed are stored in the phone’s memory. To redial, perform either of the following:








#### Redial fast and easy

1. When in idle mode, press  to view the last phone calls dialed, answered and missed.
2. Scroll through the list for the desired



number with .

3. Press  to dial the selected number.

#### Redial via the menu:


1. Press , scroll to the “Records” and press .
2. Select “**Dialed calls**”, “Received Calls” or “Missed Calls” and press .
3. Scroll to the desired name or phone number with .
4. Press  to place the call or press  to check the necessary information.
5. Press  again to continue the next operation with such as “Call”, “Add Name”, “Quick Save” “Add To Exist Name” and “Delete”.

### Speed dial

When in idle mode, hold down the corresponding alphanumeric keys (  to  ) to dial the preset speed dial numbers. Ensure that you have entered the settings in “One Touch Key”.

### Calling your voice mailbox

When in idle mode, dial the voice mailbox number provided by the network operator





or press and hold  to access the voice mailbox directly..

#### Note

Obtain your voice mailbox number from your network operator, and ensure that the number has been entered in the “Voice Mailbox Number” option.

# Call Functions

## Answering calls



1. Press  to answer an incoming call.  
Alternatively, simply open the phone cover to answer a call if the handset cover is closed (if “Flip Answer” is activated).
2. Press  to end the call.
3. Press  or  to refuse an incoming call.

### Note


If you have activated the “When Busy” function in Call Divert, any incoming calls will be diverted to the specified number while you are on a call. For example, you may divert incoming calls to your voice mailbox. If you have rejected an incoming call, the call will be diverted too. Please refer to “Call Divert”.

### Call waiting


If call waiting function is activated, you may answer a new incoming call while already on line.

1. If there is an incoming call while you are already on line, a tone will be heard and a notification message and the caller information will be displayed on the screen.
2. Press  to answer the incoming call.  
The active call will be automatically switched to hold.
3. Press  to reject the new call.

### Note

The call waiting function allows you to manage up to two calls simultaneously (1 active, 1 on hold). To answer the third incoming call, end one of the active calls, or establish a multiparty call for the two online calls before answering the third call. Press  to refuse the new incoming call.

### In-call menu

During a call, you can access the In-call menu by pressing . Some of the options

listed in In-call menu may not be available at a given time and vary depending on your network operator.

■ Functions that are available in normal mode

### **Mute**

Mutes the mobile phone, the party on the phone will not hear you. When this option is selected, if the phone is in call waiting mode, the party on the phone will not hear you and the call on hold will remain on hold.

### **Unmute**

Cancels the mute function.

### **Hand Free**

Enables users to talk without holding the phone.

### **Hold**

Places an active call on hold.

### **Send SMS**

Sends short messages to other party during calls. For detailed operation, refer to “Messages”.

### **Phone Book**

Enables users to check or edit the data in phone book during a call. For detailed operation, refer to “PhoneBook”.

### **Fixed Dial List**

Enables users to check or edit the data in phone book during a call. For detailed operation, refer to “PhoneBook”.

### **Call Records**

Views the call records of the calls answered, dialled and missed.

### **Send DTMF**

Activates or deactivates the DTMF tone.

### **End active call**

Disconnects the active call.

■ Functions that are available in call waiting mode

### **Mute**

For detailed operation, please refer to the function described above.

### **Unmute**

For detailed operation, please refer to the function described above.

### **Hand Free**

For detailed operation, please refer to the

# Call Functions

function described above.

## **Swap**

Switches between the active call and the call on hold when in call waiting mode.

## **Call Divert**

Transfers the call to another phone number.

## **Send SMS**

For detailed operation, please refer to the function described above.

## **Build Multiparty Call**

Starts a multiparty conference call up to 7 participants. For detailed operation, please refer to "Multiparty".

## **Phone Book**

For detailed operation, please refer to the function described above.

## **Fixed Dial List**

For detailed operation, please refer to the function described above.

## **Call Records**

For detailed operation, please refer to the function described above.

## **Send DTMF**

For detailed operation, please refer to the function described above.

## **End active call**

For detailed operation, please refer to the function described above.

## **End All Calls**

Terminates all calls, both on line and on hold.

## **End Held Call**

Ends the call on hold.

- Functions that are available in multiparty conference call mode. When the multiparty conference call is activated, the phone gives you access to some specific functions. The availability depends on your network operator.

## **Mute**

For detailed operation, please refer to the function described above.

## **Unmute**

For detailed operation, please refer to the function described above.

## **Hand Free**

For detailed operation, please refer to the function described above.

## **Hold Multiparty Calls**

Places the current multiparty conference calls on hold.

## **Send SMS**

For detailed operation, please refer to the function described above.

## **Split MPTY**

Chooses a participant from the multiparty conference call for a private conversation.

## **Phone Book**

For detailed operation, please refer to the function described above.

## **Fixed Dial List**

For detailed operation, please refer to the function described above.

## **Call Records**

For detailed operation, please refer to the function described above.

## **Send DTMF**

For detailed operation, please refer to the function described above.

## **End component**

Terminates the connection with one of the participants from the multiparty conference call.

## **End Active MPTY**

Terminates the connection with the active conference call.

## **Add To Multiparty Call**

Add a new incoming call to the multiparty calls on already on line.

## **End Held MPTY**

Ends the multiparty conference calls on hold.

## **Multiparty**

This option allows a conference call for up to 7 parties. Please check with your network operator for the availability of multiparty conference calls.

Before activating a multiparty conference call, make sure that you have established two on-line calls (1 active, 1 on hold).








1. Make sure that you have established two on-line calls (1 active, 1 on hold), before activating a multiparty conference call.
2. If the existing calling parties agree to participate in the conference call, press



to enter the In-call menu and select "Build Multiparty Calls" to start a



# Call Functions

multiparty conference call.

3. To add a new participant to the multiparty conference call, place the existing conference call on hold, establish a new call connection with the new incoming call and repeat step 2.
4. To release a participant from the conference call, press  to enter the In-call menu. Select "End component" and press . Press  again to release the selected participant.
5. To have a private conversation with one of the participants, press  to enter the In-call menu. Select "Split MPTY" and press . Press  again to start your private conversation with the selected participant. The existing multiparty conference call will then be automatically placed on hold.
6. To end an active conference call, press .


## Other operations

### Adjusting the earpiece volume




 



You can adjust the earpiece volume using the side soft keys  or  to increase or decrease the volume during a call.

### Input text

The J6 model provides a number of input methods for you to organize your phone book or write messages.

By pressing , users may switch between the different input methods.

#### **Note**

- When in idle mode, use only numbers, the international dialling prefix code "+" (press and hold ) , the pause code "W" and "P" (press and hold , once for "W", twice for "P") and characters that are allowed for dialling. Other letters or symbols are not allowed.
- To input a specific letter or symbol, after selecting the desired input style, press the corresponding key repeatedly until the required letter or symbol appears.  
For example: to input A, press  once; to input B, press  twice, and so on.
- To key in the same character in sequence, wait for a second between each key press, or press  to move the cursor to the right and input the character.
- If you make a mistake, press  to delete the character to the left of the cursor; press and hold  to delete all characters on the screen.

### Using Predictive Text input

Predictive Text input is a much easier way to input a text message in English. For each letter to be entered, you only need to press the corresponding alphanumeric key once. In Predictive Text input, the



# Call Functions

alphanumeric keys enter words with a single key press instead of multiple key presses. When the first (or second) element is entered, the display shows the most probable word in the suggestion area. The word you select from the suggestion area will move to the text area.


1. Switch to Predictive Text input by


pressing  repeatedly until the desired input style appears.


2. For example, to input “Telephone”, key in the following:



3. Press  vertically to select the

desired word and press .

4. Press  repeatedly to input a punctuation mark that you need.

5. Press  when you have completed writing the message.

## Using Capitalization input








Capitalization input facilities user of the message composing. The first letter of each sentence is shown in capital letter automatically. For example: to input “go home”, press the associated keys accordingly, the sentence “Go home” will be shown on the LCD display.

# Using The Menu



## Using The Menu

This handset offers a range of functions that allow you to customize the phone to your needs. These functions are arranged in menus and submenus.

### Accessing the menu function

1. In idle mode, press  to go to the menu facility.
2. Scroll to the desired menu with .
3. Press  to enter the desired submenu.
4. Scroll to the desired submenu with .
5. Press  to access the submenu.
6. Press  up or down to access the next menu of the selected submenu.
7. Press  to confirm setting.




### Returning from menu function

1. Press  to return to the previous menu level.
2. Press  to exit the menu and return to idle mode without changing the menu settings.

## Camera




This function is the application of built-in digital camera. It allows you to take pictures (both still and moving images) and make certain settings on the pictures. You can also send images in a multimedia message, as an e-mail attachment or via infrared connection. The camera produces JPEG images.

In idle mode, proceed as follows:






1. Press  to enter main menu.
2. Scroll to "Camera" with .
3. Press  to access the submenu.

### Take picture

This function allows you to view the image that you want to take and save.

1. Press  to preview the photo subject.
2. Point the viewfinder toward the photo subject and press  or  to take the picture.



### Note

- When previewing, press  left or right to adjust the brightness, press  up or down to adjust the focus, press  to switch between "Take picture" (still image) and "Photograph" (moving image). You can still preview the image on sub LCD display even if the handset cover is closed.
  - Hold the handset when capturing image.
3. Press  or  to save the picture in "Photo album".

### Caution

Many jurisdictions have laws and regulations about taking pictures in public or private areas and regarding the processing and further use of such pictures. Check with your network service provider for the restrictions that apply to you.



To view the captured images and adjust certain other settings or check the information on a selected image, perform the following steps.

1. Press  to enter the "Take picture" menu.
2. Press  to access the following menu.

### Photo album

This option allows you to organize the pictures that are stored in the handset memory or SD card.

#### ■ Handset

1. Press  to access the option.
2. Scroll to the desired image and press  to access the following options.

### View

View the captured photo. You may set the picture as wallpaper, add the picture to a name or phone number, send the picture to other handset that offer compatible MMS message features.

### Note

- You may transmit the pictures in the handset to a PC using DBTEL Sync Tool application via a USB cable. For detailed operation, please refer to "Data Synchronization Tool user manual".
- The "DBTEL Sync Tool" application is required to transmit the data. To download the Sync Tool application, please visit the DBTEL website.

### Image information

You may check the format, size and volume of the picture.

### Rename

Change the file name of the picture.

### Delete

Delete the selected picture.

### Delete all



Delete all the pictures at the same time.

#### ■ SD Card

You may view, check the information, rename, and delete the pictures saved in the SD Card. For details of this option, please refer to "Handset".

### Photo size

You can set the pixel format of the images.

1. Press  to access the option.
2. Scroll to the desired photo size and press  to set the image size.

■ 640\*480



Capture image with 640\*480 pixel.

■ 160\*120

Capture image with 160\*120 pixel.

## Photo quality

You can choose the quality level of the images by preference.



1. Press  to access the option.
2. Scroll to the desired option and press  to set the photo quality.

## Note

The higher the photo quality, the more memory the image consumes.

## Photo effect



This option allows you to set the effect of the images.

1. Press  to access the option.
2. Scroll to the desired option and press  to set the photo effect.

## Self timer

This option allows you to take pictures electronically controlled with a few seconds delay.



## Note

If activated, press  or , the self-timer starts beeping and beeps at a higher frequency for the final few seconds as a warning signal.



■ Disabled

Deactivate the function.



■ 10 Seconds

Takes photo with 10 seconds delay after you have pressed  or .

■ 15 Seconds

Takes photo with 15 seconds delay after you have pressed  or .

■ 30 Seconds

Takes photo with 30 seconds delay after you have pressed  or .

## Night mode

Enable the night mode when capturing an

image at night.

## Profiles

Set the frequency of the flashlight to 60Hz or 50Hz.

## Storage media

Select the storage location for saving the pictures.

## Interval shooting

Set the time for interval shooting when capturing image.

## Photo Frame

Set the frame for the taken photo. There are 3 embedded frames for you to choose from.

## Settings

This option allows you to make certain settings of the built-in camera.

■ Photo flash

Enable the camera flash when capturing images.

■ Capture sound

When activated, a shutter sound will be heard when capturing.

■ Auto Off




When activated, the preview in idle mode will be cancelled automatically if no action is taken for an extended period.



## Photo album

This function allows you to view, check the information, rename, and delete the pictures you have taken. For detailed operation, please refer to "Photo album" of "Take picture".



## Photograph

This function allows you to capture moving images and make some certain settings on recording.

1. Press  to access the viewfinder mode. You may preview the scenery on the main LCD display.
2. Press  to start recording. While recording, a flashing red light will appear on the upper-left corner of the LCD display.
3. Press  to pause (press again to go on).

- Press  or  to stop recording and save the video clip in "Photograph album".

To adjust some certain settings before capturing, perform the following steps:

- Press  to enter the "Photograph" menu.
- Press  to access the following menu.

## Photo effect

This option allows you to set the effect of the video clips.

## Night mode

Enable the night mode when recording at night.

## Profiles

Set the frequency of the flashlight to 60Hz or 50Hz.



## Storage media

Select the storage location for saving the video clip.

## Photograph album

This option allows you to organize moving images that are stored in the handset memory or SD card.

### ■ Handset

- Press  to access the option.
- Scroll to the desired image and press  to access the following options.

## Play

Play the recorded video clip.

## Delete

Delete the video clip.

## Rename

Change the file name of the video clip.

## Note

Use only the standard character to name the file. A short file name is recommended.

## Content

You may check the relevant information of the video clip such as format, size, volume, play time and so on.

## Operation guide

Guide you through the operation of

capturing a moving image with brief help text.

## Delete all










Delete all the video clips saved in the handset.

## ■ SD Card

You may view, check the information, rename, and delete the moving images saved in the SD Card. For details of this option, please refer to "Handset".

## Record




This option allows you to record an audio clip.

- When in idle mode, press  to enter the menu.
- Scroll to "Camera" with  and press .
- Scroll to "Record" and press .
- Press  or  to start recording. You may select the saving location before recording by pressing .
- Press  to pause (press again to go on).
- Press  to stop recording and save the audio file in "Photograph album".

## Phone Book

The "PhoneBook" is used to save phone numbers and names in the handset or SIM card. You can save up to 500 entries in the handset. The SIM card capacity may vary depending on the network service provider.



In idle mode, proceed as follows:

1. Press  to enter main menu.
2. Scroll to "PhoneBook" with .
3. Press  to access the menu.

## View


You may view the names and phone numbers that have been stored in the handset or the SIM card.

## Search Name



1. Press  to access the menu.
2. Enter the name you want to search or key in the letter that corresponds to the first letter of the name require in the phone book and press .

## Note


Icons for easy identification will be shown on the screen when the entry is stored in the handset memory. For example, icons that indicate the place where the data is stored, the type what the number is (handset, office, home or etc.) and which group the data has been assigned to (family, friend, workmate or VIP).

3. Scroll to the desired name or phone number and press  to dial the number.

## Group

1. Scroll to the desired group and press .
2. Select the desired phone number or name and press  to make a phone call.










## Note

You may access the submenus by pressing  to continue with the further operation if necessary.



## Add New

Add a new entry to the handset or the SIM

card.

1. Press  to access the menu.
2. Key in the phone number and press .
3. Select "Add Name", "Quick Save", or "Add To Exist Name" and press .
4. If "Add Name" is selected, perform the following steps:
  - (1) Key in the name and press .
  - (2) Select either "Save To SIM" or "Save To Handset" and press .
  - (3) If "Save To SIM" is selected, key in the location number to where the entry to be saved and press .
  - (4) If "Save To Handset" is selected, select the desired group and press .
  - (5) Select either "Handset", "Office" or "Home" to define the attribution of the entry.
5. If "Quick Save" is selected, the entry will be stored in the handset without editing.
6. If "Add To Exist Name" is selected, perform the following steps:
  - (1) Select the desired name or phone number and press .
  - (2) Scroll to the field that is allowed for a new number and press .
  - (3) If the selected field has existed a phone number, you will be asked whether or not to overwrite the old number.

## Note



- To key in the country code, press and hold  until the international dialling code "+" is displayed then key in the appropriate country code. The steps for dialling from abroad are the same as above.
- To key in an extension number, key in the pause code "W" or "P" (press and hold , once for "W", twice for "P") before entering the extension number. This feature requires the private branch exchange with the DTMF function.

## Group Setting

You may organize your phone book data into groups and set a specific ring tone for each group.



### **Melody**

Set the specific melody for the groups in order to identify the caller efficiently.

1. Scroll to the desired group and press .
2. Select the favourite melody and press .



### **Add New**

Add a new group for well organizing.

1. Press  to access the menu.
2. Key in the name of the new group and press  to save the setting.

### **Delete**

Delete a group to free up more memory.

1. Press  to access the menu.
2. Scroll to the desired entry and press  to delete the entry.

### **Note**


Only the non-embedded group can be deleted.

## Copy


This option allows you to copy the entry/entries from the SIM card to the handset or vice versa. You will have the choice of keeping or erasing the original entry/entries while copying.

### **Copy All**

#### ■ SIM To Handset





Press  to copy all the entries in the SIM card to the handset.


#### ■ Handset To SIM

Press  to copy all the entries in the handset to the SIM card.

### **Select Copy**

#### ■ SIM To Handset

1. Scroll to the desired entry and press   to select the entry that to be copied.
2. Press  or  again to deselect the selected entry.

3. Press  to confirm the selecting and begin to copy the entry/entries you selected.



#### ■ Handset To SIM

Perform the procedure described above to continue with the copying operation.



## Delete

Delete one entry or several entries at a time.







### **SIM All**

1. Press  to access the option.
2. Press  to confirm the deletion.

### **Handset All**

1. Press  to access the option.
2. Press  to confirm the deletion.

### **Select Delete**




1. Press  to access the option.
2. Press  or  to select the entry that to be deleted.
3. Press  or  again to deselect the selected entry.
4. Press  to confirm the deleting.

## Fixed Dial List

This fixed dial list is to restrict the use of the SIM card. If activated, it is only possible to make calls with phone numbers that have been set in the list and the emergency call. The PIN2 code is required to adjust this setting.

## One Touch Key

You may set the phone number for up to 8 entries for speed dialing. When in idle mode, press and hold the corresponding alphanumeric key, you can call the designated number.

1. Scroll to a specific key number and press .
2. Scroll to the desired name in the phone book and press .
3. Scroll to the speed dialing entry and press  if you want to continue the

next operation with “Change”, “Delete” or “View”.

## Phone Status

You can check the memory capacity of the handset and the SIM card. For example: 50/500 means that there are a total of 500 entries; 50 entries have been saved with memory still available for 450 more memories. The phone status of the SIM card may vary depending upon the memory capacity of the SIM card.

## Service Hotline




If you have any questions about our products, please dial our toll-free hotline: 800-820-8118. For mobile phone users or users in areas that do not offer 800 services, please call 021-64852866. We will serve you wholeheartedly.



## Message

This menu allows you to send, read and write text messages, listen to the voice message and access relevant features that are provided by your network service provider.

In idle mode, proceed as follows:

1. Press  to enter main menu.
2. Scroll to "Message" with .
3. Press  to access the menu.

## SMS


This option allows you to read, send and write the text messages.


### Create

You may write messages up to 160 characters in English.

After you have written your message, press



Key in his/her phone number manually or press  to access the "Phone Book" to select the required name or number.


Press  to access the following options.


■ Send  
Send the written message to one person.

■ Save  
Save the written message.

■ Send And Save  
Send the written message and store it in the memory.

■ Send To Many  
Send the written message to more than one person.


Select the required persons/numbers by pressing .



After you have finished selecting, press  to send the message.

### Note

Before sending any message, you have to save the message center number in the "Service Center Number". Please check with your network service provider for the number.

## Inbox

This option stores the message sent to you and you may read it by accessing to this option. If a new message has been received, the  icon will be shown at the top of the screen and notification tones will be heard.

1. Scroll to the message which to be read.
2. Press  to read the message.
3. After reading press  to access the following options.

### ■ Delete

Delete the message.

### ■ Reply

Reply to the message by writing text.

### ■ Call Back

Return call to the sender.

### ■ Get Number

Extract the phone number that appeared in the message or phone number of the sender and save it to the memory.

### ■ Send SMS

Forward the received message to other.




### ■ Send To Many

Forward the received message to more than one person at a time.

### ■ Move


Remove the selected message to the "Archive" for well organizing.

## Note

- The message will be stored in the SIM card (SIM card capacity depends on your network service provider).
- If a new message has been received, the  icon will be shown at the top of the screen and notification tones will be heard.
- If the  icon flashes, it means that there is insufficient memory for new messages. Select "Delete" in "SMS" to delete old messages to free up memory for new messages.
- If there is no  icon shown on the screen, it means all received messages have been read and there is sufficient memory for new messages.

## Outbox

This option stores the messages you sent to others if you have selected the "Send &

Save" option for the written message. You may access the following options by pressing  after reading.

■ Send

Forward the received message to other.

■ Delete

Delete the message.


■ Send To Many

Forward the received message to more than one person at a time.

■ Move

Remove the selected message to the "Archive" for well organizing.

## Draftbox

This option stores the messages that you have written but as yet unsent to others. You may access the available submenu by pressing  after reading:

■ Send

Forward the received message to other.

■ Delete

Delete the message.


■ Send To Many

Forward the received message to more than one person at a time.

■ Move

Remove the selected message to the "Archive" for well organizing.

## Archive

This option allows you to store the message you have already read and saved in the handset. You may access the available submenu by pressing  after reading:

■ Delete

Delete the message.

■ Reply

Reply to the message by writing text.

■ Call Back

Return call to the sender.

■ Get Number

Extract the phone number that appeared in the message or phone number of the sender and save it to the memory.

■ Send SMS

Forward the received message to other.

■ Send To Many

Forward the received message to more than one person at a time.

## Delete

Delete the message in mailbox.

■ Delete Inbox

Delete all the messages in "Inbox".

■ Delete Outbox

Delete all the messages in "Outbox".

■ Delete Draftbox

Delete all the messages in "Draftbox".

■ Delete Archive


Delete all the messages in "Archive".

■ Select Delete

Delete the selected message.

1. Scroll to the desired message and press



2. Press  to delete the selected message.

■ Delete All

Delete all the messages in all the message boxes.

## Voice Mailbox

This option allows you to enter the voice mailbox number and listen to the voice messages that you have received.

## Note

Please contact your network operator for the voice mailbox number before using this service. The voice mailbox number will remain unchanged until you modify it.

## Broadcast

This option allows you to receive information broadcasted by your network service provider (such as weather forecast or road traffic information). Please contact your network operator for information on the topics available and its corresponding index.

## Note

Please check with your network operator for the broadcasting topics and its corresponding index.

## Phone Status

You can check the memory capacity for text messages of the handset and the SIM card. For example: 2/200 means that there are a total of 200 entries; 2 entries have been saved with memory still available for 198 more memories. The phone status of the SIM card may vary depending on the memory capacity of the SIM card, the

capacity of the handset is 200 entries.


## MMS

This function allows you to send, read and edit multimedia messages including text, pictures and sounds.

### **Note**

- The availability of MMS message depends on your network operator.
- Only devices that support MMS message can receive and display MMS message.

### **Create Message**

You may write messages up to 512 characters in English manually or press  to add in text message from datacenter.

#### ■ Add Text From **Datacenter**

Add written text up to 512 characters in English that has been saved in the Datacenter.

#### ■ Add Image

Add the embedded icon/image into the MMS message.


#### ■ Add Audio

Add a sound file into the MMS message.

#### ■ New Audio

Record a voice memo and add it to the slide currently being edited.

Follow the prompt on the screen to record a voice memo.

Press  to save the voice memo and attach it into the slide currently being edited.


#### ■ New Slide

Insert a new slide. This will appear only when you have composed a slide.

#### ■ Preview Slide

Preview the slide you have composed.


#### ■ **Another Slide**

Edit other slides for an MMS message that is more than 1 slide. You may go through the previous or next slide for editing by pressing .

#### ■ **Slide duration**

Set the interval between two slides for playing the slides. The range of interval you may set is 5-50 seconds.

#### ■ Send


After you have finished editing the MMS message, press  to continue the next

operation with the following options.

1. **Send:** Input the destination addresses from phonebook or input manually up to 5 entries and send the MMS message.
2. **Preview:** Preview the MMS message.
3. **Subject:** Input the title of the MMS message.
4. **Save:** Save the MMS message to the "MMS Draft" in "Outbox".

### **Inbox**

This option stores the MMS messages sent

to you. Press  to enter the following submenu:

#### ■ Retrieve

Fetch your MMS message at the local MMS center if auto download function is not activated.

### **Note**

The MMS message will be retrieved automatically after a fixed interval if you have activated the "Auto Download" function in "MMS Settings".

You may access the following submenu after downloading the MMS message:

1. **Play:** View the received MMS message right away.
2. **Delete Message:** Delete the received MMS message from handset.
3. **Forward:** Send the received MMS message to other phones that offer compatible multimedia message features. You may edit it before sending.
4. **Reply:** Reply to the sender via MMS, SMS or by calling without retrieving the MMS message.
5. **Save Content:** Save the image, audio clip, text or URL that was attached in the received MMS message in the handset into the corresponding folder respectively.
6. **Save Sender Address:** Save the phone number of the sender in handset or SIM card.

#### ■ Reject



Reject the MMS message sent to you.

#### ■ Reply

Reply to the sender via MMS, SMS or by calling without retrieving the MMS

message.


## Note

If an new MMS message has been received and not yet been downloaded,  will appear on the top of LCD display with a notification tone. If the MMS has already been downloaded,  will be appeared at the top of LCD display.


## Outbox

This option stores the MMS message that has failed to be sent, saved for sending later and sent successfully.

### ■ MMS Pending

Stores the MMS message that has failed to be sent. Press  to continue with the next operation.

### ■ MMS Draft

Stores the MMS message that has been saved for sending later. Press  to continue with the next operation.

### ■ MMS Sent

Stores the MMS message that is sent successfully.

## Report

The delivery report of the MMS message sent when the recipient has downloaded it.

## Delete

Delete the MMS message.

### ■ Delete Inbox

Delete all the MMS messages in "Inbox".

### ■ Delete Outbox

Delete all the MMS messages in "Outbox".

### ■ Delete Report

Delete all the reports.

### ■ Delete All

Delete all the MMS messages in all the message boxes and reports.

## Message settings

### SMS Settings

You may set the following options for your SMS.

### ■ Service Center Number

This option stores the required service centre number for sending the text messages.

## Note

Please check with your network operator for the number.

### ■ Validity Period

Messages sent to you will not be saved if you do not switch on your phone within a certain time limit. This option allows you to set the period the service center keeps the unreachable message for you.

## Note

This function depends on your network operator.

### ■ Status Report

When activated, the service center will send you the status report of the sent messages.

## Note

- The availability depends on your network operator
- The function will not be available when you send the message to more than one person.

## MMS Settings

This option allows you to make some certain settings to receive a MMS message. You have to set the WAP data transmission settings first before using MMS.

## Note

The availability of this function depends on your network operator.

### ■ Msg Priority

Set the priority level of the MMS message. You may choose from "High", "Normal" or "Low".

### ■ Sender Visibility

This option allows you to set whether or not the receivers can read your number or identity.

### ■ Delivery Report

Set whether or not the service center sends you a report when the MMS message is delivered.

### ■ Read Reply Request

Set whether or not the send a read reply request to the receiver when the MMS message is received.

### ■ Auto Download

Set whether or not the handset downloads the MMS message automatically. If not, the MMS message will be stored in MMS center.

## ■ Reject Ads

Set whether or not to bar any advertisements.

## ■ Append Signature

Set whether or not to add your signature into the MMS message. If so, choose “Yes” and start editing your signature.

## ■ Validity Period

Set whether or not to set the period the service center keeps the unreachable MMS message for you. If so, choose “Yes” and set the period.

## ■ Network Settings

Input the IP address and MMS URL of a network operator in order to receive an MMS message.




## ■ Save After Send

Set whether or not to save the MMS message automatically after you sent it.

## Records



This option provides a record of call duration, call cost, recent calls and relevant settings. Some of the functions require the PIN 2 code in order to access them. For information on the PIN 2 code, please refer to “Security Settings”.

In idle mode, proceed as follows:

1. Press  to enter main menu.
2. Scroll to “Records” with .
3. Press  to access the menu.

### Dialed calls

The last 10 outgoing phone calls, including the successful or unsuccessful calls that you have made, are stored in the phone’s memory.

1. Press  to dial the selected number.
2. Press  to access the submenu, which includes “Call”, “Add Name”, “Quick Save”, “Add To Exist Name” and “Delete”.

### **Note**

If a number is dialled several times, only the last dialled entry will be shown on the list.

### Received Calls

The last 10 phone calls that you have answered are stored in the phone’s memory. Perform the procedures described above if necessary.

### Missed Calls

The last 10 phone calls that you have not answered are stored in the phone’s memory. Perform the procedures described above if necessary.

### Delete All


Clear the call records from the handset memory.

### Call Register

This option will provide the information on the talk times, call charges and the balance

of your call limitation.

### **Call Timer**

Provide the information on the total talk time of the outgoing and incoming calls and the accumulated talk times. You may reset the timer by pressing .

### **Call Cost**

Display the call cost of the accumulated calls. You may reset the call cost to restart a call charge. The PIN2 code is required to set the charge rate.

### **Show Balance**

Display the balance of your call cost (the PIN2 code is required to access this function).

### **Note**

An emergency call is still possible even if the balance reaches to zero.




### **Last call**

Show you the talk time of the last call.

## Profiles

This menu allows you to customize your handset settings for different occasions.

In idle mode, proceed as follows:

1. Press  to enter main menu.
2. Scroll to "Profiles" with .
3. Press  to access the menu.

You may have different settings for a particular environment that is provided as below:

### Normal

Default setting of the handset.

### Mute

The alert tone of the incoming call is set to not ring and vibrate for any incoming call.

### Meeting

The alert tone of the incoming call is set to vibrator alert.

### Outdoor

The ring tone of the handset is set to maximum level.

### Customized

You may customize your own profile for a special occasion and change the name of the profile.

### **Activate**

Perform the following to activate the profile settings:

1. Scroll to the desired profile and press



2. Scroll to "Activate" and press .

### **Preference**

You may change the setting of the parameters by preference for each profile by accessing the following options:

#### ■ Incoming Call Alert

Set the incoming alert type for your handset.


1. Scroll to the desired profile and press



2. Scroll to "Preference" and press .

3. Scroll to "Incoming Call Alert" and press



4. Select one of the desired alert types and press .

#### ■ Ringing Tone

Set the ring tone for the incoming calls.

#### ■ Ring Volume

Set the volume level of the ring tone.

#### ■ SMS Alert

Set the tone for notifying you of the incoming message.

#### ■ Key Tones

Set whether or not the keypad tone makes sound when pressed.

#### ■ Keypad Volume

Set the volume level at key pressed.

#### ■ Lid Sound

Set whether or not to activate the alert when opening or closing the handset cover.




#### ■ Power On/Off Alert

Set whether or not to activate or deactivate the music when switching the handset on or off.

## Clock


This menu shows the options for setting the alarm, date and time, display mode (display the date and time on the LCD display), time zone, auto power off and calendar.

In idle mode, proceed as follows:


1. Press  to enter main menu.
2. Scroll to "Clock" with .
3. Press  to access the menu.


### Alarm

Sets the handset to ring at a specific time with the desired ring tone.

1. Scroll to "On" and press .
2. Scroll to either of the following to continue setting.

### **Time Setting**

1. Key in the time for alarm using the HH:MM format, where HH is for hour and MM is for minute.
2. Press .
3. Scroll to either "Once", "Everyday" or

"Workday" and press .

### **Alarm Ringer**

Sets the ring tone for alarm.

### **Alarm Volume**


Sets the volume level of the alarm.

### **Note**

When the alarm goes off, press any key to turn off the alarm. If no action is taken, the alarm will turn into snooze mode and ring every 3 minutes for 3 times.

### Date Setting

Sets the appropriate date for the phone using the following format YYYY/MM/DD; where YYYY is for year, MM is for month and DD is for day.

1. Key in the appropriate year, month and day to replace the factory set date.
2. Press  to save the setting.

### Time Setting

Perform the procedures described above for time setting.

### Display Mode




You may set the time format for the LCD display.

### Time Zone

You may check the current local times all over the world.




### Auto Power Off

You may set the phone to switch off automatically at a specific time.

1. Scroll to "On" and press .
2. Key in the time for shutting down using the HH:MM format, where HH is for hour and MM is for minute.
3. Press .
4. Scroll to either "Once" or "Everyday" and press .



### Auto Power On

You may set the phone to switch on automatically at a specific time.

1. Scroll to "On" and press .
2. Key in the time for switching on using the HH:MM format, where HH is for hour and MM is for minute.
3. Press .
4. Scroll to either "Once" or "Everyday" and press .

### Calendar

This option can be used to look up a date.




1. Key in the year and month you would like to check or simply press .
2. Browse with  to check the date of the previous month or next month.



## Settings

This menu shows the options for setting the functions related to the phone itself, for example normal settings that includes language, input method and etc, call settings, network settings, security settings that includes PIN code and change PIN2 code and time and cost settings.

In idle mode, proceed as follows:

1. Press  to enter main menu.
2. Scroll to "Settings" with .
3. Press  to access the menu.

### Normal Settings

You may set the following items by preference.

#### **Languages**

Set the language for display message. Languages vary upon the language package used.

#### **Input Method**

A number of input styles are provided.

#### **Earpiece Volume**

Adjusts the earpiece volume during calls.



#### **Headset**

Adjusts the headset volume during calls.

#### **Handsfree**

Adjusts the speaker volume during hands free conversation.

#### **Any Key Answer**


If activated, press any key except  and  to answer the incoming call.

#### **Auto Answer**

If activated (with headset connected), any incoming call will be answered automatically when the phone rings or vibrates for a few seconds.

#### **Flip Answer**

If activated, you can simply open the handset cover to answer an incoming call. If deactivated, you need to open the

handset cover and press  to answer the call.

#### **充电指示灯**

本功能可设定开启或关闭七彩充电指示灯。

### **Factory Settings**

Restores some of the functions set in the phone to their original configuration. The data stored in the phone book will not be affected. For detailed information on factory default settings, refer to the table below.

Item s	Setting Options	Default Settings	Reference s
1	<b>Display Mode</b>	24 Hour	Refer to "Clock"
	<b>Languages</b>	Varies by language package used	Refer to "Normal Settings"
2	<b>Input Method</b>	Varies by language package used	
3	<b>Earpiece Volume</b>	Level 6	
4	<b>LCD Contrast</b>	Level 4	Refer to "LCD"

### LCD

This function shows you the options for setting the wallpapers, background colors, contrast, backlight duration and LED flashing indicator.

### **Wallpapers**

You may change the embedded background pictures for the internal and external display by preference.

#### ■ Main Wallpaper Setting

You may like to set the background pictures of the internal LCD display change everyday or remain unchanged until you modify it.

#### ■ Sub Wallpaper Setting

You may like to set the background pictures of the external LCD display change everyday or remain unchanged until you modify it.

### **Note**

DBTEL, through Euro srl, its sole agent in Italy, has sponsored the Italian National

Football team.

#### ■ Foreground display

You may like to display wallpaper in the foreground of the main LCD display when the handset is in idle mode.

#### 1. Text Display

Displays only the date and time when the phone is idle.

#### 2. Simulate Clock

Displays not only the date and time but also a simulate clock in foreground when the phone is idle.

#### 3. Calendar

Displays not only the date and time but also a calendar in foreground when the phone is idle.

#### 4. No Display

Neither the date and time nor foreground wallpaper is displayed when the phone is idle.

### Background Color

You may change the background color by preference.

### LCD Contrast

You may adjust the contrast of the main display and sub display at 5 levels.

### Backlight

You may set the duration time of the backlight and keypad illumination.

#### ■ Power Save

Set the backlight illuminates in power saving mode. If activated, the display will become dark when the time is reached the selected backlight duration.

#### ■ Backlight Duration

Set the duration of the illumination by preference.

### Call Settings

You may set the functions related to the network service. The availability of the functions depends on your network service provider.

#### Note

For further information, please check with your network operator.

### Own Number Sending

Chooses whether or not your phone number is sent to the called party. The availability depends on your network operator.

#### Call Divert

This option is set to divert incoming calls to the voice mailbox (only for voice messages) or another phone number, so as not to miss any important calls. There are four divert modes available which you can activate and cancel. You can check its current status at any time.

If activated, follow the prompt on the screen and key in the phone number to which you wish the incoming calls to be diverted.

#### ■ Unconditional

Systematically divert all incoming calls.

#### ■ When Busy

Divert all incoming calls when the line is busy (when you are on a call) or you have rejected the call.

#### Note

Call waiting must be disabled to use this divert function.

#### ■ No Reply

Divert all incoming calls if there is no reply (i.e. missed call).

#### ■ No Response

Divert all incoming calls when your phone is turned off or out of coverage.

#### ■ Cancel All

Cancel all the divert functions.

### Call Barring

This option provides SIM card restrictions when making or answering calls. A network access code is required to set all the barring functions (you must contact your network service provider).

#### ■ All Outgoing Calls

All outgoing calls are barred; only incoming calls can be accepted.

#### ■ Outgoing Int'l

All outgoing international calls are barred. Incoming calls can still be accepted.

#### ■ Outgoing Int'l. Except Home

When abroad, you can only call the numbers within that country or call to home

country (i.e., the country where the phone is registered).

■ All Incoming Calls

All incoming calls are barred.

■ All Incoming When Roaming

No incoming calls will be permitted when registered with a system other than the original one.

■ Cancel All

Cancel all the call restriction functions.

**Call Waiting**

This option alerts you of an incoming call while on line. If activated, a tone and a notification message and the caller number will notify you of a new incoming call when you are on the phone. The availability depends on your network service provider.

*Network Settings*


This is a network-related option. It allows you to register with, search, or select the available network and some of the relevant settings.

**Preferred**

Allows you to browse, delete or edit the current network list, you can add the available network also.

■ Show List

View the name list of the available network.

Scroll to the desired network, press  and continue the further operation with "Register", "Delete" or "Move".

■ Delete Available Network

Delete the available network from the name list.

■ Add Available Network

Add the available network to the name list.

■ Add Known Network

Add the known and existed network to the name list.

**Select Mode**

Register with the network using the following modes:

■ Auto Search

It is the default mode for network registering. It usually searches for the network operators using the priority network list in "Preferred".

■ Network Register

Automatically register with the network

system the SIM card originally registered.

■ Manual Search

Select the network operator that has a roaming agreement with your network operator in your region/country. Once the "Manual Search" mode is selected, the register mode will not change until you modify it or replace a new SIM card.

**Note**

If you are not familiar with the network operator, it is strongly recommended that you select "Auto Search" mode.

*Security Settings*

A number of security features are provided to protect against any unauthorized use of your SIM card and certain other features. You are able to change the PIN and PIN2 code or decide whether a PIN is requested while the phone is switched on.

**PIN code (4 to 8 digits)**

The PIN (Personal Identification Number) protects the SIM card against unauthorized use. Normally, the PIN code comes with your SIM card.

■ PIN On

If activated, you will be asked for the PIN every time you switch on the handset.

**Note**


Please consult your service provider for the PIN code when you are using it for the first time.

■ PIN Off


Deactivate the PIN request when switching on the handset.

■ Chang PIN

Perform the following steps to change the password.

1. Key in the old code, press .

2. Key in a new code, press .

3. Key in the new code again and press .

**Note**

If an incorrect PIN code is entered 3 times in succession, the SIM card will be blocked automatically. For detailed information, please refer to "Unlock the blocked SIM card" of "Call Functions".

**Change PIN2 (4 to 8 digits)**

You may change the PIN2 code in this

option. The PIN2 code is provided together with the SIM card and is only used when accessing some specific options (such as "Charge Rate"). It will only be available if SIM cards and the network service provider propose this facility. Perform the procedures described in "PIN code" to change the PIN2 code.

## Note

- If an incorrect PIN2 code is entered 3 times in succession, the SIM card will be blocked automatically. Perform the procedure described in "Unlock the blocked SIM card" of "Call Functions", but key in the PUK2 code instead of the PUK code.
- The PUK2 code is used to release and change the blocked PIN2 code. If an incorrect PUK code is entered 10 times in succession, the SIM card will be blocked permanently. If the PUK2 code does not come with your SIM card or you have lost it, please check with your network service provider for the code.

## Change Barring Code

Change the network access code (password) for call barring. Check with your network service provider for the password.

## Time&Cost Settings

You may set the handset to provide some certain calling information.

### ■ Calling Display:

This option provides information on call durations, call cost or both, during calls.

### ■ Charge Rate

Your handset will display the call cost according to the number of units, the charge rate per unit, the currency, and the exchange rate. Please check with your network service provider for the current rate and currency. The PIN2 code is required for setting.



### ■ Cost Limit

You may set the limit of your call cost. The PIN2 code is required for setting.


## Short Cut Key

You may set the quick access function to the four-ways navigation key for effective

operation.

1. Scroll to the desired navigation key and press .
2. Scroll to the required option and press .
3. Return to idle mode, press the key assigned, the handset will lead you to the required menu directly.

## Irda Settings

This option allows you to transfer the data to your PC via infrared light. Press  to activate the Irda function.

## Note

Don't point at eyes with infrared ray or interfere other infrared equipment. The device is the 1st class laser production.

1. Ensure that the two infrared devices are put port to port without barrier between them. The interval between the two infrared devices is limited to one meter.
2. The receiver must startup the infrared port.
3. The Irda will be closed if no other infrared devices are detected in 2 minutes.
4. The IR connection will be closed if you haven't begun transmitting data in 2 minutes after IR port is opened.
5. The IrDA will be closed if the handset is moved away from the detectable area in 2 minutes when the IrDA link has begun.
6. The IrDA will be closed if the handset is moved away from the detectable area in 16 seconds during data transmitting.




## Note

- PC download cable or other types of series cable will be invalid when the Irda connection is activated.

## Extras

This option provides additional options to enable the user to personalize the phone. It may be used to simplify the handset and includes a calculator and even offers the possibility of downloading the favorite melody or wallpaper and playing games.

In idle mode, proceed as follows:


1. Press  to enter main menu.
2. Scroll to "Extras" with .
3. Press  to access the menu.

### My Collections

You may download any favorite picture or melody from the web or record audio by yourself.


### **My Pictures**

This menu stores the pictures transmitted via Irda or downloaded via WAP. Scroll to

the desired picture and press  to make the necessary setting with "Set Wallpaper", "Delete", "send mms" or "Send via Infrared".


### **My Melodies**

This menu stores the melody transmitted via Irda or downloaded via WAP. Scroll to

the desired melody and press  to make the necessary setting with "Rename", "Delete", "send mms" or "Send via Infrared".

### **Record**

#### ■ All Records

This menu stores the all audio files that has been recorded and received. Press  to listen or delete the voice record.

#### ■ New Record

This menu allows you to record a new voice memo also, if necessary. Follow the prompt on the screen to perform the recording procedures.


### **来电肖像**





进入“来电肖像”可以看到所有的在菜单照相机 / 照片管理 / 照片编辑 / 相册一~相册四 / 照片应用 / 来电肖像 目录下设定的来电时显示肖像的所有来电肖像。

### JAVA™

This option offers you some interesting 3D games.

### **JAVA™ List**

Offers some enjoyable games for you. Scroll to the desired game and press  to carry on further operation.

1. **Run:** Scroll to "Run" and press  to start the game.
2. **Suites Info:** Scroll to "Suites Info" and press  to view the information about the game.
3. **Remove:** Scroll to "Remove" and press  to delete any downloaded JAVA™ game except the built-in JAVA™ games.
4. **<Exit>:** Scroll to "<Exit>" and press  to exit the menu.

### **Download Settings**

Set the parameters for downloading the JAVA™ games. Please check with your network service provider for the parameter.

#### ■ APN Setting

Enter the access point of the website in order to download the JAVA™ game.

#### ■ User Name

Enter the user name for accessing the web in order to download the JAVA™ game.

#### ■ Password

Enter the password for accessing the web in order to download the JAVA™ game.

#### ■ Http Agent

By activating this option, you may set the IP address and IP port for downloading purpose.

### **Note**

- Only for GPRS downloading.
- Any incoming call is not permitted while downloading.

### **Memory State**

Show you the available memory space for downloading.

### **About JAVA™**







Show you the version number of the JAVA™.

### Games





 


This menu offers you some interesting

games.



### ■ Tank War

1. Press  to enter the submenu.
2. Select “Start Game” to start the game, select “Game Level” to choose the level of the game, select “Help” to read the brief help text of the game.
3. Press , ,  and  to go up, down, left and right. Press  to fire.

### ■ RedCap

1. Press  to enter the submenu.
2. Select “Start Game” to start the game, select “Game Level” to choose the level of the game, select “Help” to read the brief help text of the game.
3. Press , ,  and  to go up, down, left and right. Press  to confirm the placement and press  to undo the previous step.


 
 
 

 

### ■ Blackjack

1. Press  to enter the submenu.
2. Select “Start Game” to start the game, select “Game Level” to choose the decks number of the card, select “Help” to read the brief help text of the game.
3. Chip in wager with .

### Note

In this game, you will play against the handset (i.e. Dealer). The party who first gains all the chips wins the game.




 
### ■ Gobang

1. Press  to enter the submenu.
2. Select “Start Game” to start the game, select “Game Level” to choose the level of the game, select “Help” to read the brief help text of the game.
3. Press , ,  and  to move the chessman up, down, left and right. Press  to place the chessman and press  to undo the previous step.

### ■ Elf

1. Press  to enter the submenu.

2. Select “Start Game” to start the game, select “Game Level” to choose the level of the game, select “Help” to read the guide of the game, and select “Highest Score” to check the highest score of the game.

3. Press , ,  and  to move the elf up, down, left and right.

### ■ Setting

For more enjoyment, you can activate the “Music Effect” and “Volume Setting” function.

### Notebook

This option allows you to manage your schedule to facility your mobile life. You may view the information of a scheduled event, add new event, edit or delete the event after selecting the specific date.

### ■ New Notepad

Add a new event.

### ■ Select Time

Select the remind time of the event.

### ■ Read All Notebook

Check all the events in the notebook.

### ■ Delete

Delete the notebook you selected or all the notebooks.

### ■ Alarm Melody

Select the ring tone of reminding.

### Calculator

You may make simple calculations. Due to the limitation of accuracy, rounding-off errors may occur during division. Follow the prompt on the screen to make calculation.




WAP

WAP (Wireless Application Protocol) is a global wireless protocol specification for mobile wireless terminals. WAP enables you to subscribe to certain Internet services, for example: banking services, news, weather forecast, flight schedules etc.

### Note

You need to subscribe to the data transmission and WAP browsing services via your service provider in order to access WAP services.

In idle mode, proceed as follows:






1. Press  to enter main menu.
2. Scroll to "WAP" with .
3. Press  to access the menu.

### Basic steps for activation and accessing WAP service

The following section introduces the basic steps for accessing and browsing the web.

#### Activation of WAP service



Before using the WAP service, you need to activate the WAP connection profile first.

1. Scroll to "WAP Settings" with  and press .
2. Select the desired profile with  and press .
3. Scroll to the "Activate" and press .





#### Accessing the WAP service


You may connect to the Web with either of the following way.

##### ■ Accessing via homepage

1. Scroll to "WAP" menu and press .
2. Scroll to "Homepage" and press .

##### ■ Accessing via bookmark







1. Scroll to "WAP" menu and press .
2. Scroll to "Bookmarks" and press .
3. Scroll to the desired bookmark  and press .

4. Scroll to "Go" and press  to start connection.


### Note

If the selected bookmark is not available as desired, select another profile and perform the procedures described in "Activation of WAP service" again.

#### ■ Accessing via navigation

1. Scroll to "WAP" menu and press .
2. Scroll to "Navigation" and press  .
3. Enter the URL of the Website (Use  or  to key in the special character).
4. Press  to link to the web page.

### Note

- You may skip over the prefix of the URL (i.e. http://).
- Press and hold  to return to the idle mode while browsing the WAP website.
- Please check with your network operator for the WAP settings.



The following section lists the available options in this menu

#### Homepage

This option has connectivity with WAP. It connects to the home page that you have set.

#### Bookmarks

This option allows you to store up to 5 WAP URLs as bookmarks in your handset memory.

1. Press  to access the menu (check with your network operator for the availability).
2. Scroll to the desired bookmark and press  to continue the operation with "Go", "Edit Bookmark" and "Edit URL".


#### Last Page

This takes you directly to the WAP URL that you connected to last time.

Navigation

You may key in the URL that you want to connect to.

WAP Settings

This option allows you to activate the connection profile you want. Scroll to the required profile and press  to enter the submenu.

**Activate**

Activate the connection to the WAP service.

**Name Edit**

Change the name of the connection profile.

**Setting Homepage**

Enter a URL and set it as a homepage for WAP connecting.

**Security Setting**

Avoid the WAP browsing from an unsafe content.

**Image Download**

Set the display option to image download or text only while browsing on the web.

**Bearer Select**

Set the mean of the data transmission.


**Parameter Setting**

Set the parameters for WAP browsing for both the GSM and GPRS such as IP address, IP port, data call type, phone number, user name and password.

History

You may check the time of the GSM linkage and the throughput of the GPRS data flow.

**GSM Link**

Press  to access the following options.

## ■ Last Record

Check the visiting time of the last connection.


## ■ Total Record

Check the total time of the connection.

## ■ Clear Record

Clear the timer record of the connection time.

**GPRS Data Flow**

Press  to access the following options.

## ■ Last Record

Check the data flow of the last connection.

## ■ Total Record

Check the total data flow of the connection.

## ■ Clear Record

Clear the record of the data flow of the GPRS.

Clear Cache

You may clear the buffer memory of the web page that you have visited before.



STK

This menu is shown only if your SIM card provides additional services. The name and contents of this menu depend on the services available.

For availability, rates and information on using the SIM card services, check with your network service provider.

# Maintenance

## Maintenance

Your mobile telephone is a radio transceiver, built with precision electronic parts, and it needs to be used with care. Observing the following recommendations may prolong the phone's life.

Please note the following points:

- Keep the phone and its accessories out of the reach of small children.
- Keep it dry. Avoid contact with liquids. Humidity and liquids contain minerals that corrode electronic circuits.
- Do not expose the phone to an extremely cold environment, as this will cause a build-up of moisture within the phone.
- Do not expose the phone to extreme heat as high temperatures will shorten the life of electronic parts, damage the battery, and cause some plastic material parts to become deformed or to melt.
- Do not attempt to disassemble the phone. Non-expert handling of the phone may damage it.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. The phone may be cleaned with a soft cloth slightly dampened in warm water.
- Do not paint or otherwise coat, the phone.
- Do not use accessories, such as batteries designed for other mobile phones, or any other unapproved accessories. This will damage the phone, violate the radio equipment regulations and invalidate your warranty.

# Access Codes

## Access codes

There are several codes required to access the handset and SIM card. The access codes allow you to avoid unauthorized use of your phone and SIM card.

### PIN code

The PIN (Personal Identification Number) protects the card against unauthorized use. This code is supplied with the SIM card. If the PIN is activated, the code is requested when the phone is switched on.

If you enter an incorrect PIN code three times in succession, the SIM card is blocked; key in the PUK code.

### PIN2 code

This code is supplied with the SIM cards and is required to access certain functions, such as accumulated costs. If your SIM card supports those particular functions, you can activate them in your handset. If you enter an incorrect PIN2 code three times in succession, the PIN2 code is blocked and you will be asked for the PUK2 code.

### PUK code

The PUK (Personal Unblocking Key) code is used to unblock and change the locked PIN code. This code may be supplied with the SIM card. If this is not the case, check with your network service provider for the code. If you enter an incorrect PUK code ten times in succession, your SIM card will no longer be valid.

Contact your network service provider to replace the SIM card.

### PUK2 code

The PUK2 code is used to unblock and change the locked PIN2 code. This code is supplied with the SIM card. If you enter an incorrect PUK code ten times in succession, the functions that require PIN2 code in order to be activated will no longer be valid. Contact your network service provider to replace the SIM card.

# Reference Information

Reference Information

## EFR encoding decoder function

---

The J6 (GSM/DCS) is equipped with the latest encoding decoder and audio frequency technology, to achieve superior audio quality.

At present, there are 3 types of encoding decoder compatible with GSM/DCS:

- ≡ Enhance full rate (EFR)
- ≡ Full rate (FR)
- ≡ Half rate (HR)

The J6 (GSM/DCS) mobile phone supports the normally-used EFR and FR encoding decoder.

All GSM and DCS cellular networks and phones support FR encoding decoder.

If supported by the network operator, the network operator will automatically select the relevant encoding decoder, which will be either EFR or FR.

The J6 model is programmed to automatically select the EFR where this is supported by the network, allowing you to enjoy the superior audio quality provided by EFR. Otherwise the phone will select FR.

At present, only some networks support both the FR and EFR encoding decoder.

If the network operator cannot support EFR, the J6 (GSM/DCS) mobile phone will automatically adopt the FR encoding decoder.

## Accessories

---

The accessories for the J6 model (GSM/DCS) mobile phone include battery, charger etc. Please refer to "Battery charging" for the battery charging method.

### Battery

At present, the rechargeable battery approved by the manufacturer is the lithium battery (LI-ION).

The talk time and standby time for a new battery is about 2–3 hours and 50-150 hours respectively. When the battery is fully charged, you can have a continuous talk time for a few hours and standby time for a few days. The capacity of a battery may vary depending on the environment, networks, SIM card or options available.

### Charger

This is a lightweight charger compatible with a multi-voltage supply. Do not connect it to an incompatible product. It charges the phone battery rapidly. To start charging, plug the charger into a power supply and insert the other end into the charge port at the bottom of your phone.

The required charging time is approximately 5 hours. The battery charging status can be checked on the mobile phone display.

# Problem Solving

Problem Solving

## Problem Solving

---

### **1. When you switch on your phone, “Insert SIM card” is displayed**

- a. Check that the SIM card is correctly installed.
- b. Ensure that the gold chip is not damaged or scratched.
- c. Check the SIM card contact. If they are dirty, clean them with an antistatic cloth.

### **2. When your phone shows “PIN”, “PIN2”, “PUK”, “PUK2”, and “Barring code”.**

- a. Please contact your network service provider for the numbers.
- b. Enter the wrong PIN code three times in succession, the SIM card will be blocked.
- c. For the PUK code, check with your network service provider.

### **3. No connection to network.**

- a. Check the signal strength meter in the display. If the signal is weak, move to an open space or move closer to a window and try again.
- b. Contact your network service provider for further details.

### **4. Your correspondent cannot hear you.**

- a. Check that the network signal strength is normal and try again.
- b. Check that the microphone is unmuted.
- c. Holding the phone closer to your mouth.

### **5. The battery won’t charge**

- a. Check that the charger is properly connected.
- b. The message “Charging” will only be shown when you charge the battery with the handset switched off.

### **6. You can’t make calls.**

- a. Check the signal strength meter in the display. If the signal is weak, move to an open space or, if you are in a

building, move closer to a window.

- b. The network is busy, please try again later.
- c. Check whether has the call charge limit been reached.

### **7. The battery drains faster than normal.**

- a. Check whether are you in an area of variable coverage. This uses extra battery power.
- b. Ensure that the using environment is not in extreme temperatures. At extreme hot or cold temperatures, battery performance is significantly reduced.

### **8. The LI-ION battery was being charged overnight.**

It is strongly recommended that not to charge the battery for more than 24 hours. It may decline the battery performance or cause damage to the battery.

### **9. The headset starts beeping.**

The signal is weak or out of coverage.

# Index

Index

Issue July, 2004