

# CARRYING YOUR PET BUG

Take your PET BUG with you wherever you go - inside the LOG controller!



First, attach the CHARGER to the back of the CONTROLLER as shown.



Then, lift up the Green leaf and place your PET BUG inside the controller.

## FIRST AID

Only two legs of your Bug's legs move. If one of these legs becomes jammed, turn on a spare leg to assist fix it. Put off the jammed leg as shown. Then connect the new leg. Your Pet Bug should be good as new!

NOTE: Only try to repair the two legs at shown spots. Do not try to remove the other two legs.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ct51640us01

Manufactured and distributed by  
WowWee, a subsidiary of iMabro.  
The WowWee logo is a trademark of  
iMabro.  
©2003 WowWee. ©2003 iMabro.  
All Rights Reserved.  
® Devices Reg. U.S. Pat. & TM Office.

WowWee (Asia Office)  
Unit 301A-C, 82 Greenville Rd.,  
T.S.T. East, Hong Kong  
WowWee (North America Office)  
4480 Corte de las Uvas, Suite 320,  
T.M.B. Quebec, H4N 2R1, Canada  
Consumer Hotline: (514) 344-1250  
<http://www.wowwee.com>



We recommend that you retain our  
address for future reference.  
Product and colors may vary.

Packaging printed in China.  
MADE IN CHINA




## INSTRUCTION MANUAL

AGES 4  
ITEM NO: 5340

**WARNING:**  
CHOKING HAZARD - Small Parts.  
Not for children under 3 years.

### Contents:

- 1 controller
- 1 charger
- 2 Spare Legs
- 1 BUG

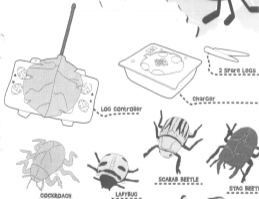

### CONGRATULATIONS!

YOU are now the Owner of a very special Pet BUG! Your BUG "comes to life" and responds to commands from your LOG SWAPER controller. Simply press the buttons and your BUG will react! First, give it to your BUG by charging it. Then you and your BUG will be ready to play!

## GETTING STARTED

- CAUTION:**
- To avoid all small batteries, the batteries used with this toy should be kept away from small children who will put things in their mouths. If they are swallowed, promptly see a doctor and, in the U.S., have the doctor phone (202) 633-0333 collect. Or, in Canada, have the doctor call your provincial Poison Control Centre.
  - Make sure the batteries are inserted correctly and always follow the toy and battery manufacturers' instructions.
  - Do not mix old batteries with new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.

**IMPORTANT: BATTERY INFORMATION**  
Please retain this information for future reference. Batteries should be replaced by an adult.

- CAUTION:**
- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
  - Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
  - Remove one battery or several batteries from the product.
  - Remove batteries if product is not to be played with for a long time.
  - Do not short-circuit the supply terminals.
  - Do not short-circuit the supply terminals, or be affected by, or be affected by, electrical interference, move it away from other electrical equipment. Reset (switching) off and back on again, or changing and recharging batteries if necessary.
  - RECHARGEABLE BATTERY: Do not mix these with any other types of battery. Always remove from the product before recharging.
  - Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERY.
  - As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.

- To Install Batteries:**
- Charge and Controller
  - Remove the battery compartment cover using a screwdriver (not included) as shown.
  - Insert batteries (not included) as shown in diagram, making sure to match the polarity direction.
  - Replace the battery cover.

## Install Batteries

Charge and Controller

- Remove the Battery Compartment cover using a small screwdriver (not included) as shown.
- Insert batteries (not included) as shown in diagram, making sure to match the polarity direction.
- Replace the Battery Cover.

## BATTERY REQUIREMENTS:

**LOG CONTROLLER: 2 x 'AA'**  
**CHARGER: 3 x 'AAA'**

## LOG CONTROLLER BOTTOM VIEW

## CHARGER BOTTOM VIEW

## GIVING LIFE

Charging your Pet Bug  
Your Pet Bug "comes to life" in seconds! Simply charge your Pet Bug for about 45 seconds and it will be ready to play. Your Pet Bug may get tired after about 5 minutes of play. Just charge your Pet Bug again for another 45 seconds and it will be full of life!



Align the connection points  
between the charger and the bug  
as shown.



**CHARGE  
LIGHT:**

Turn charger ON. Then hold down  
your bug and the red charging light should  
glow. Charge for about 45 seconds or until  
the red light turns off.

NOTE: If your bug is not responding properly, charge it again for about 45 seconds.  
If the "AA" batteries make the charger become weak or dead, charging time may vary.

## USING THE LOG CONTROLLER

Use the log controller and your Pet Bug will react to your commands!  
Before you play, always remember to turn on your log controller  
(see Battery Warning).



PRESS BOTH BUTTONS TO  
GO FORWARD.



PRESS BOTH BUTTONS TO  
GO BACKWARDS.



PRESS TOP RIGHT BUTTON OR  
BOTTOM LEFT BUTTON TO TURN  
CLOCKWISE.



PRESS TOP LEFT BUTTON OR  
BOTTOM RIGHT BUTTON TO TURN  
COUNTERCLOCKWISE.

NOTE: - A-B2 BATTLES BUG shown in these illustrations may vary.

- You can make your Pet Bug spin on the spot by pressing two buttons at the same time (i.e. TOP RIGHT AND BOTTOM LEFT button, or TOP LEFT AND BOTTOM RIGHT button).
- When your bug crawls forward or backwards, it normally moves in a zig-zagging line (not straight).

**FCC Warning Statement for DoC Label Requirement:**

**Tested To Comply With FCC Standards**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**FCC NOTE:**

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.